 





TENUS
R50

Instrukcja montażu
Assembly instructions



No	Stc	L	W	T
1	1	1900	370	16
2	1	468	60	16
3	1	468	370	16
4	2	468	370	16
5	1	1900	370	16
6	1	502	400	22
7	2	1860	248	3
8	3	468	370	16
9	1	1840	120	16

	A		B		C		D		E		H		Y
16		16		16		16		16		1		1	

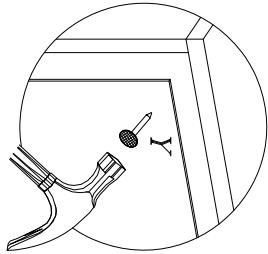

UWAGA! WAŻNE!
KOŁKI WBIJAĆ JAK NA PONIŻSZYM
RYS. W KRAJEDŹ ELEMENTU!
ATTENTION:

