


BREGI ŁÓŻKO-KORP.


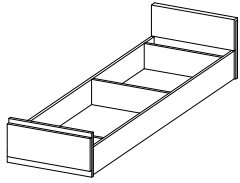


Instrukcja montażu
Assembly instructions





CAUTION
STICKING PINS HOW TO DRAWING
ACHTUNG
DAS FESTHALTEN PINS
HOW TO ZEICHNUNG
UWAGA! WAŻNE!
KOLKI WBIJAĆ JAK NA
PONIŻSZYM RYSUNKU
W KRAWĘDZ ELEMENTU
11.0 mm
UWAGA!
ATTENTION!

V	O	8.0X35	D	A	B	U	H	M6.0X30	W	G	X	C	V1	H1
12	20	12	12	1	6	2	4	4	12	6	3	4		

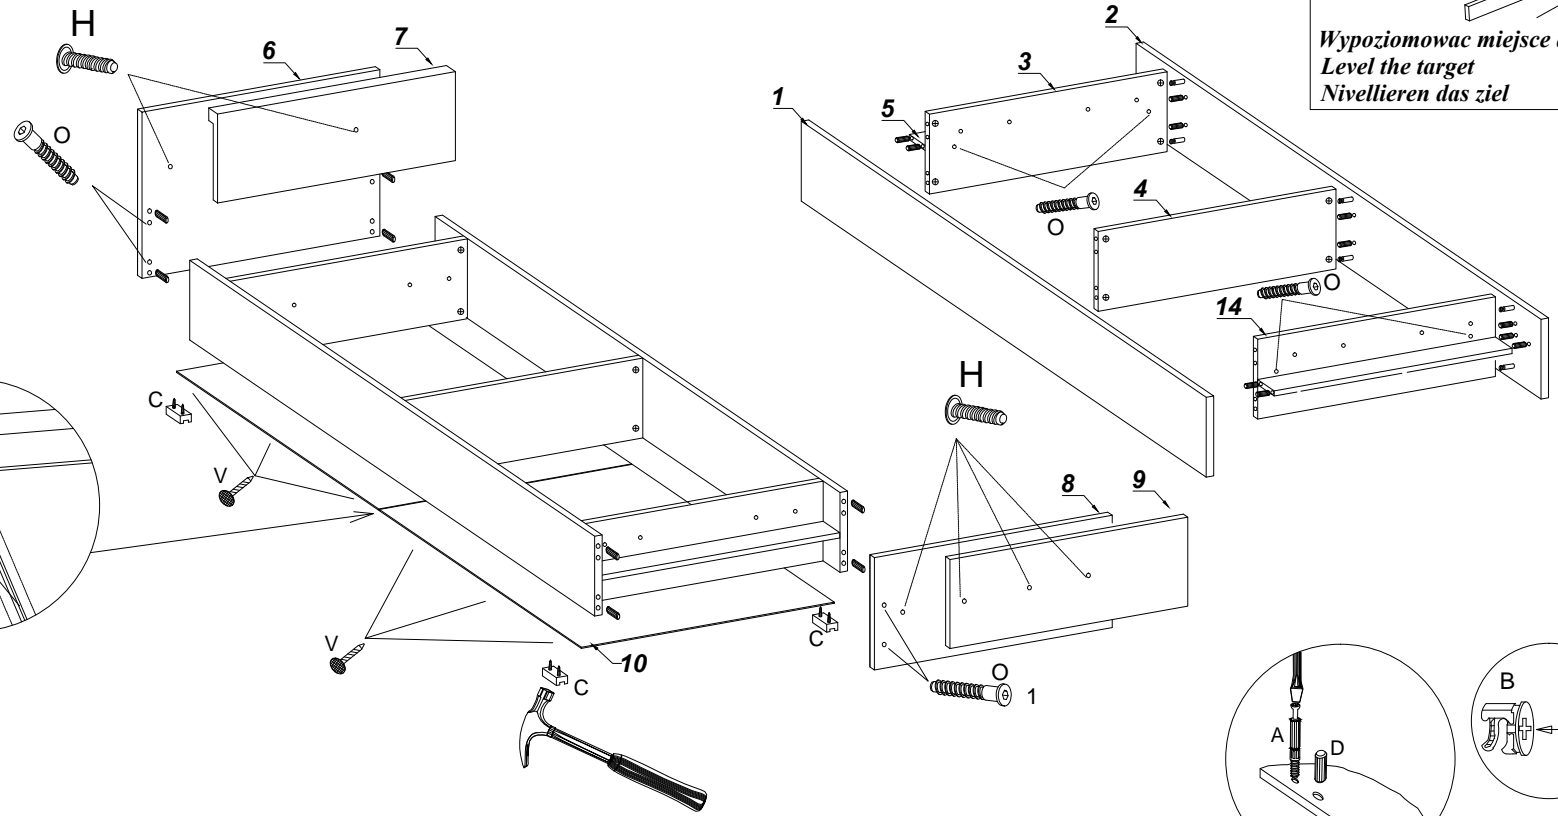
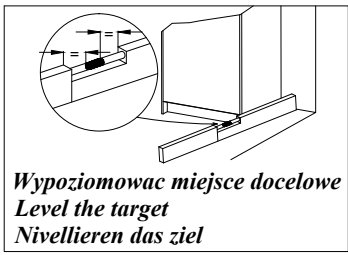


No.	Stc.	L	W	T
1	1	2050	300	22
2	1	2050	300	22
3	1	856	255	22
4	1	856	255	22
5	1	856	300	16
6	1	950	850	22
7	1	950	590	75
8	1	950	500	22
9	1	950	400	25
10	6	900	1025	3
11	1	2000	970	190
12	1	790	1900	3
13	1	790	480	16
14	1	856	255	16

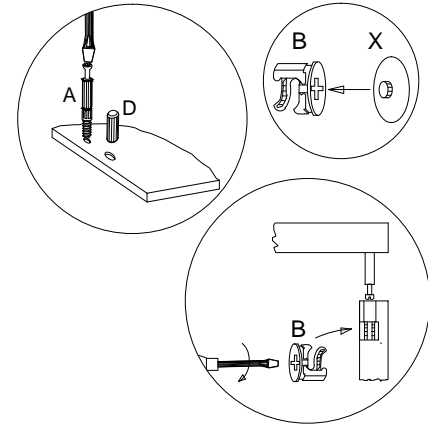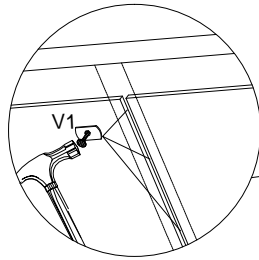

OPCJA LEWA
MONTAŻ AUTOMATÓW

OPCJA PRAWA
MONTAŻ AUTOMATÓW

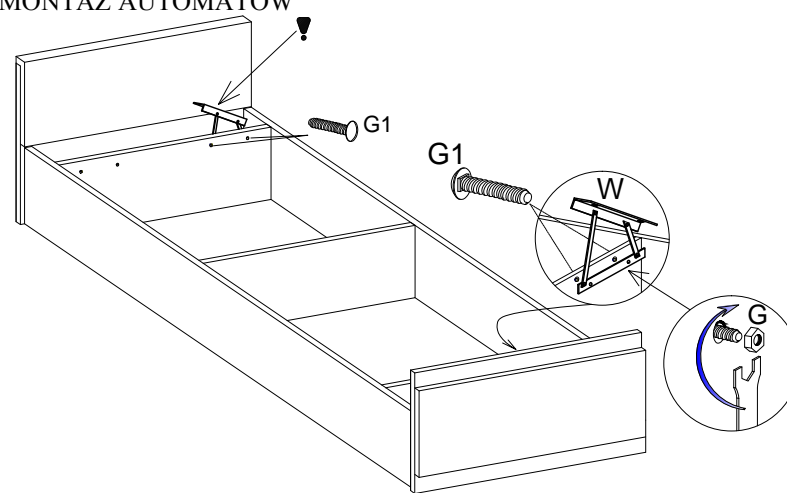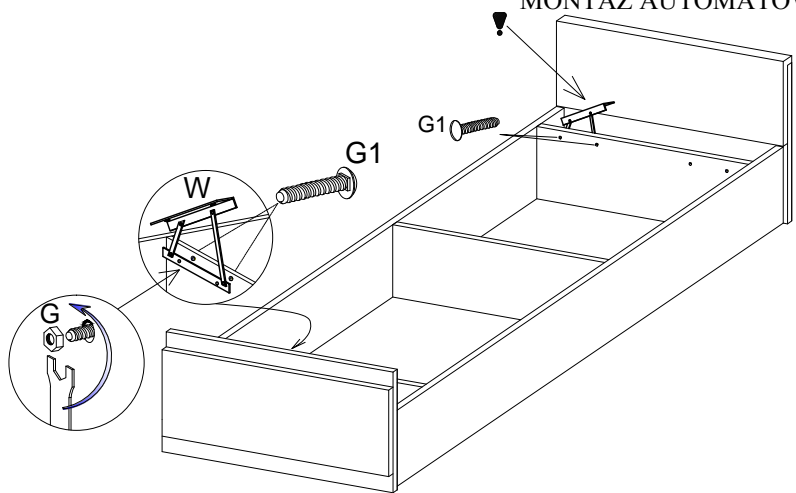

UZ H/H1