






PRZED ROZPOCZĘCIEM MONTAŻU ZAPOZNAĆ SIĘ Z INSTRUKCJĄ

Łóżko

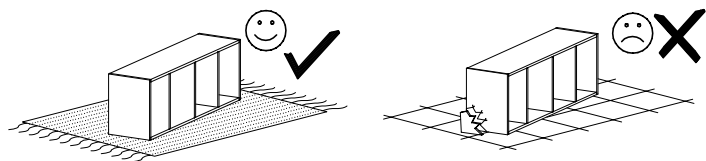


MONTOWAĆ NA MIEKKIM PODŁOŻU TYPU: KOC, DYWAN.


Narzędzia niezbędne do montażu (nie dostarczane przez producenta)

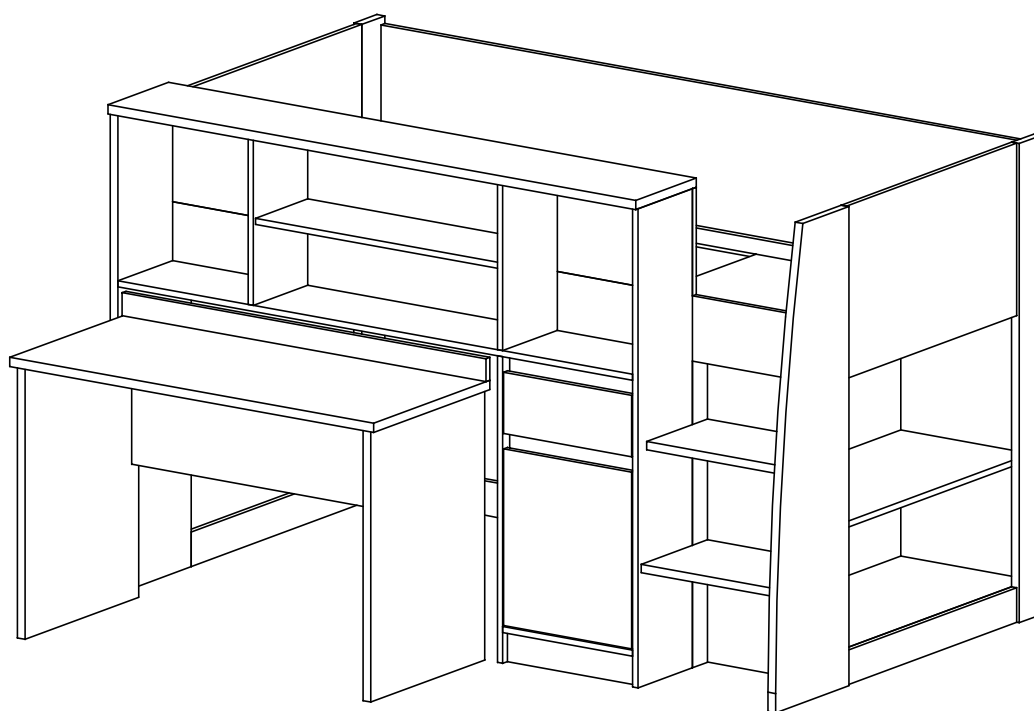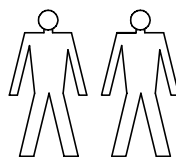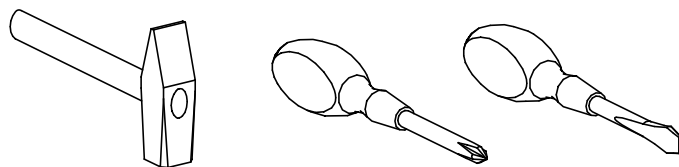


Ø8x35 x131




K5 x83




A1 Ø7x50 x30

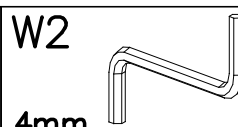


W2 4mm x1

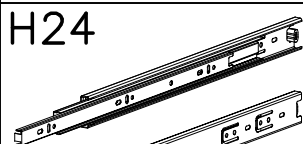

H24 450mm x1




G4 4x16 x16



K1 Ø15x12 x121




K6 x19

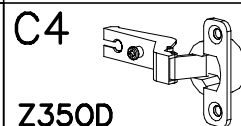


C4 Z350D x2



F2 x12



P3 x24




W4 x4




D4 PZ350D x2

1

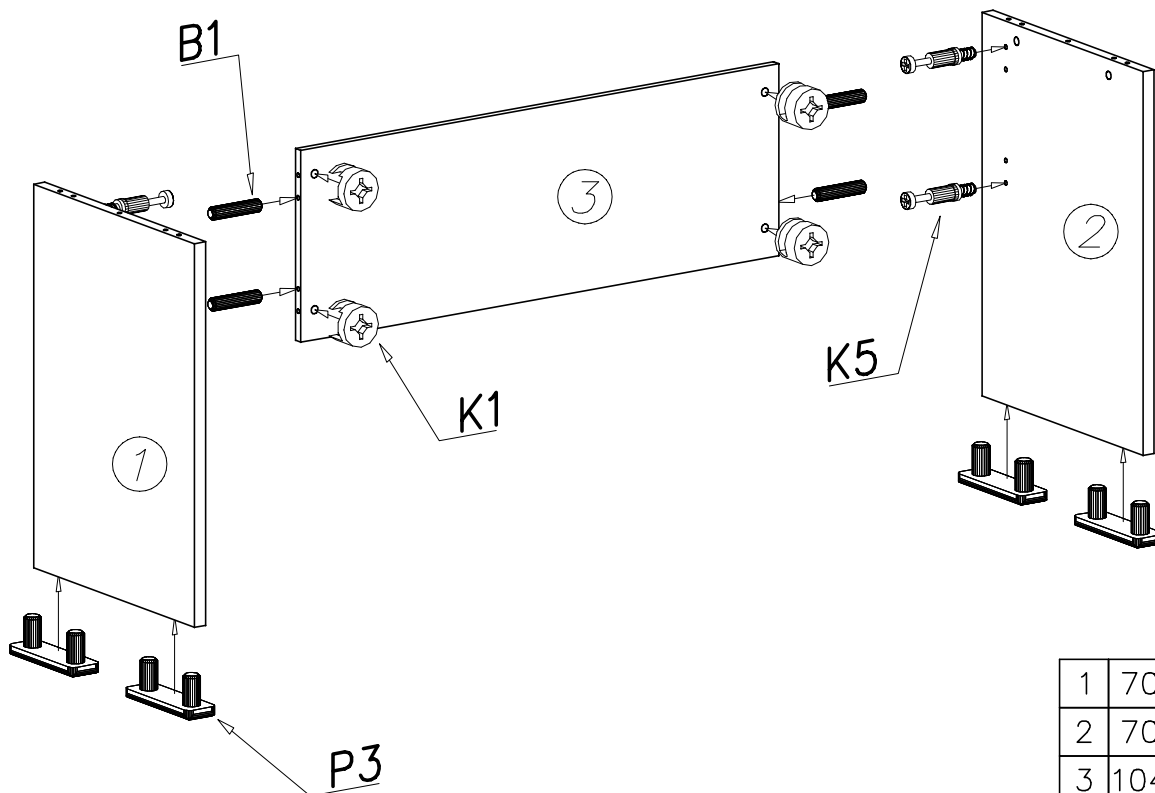


1	708	500	22
2	708	500	22
3	1040	350	16

2

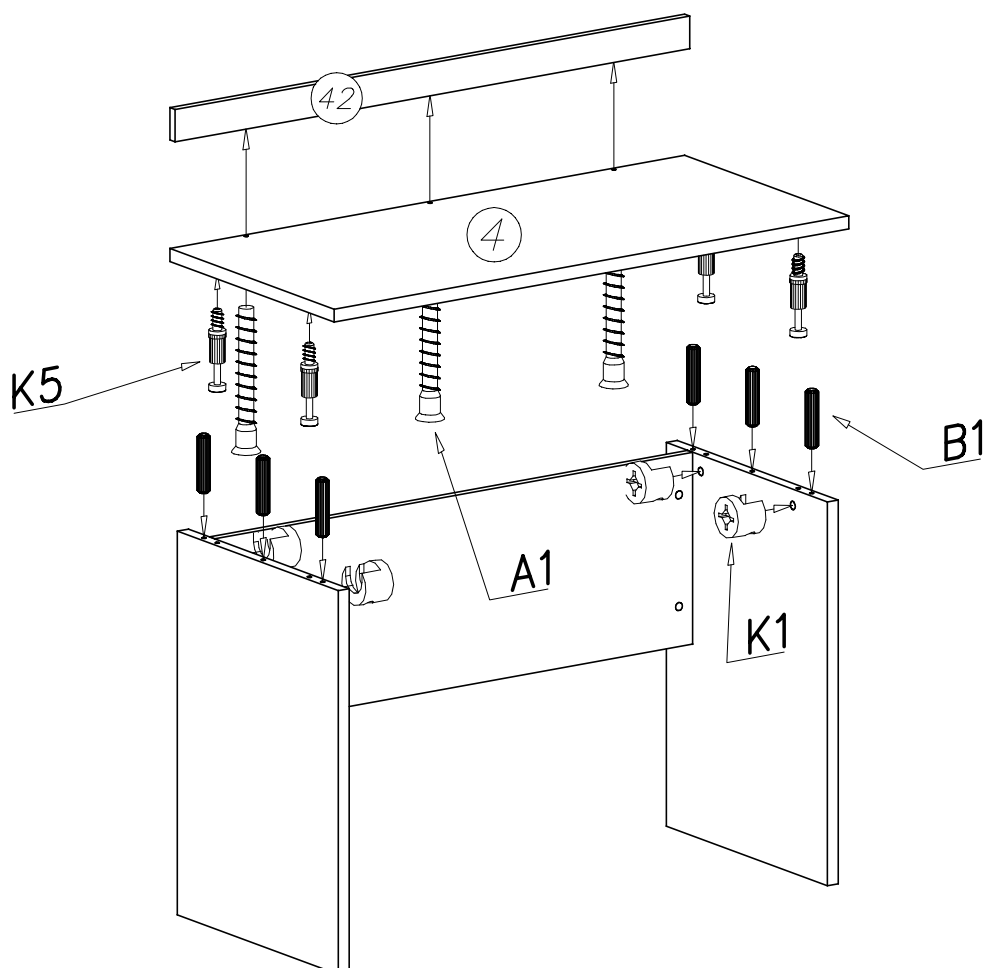


4	1120	510	22
42	1120	60	16

3

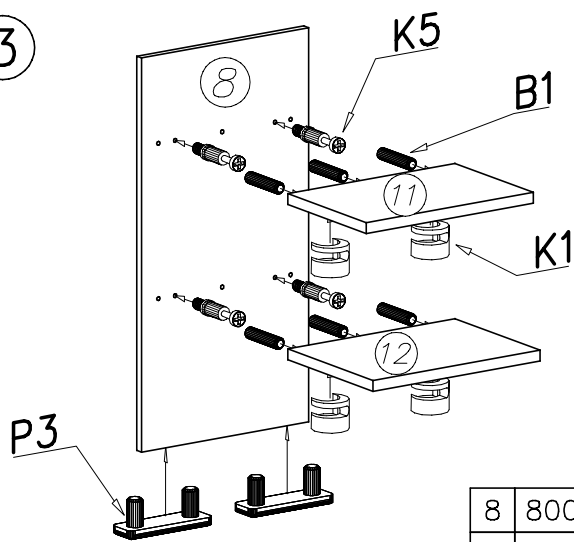


8	800	400	16
11	400	230	22
12	400	290	22

4

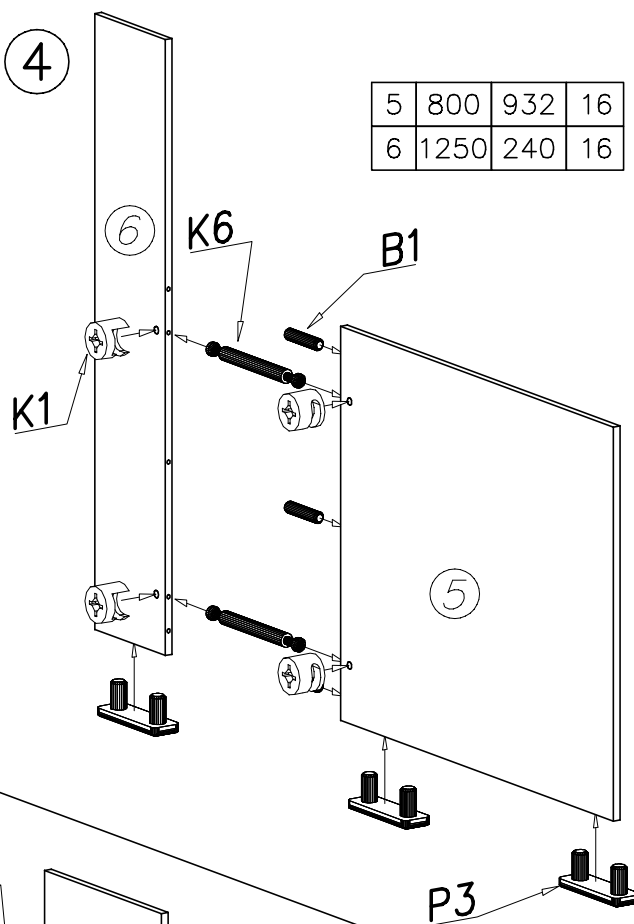


5	800	932	16
6	1250	240	16

5

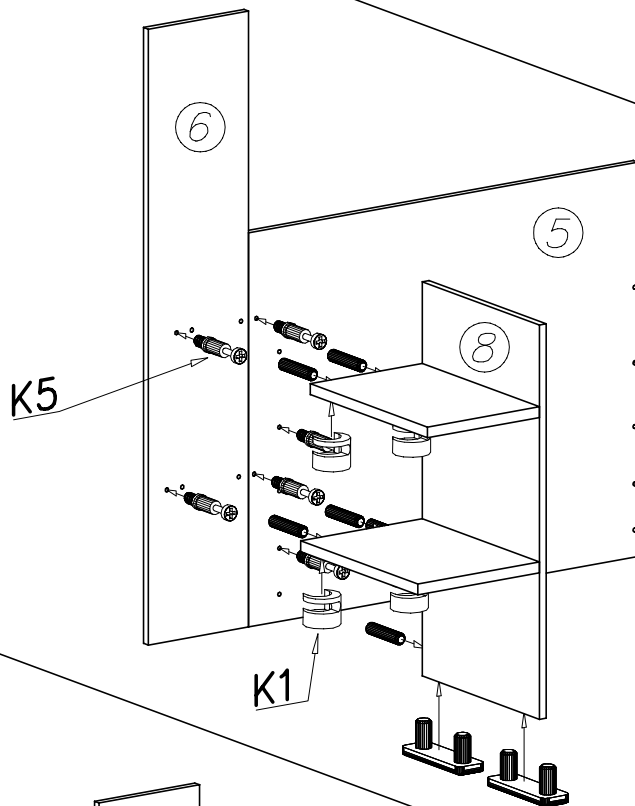


6

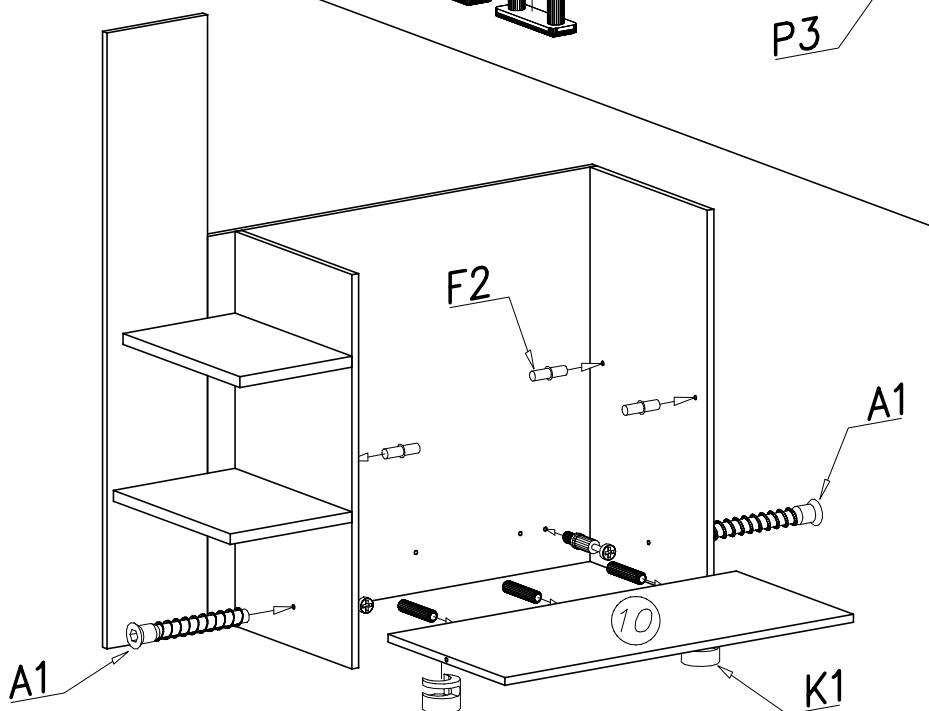

7	800	400	16
---	-----	-----	----


10	834	400	16
----	-----	-----	----

7

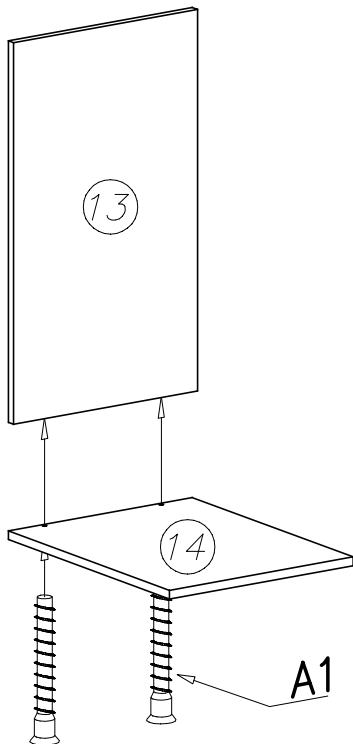


13	703	400	16
14	400	482	16

8


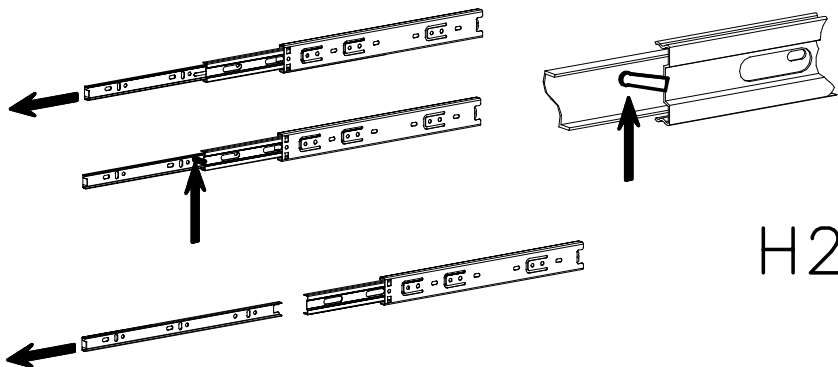


H24


9

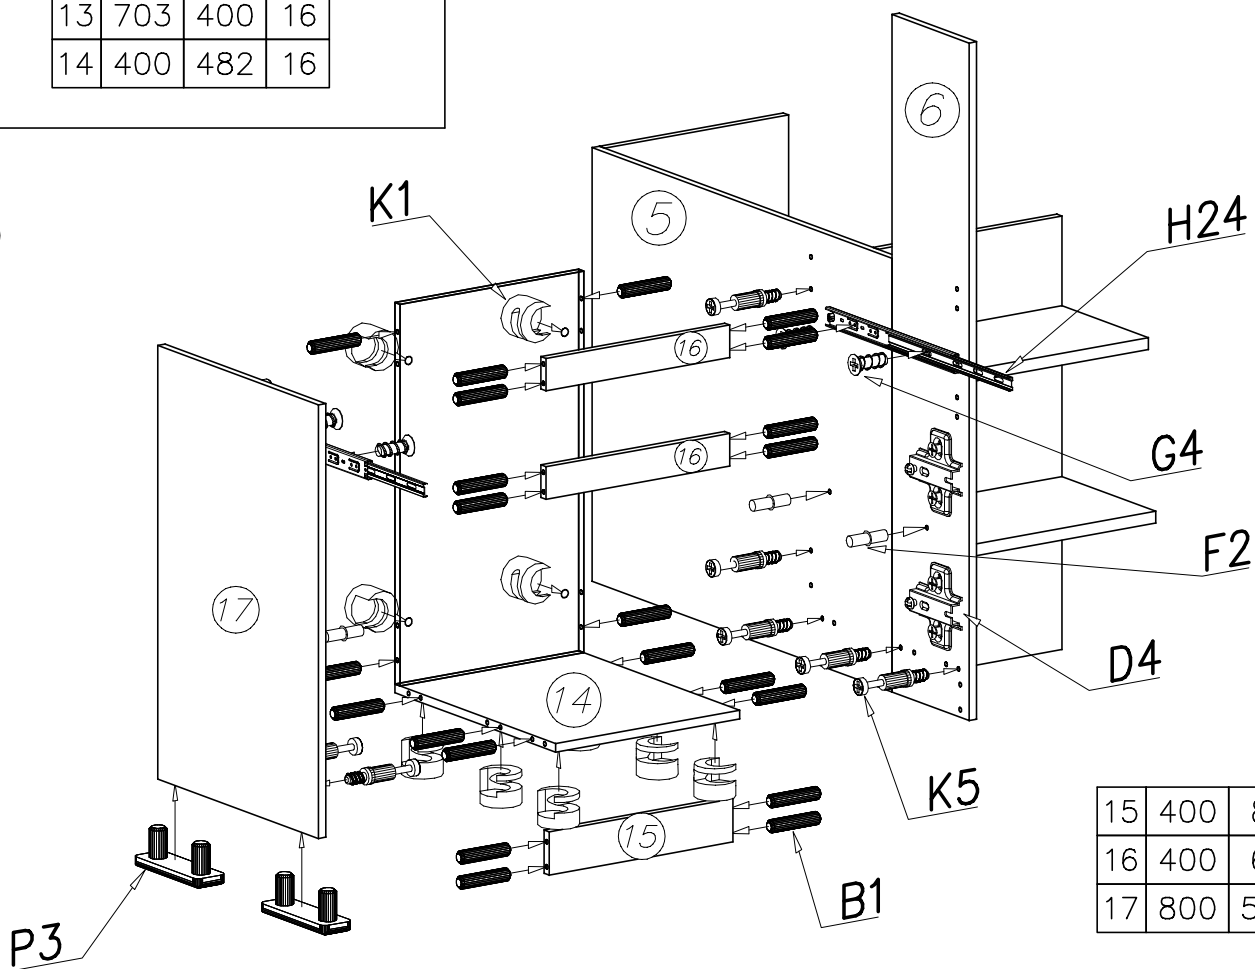

15	400	80	16
16	400	60	16
17	800	500	16

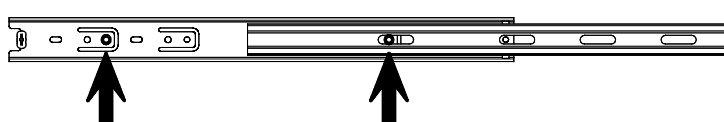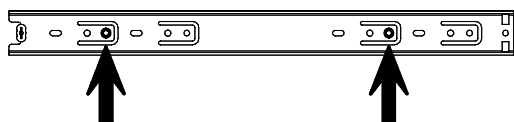


10

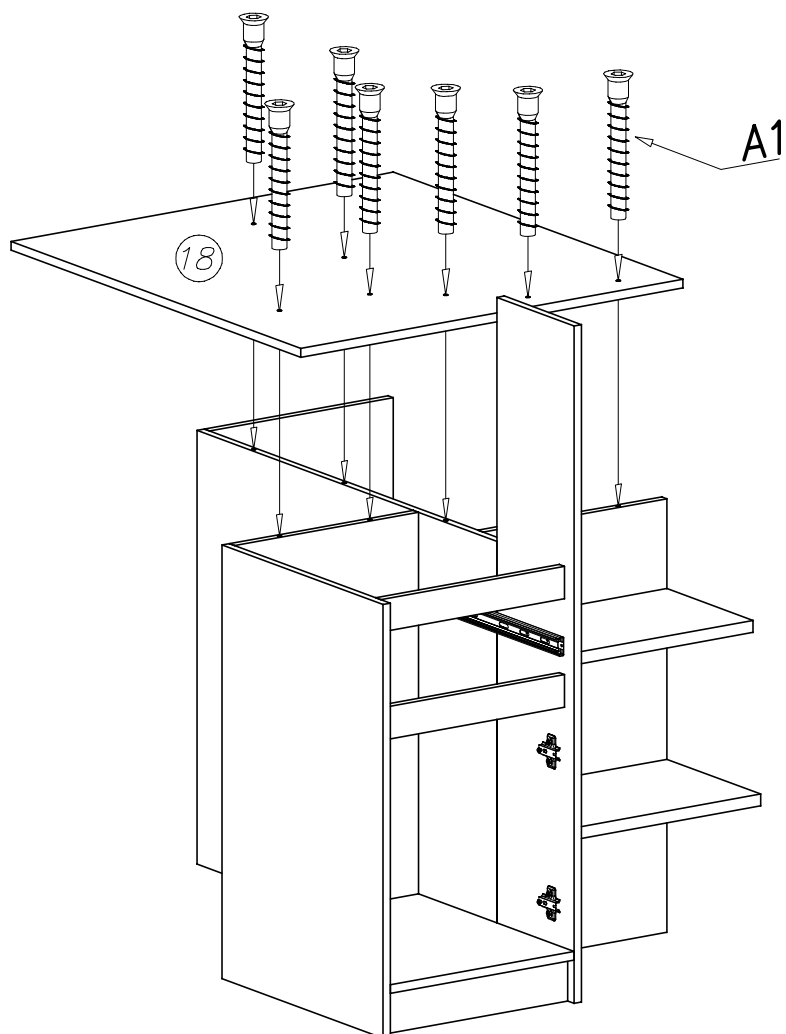

18	900	832	16
----	-----	-----	----


11

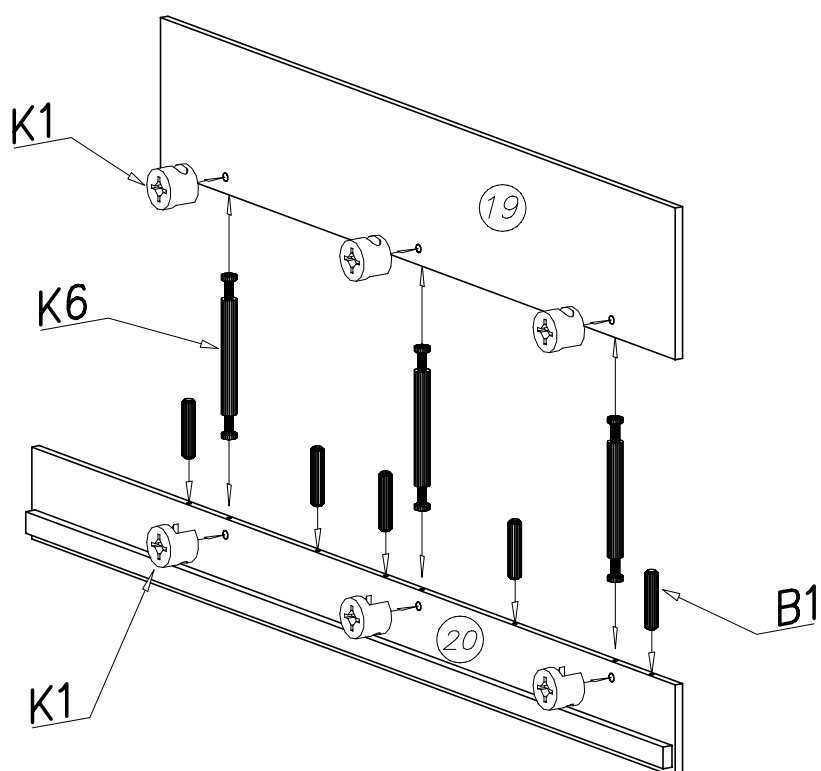

19	1600	280	16
20	2000	170	16


12

21	1584	240	16
----	------	-----	----

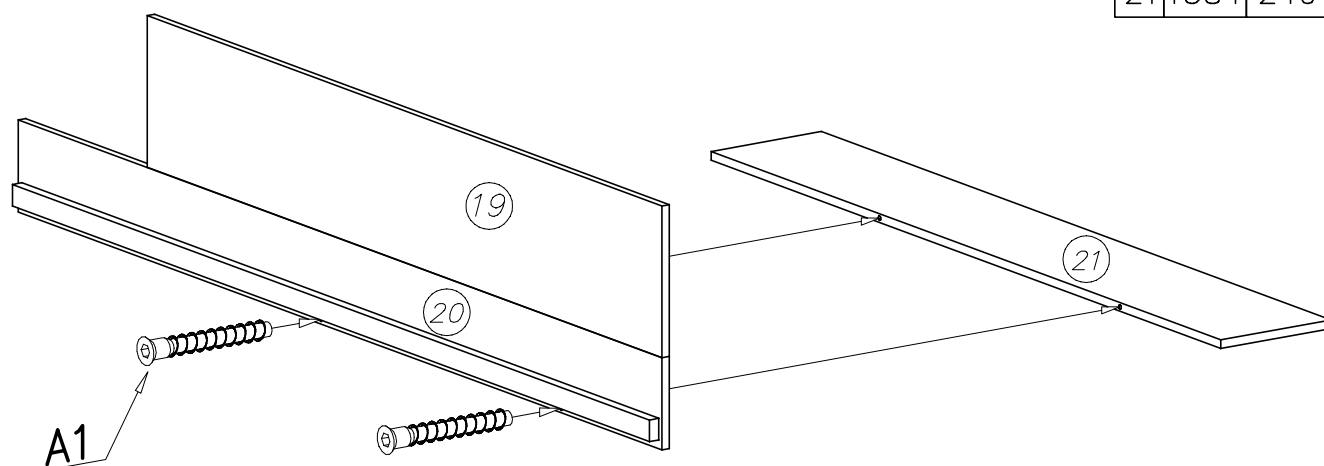


13


22	1250	322	22
----	------	-----	----

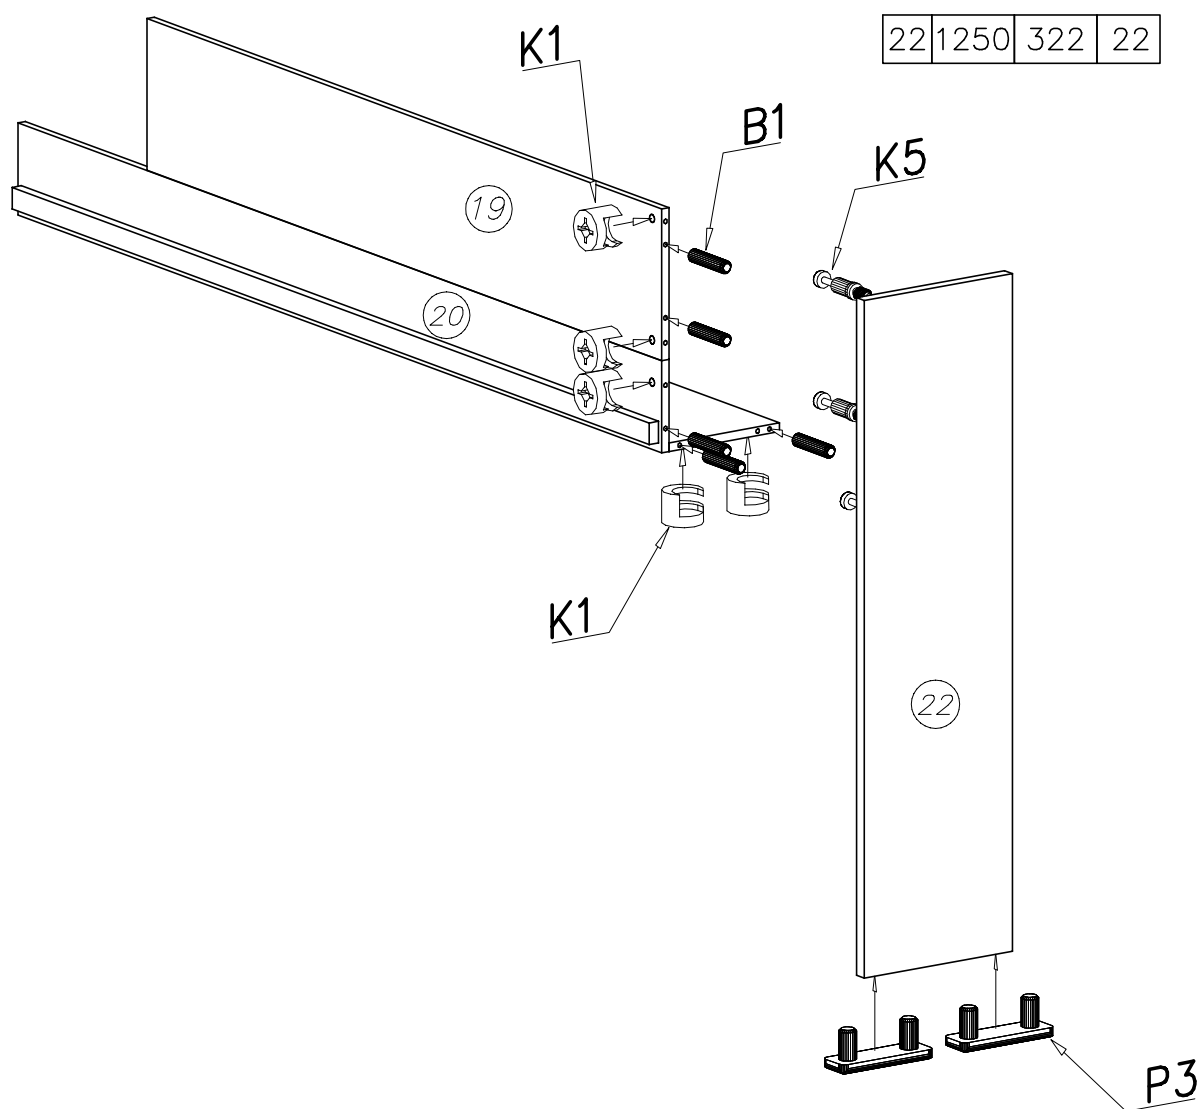

14

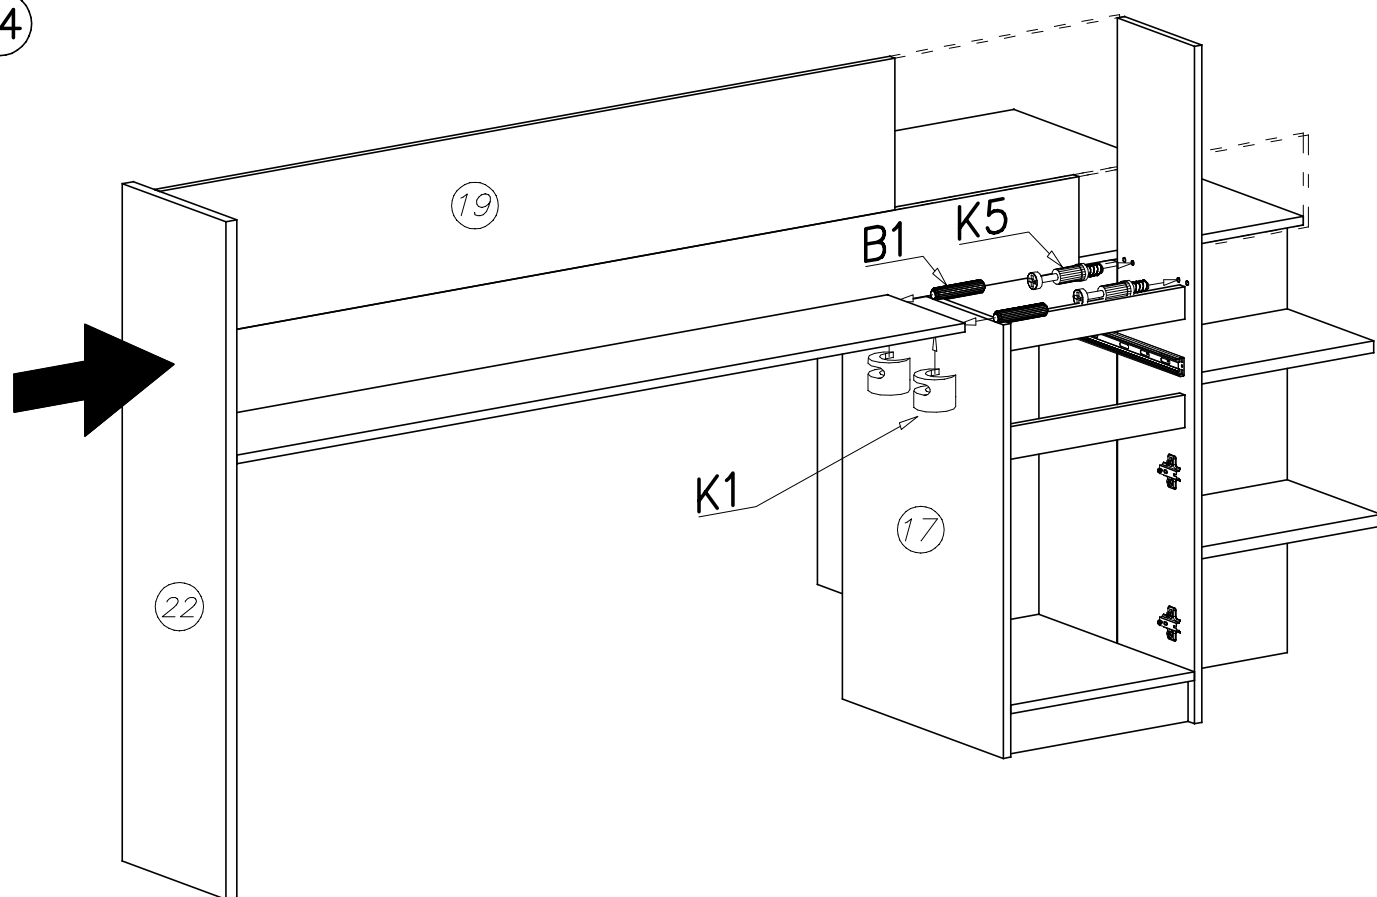


15

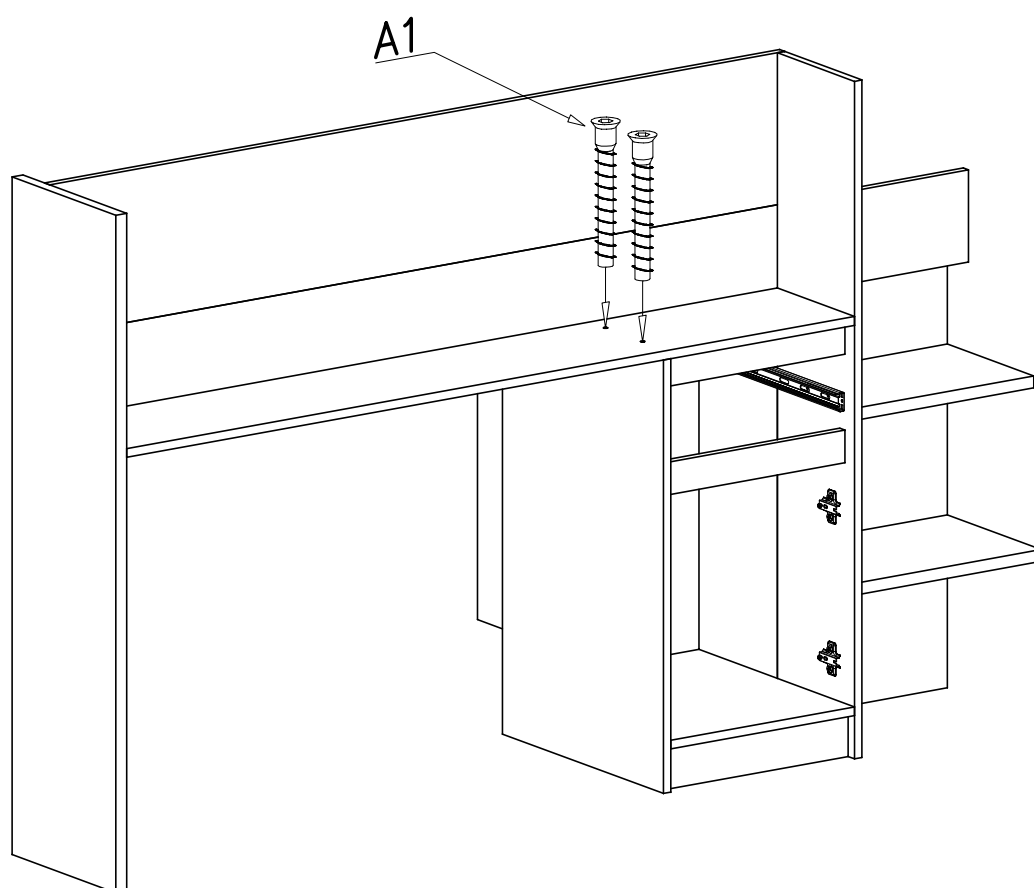


16

23	434	240	16
----	-----	-----	----

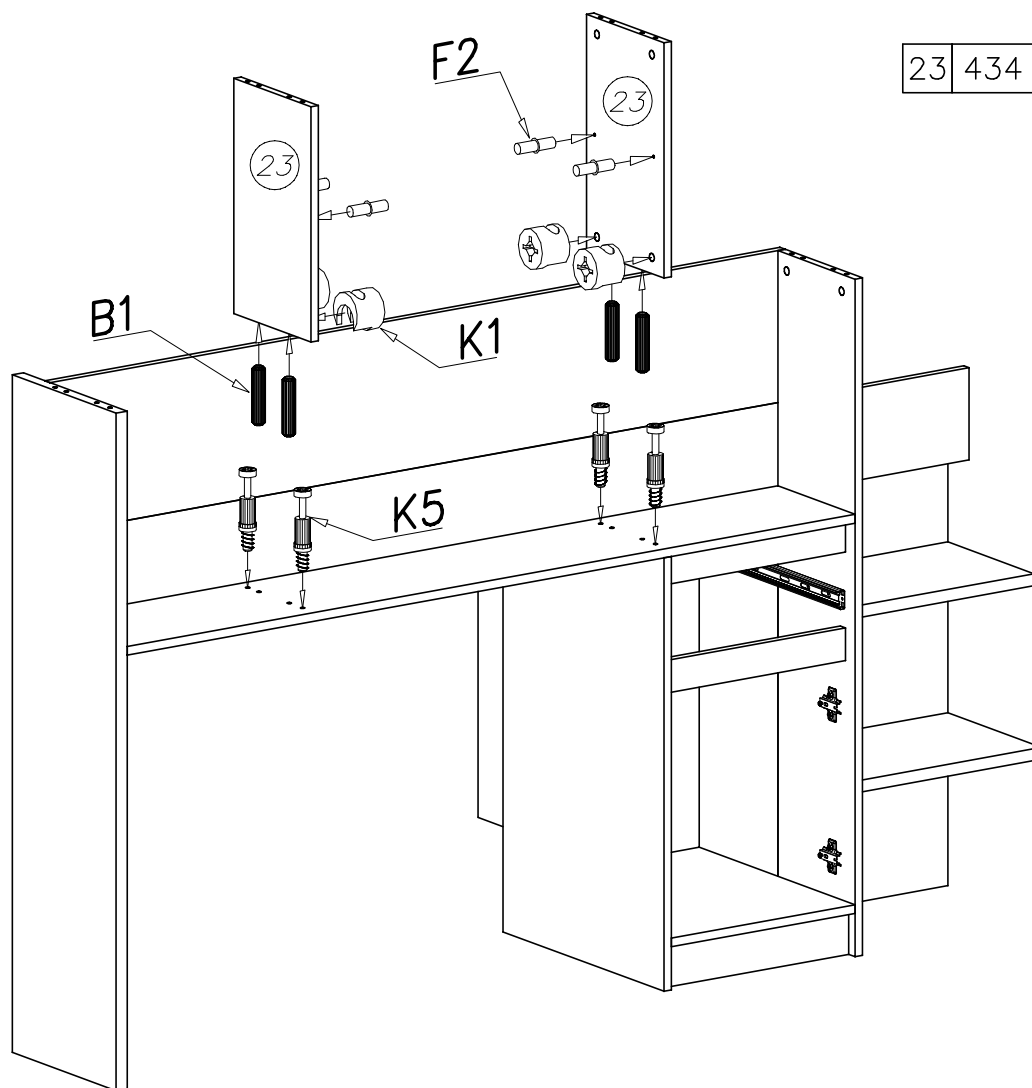


17


24	1584	90	16
----	------	----	----

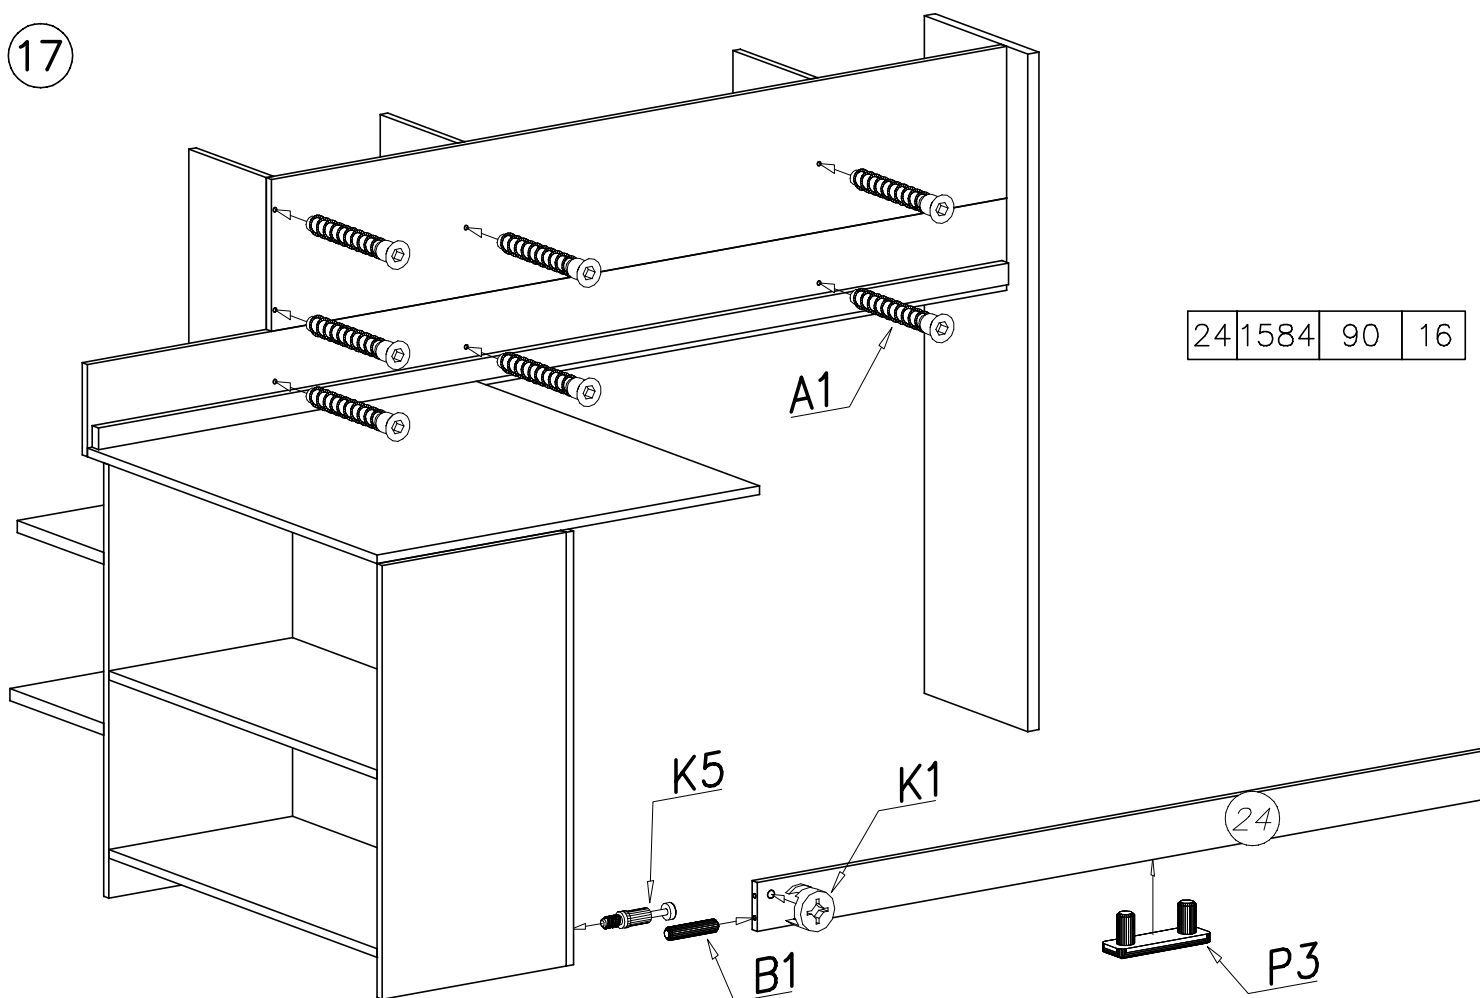


18

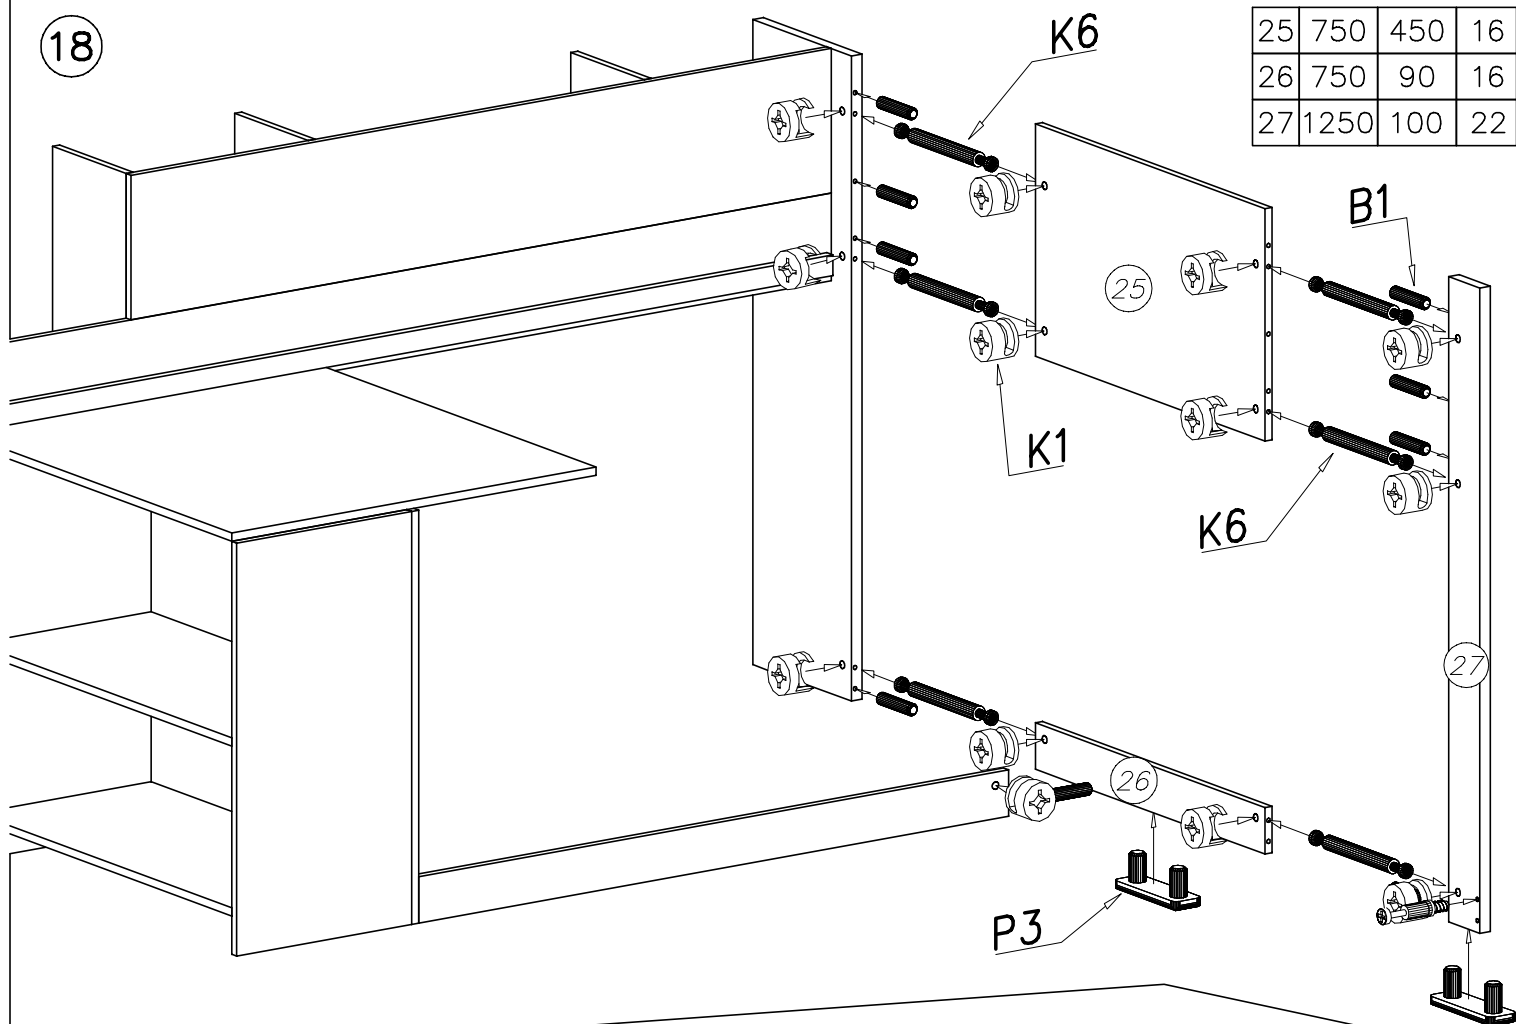


19

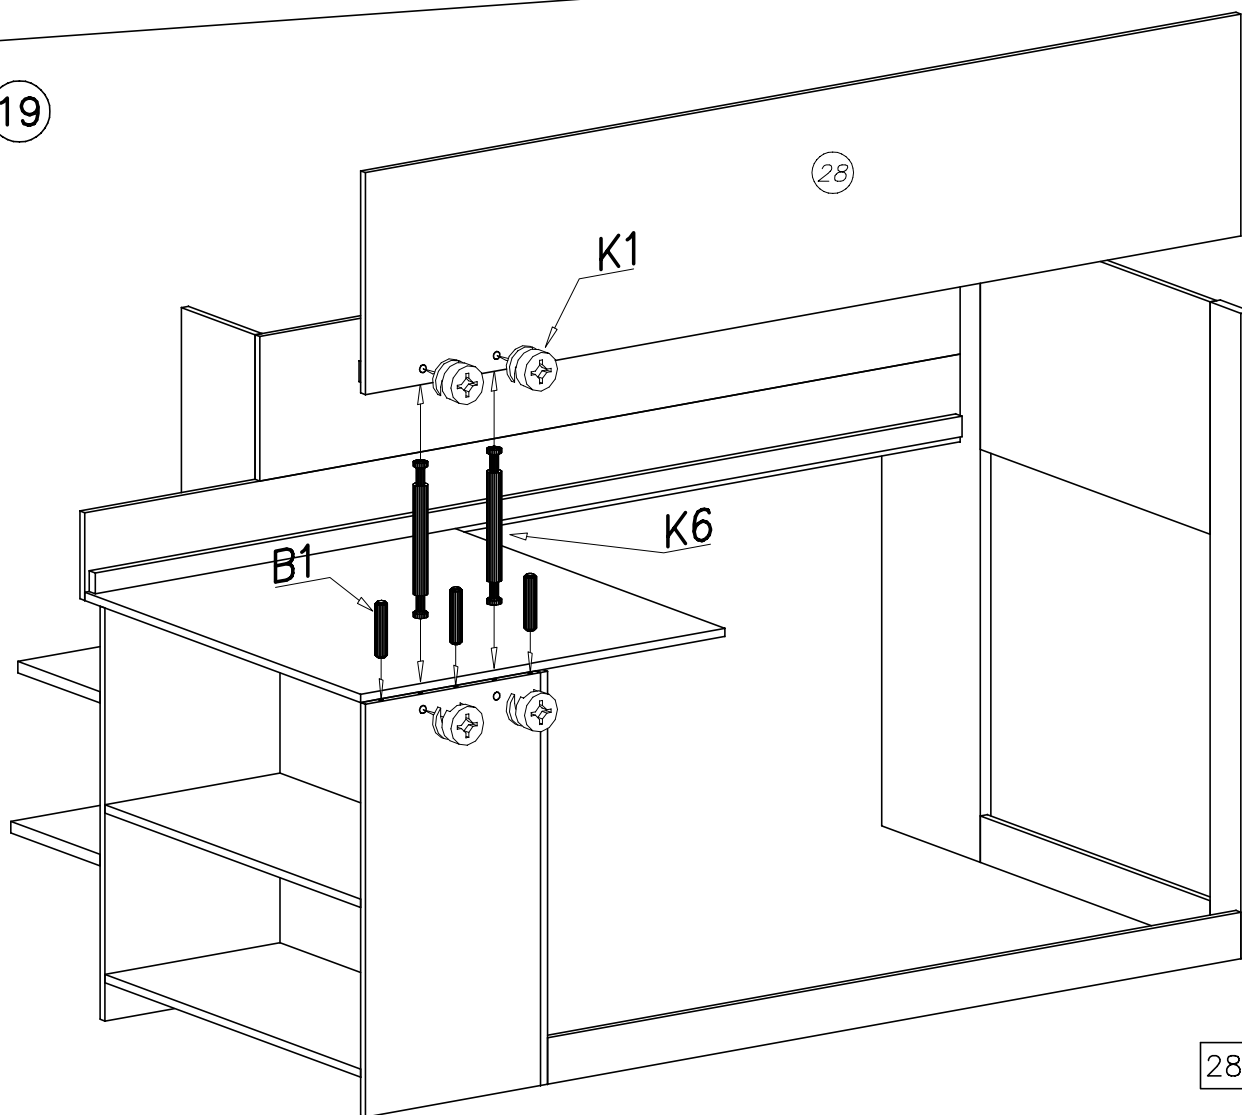

20

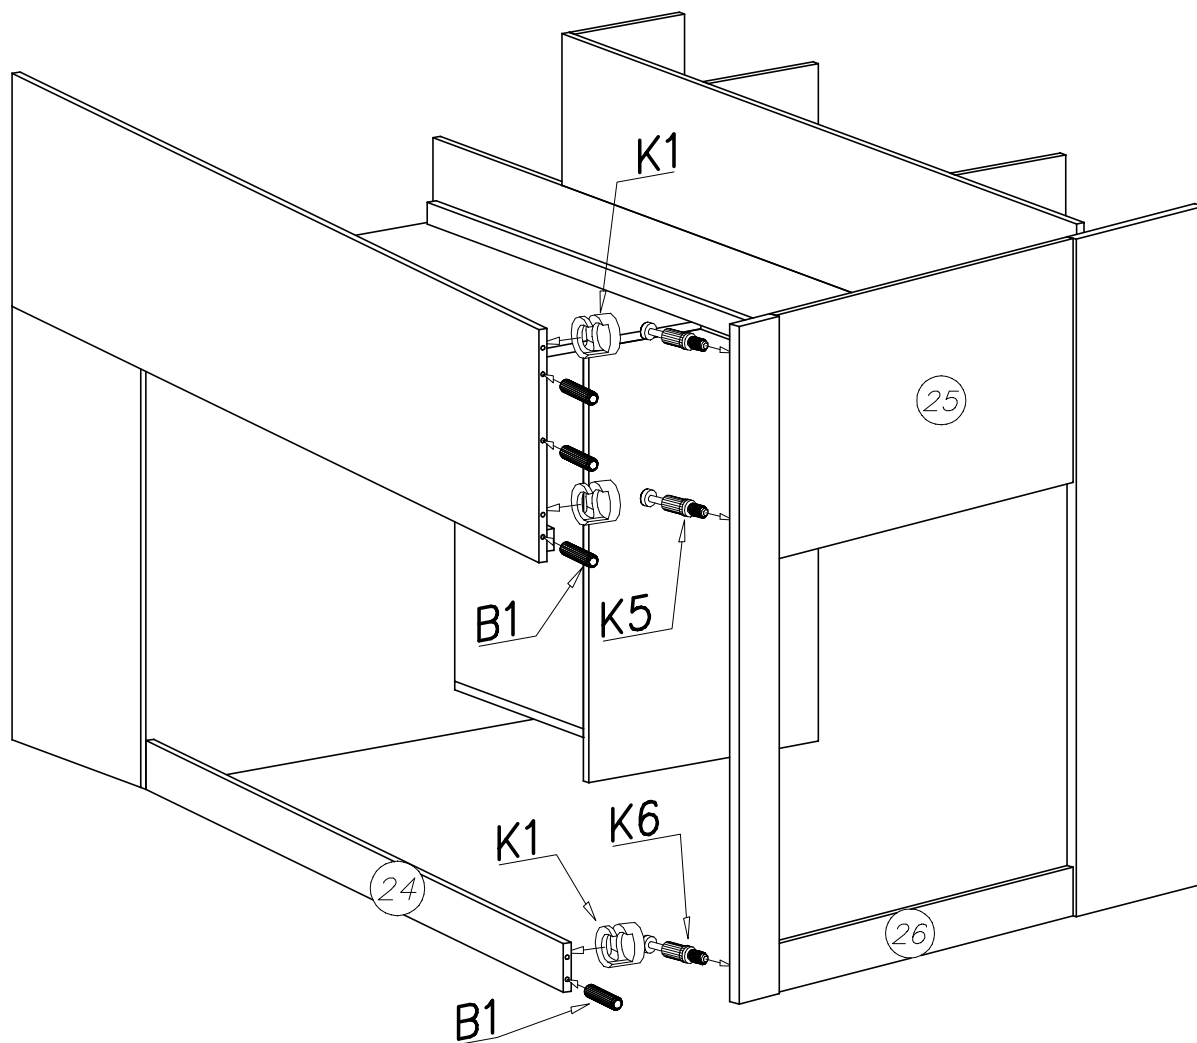

21

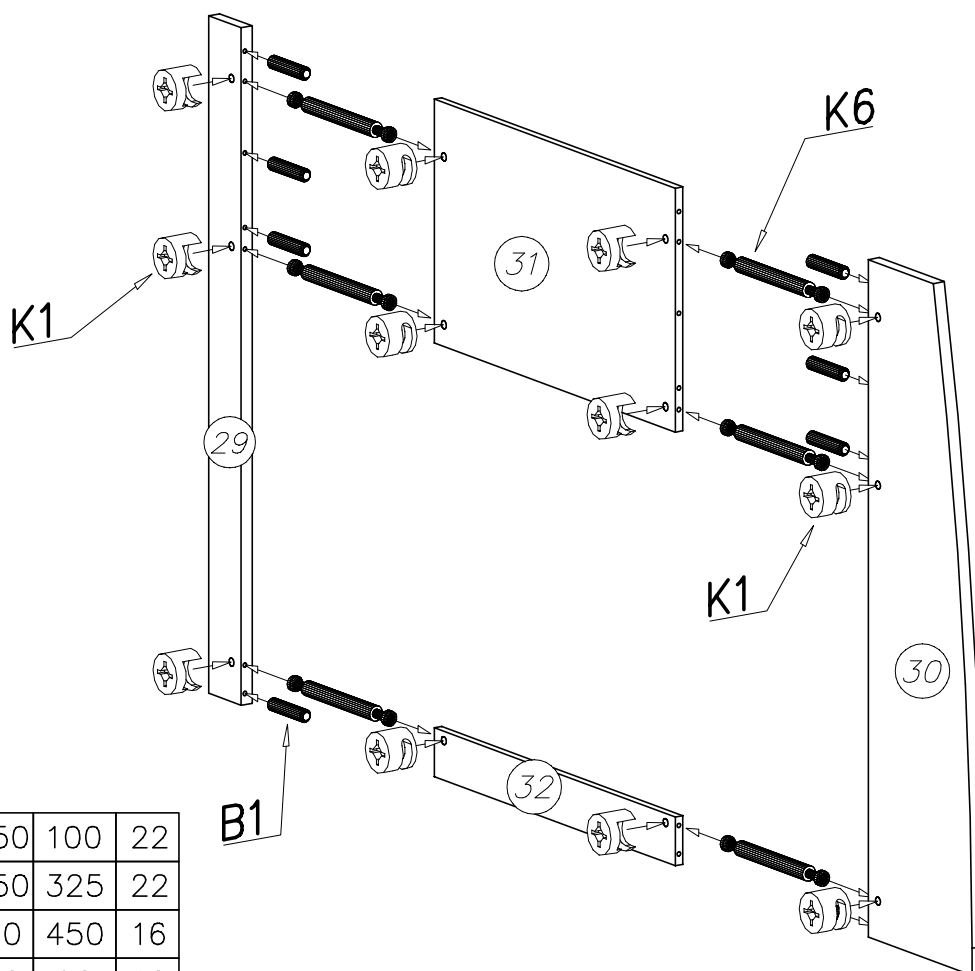

29	1250	100	22
30	1250	325	22
31	750	450	16
32	750	90	16

22

K5

B1

33

K1

B1

9


K1

B1


P3

K5


9	834	400	16
33	1624	266	22

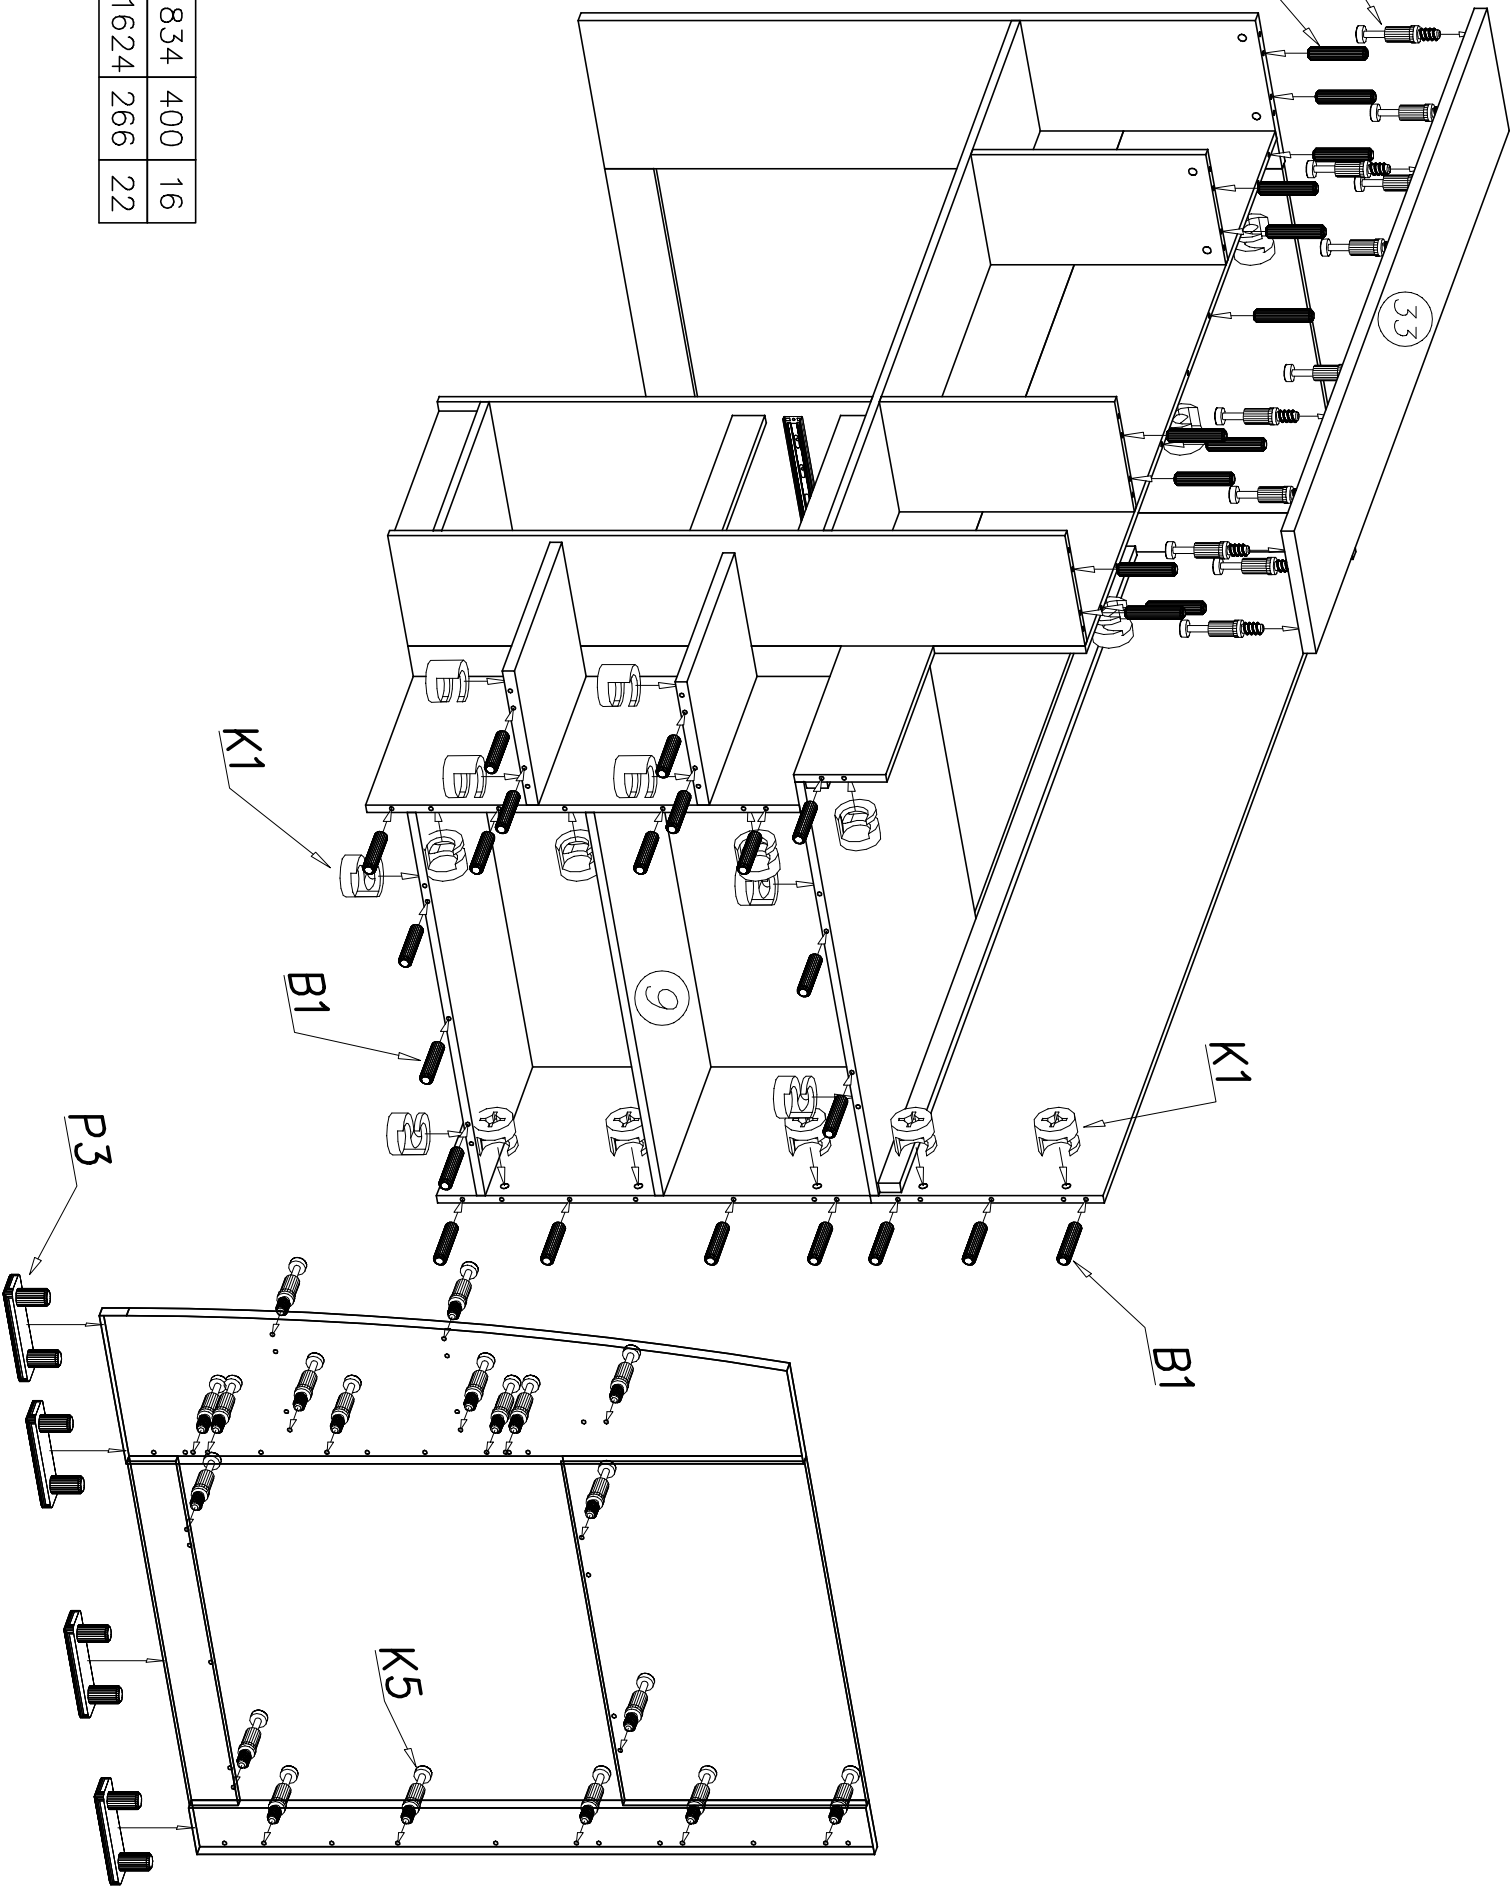


23

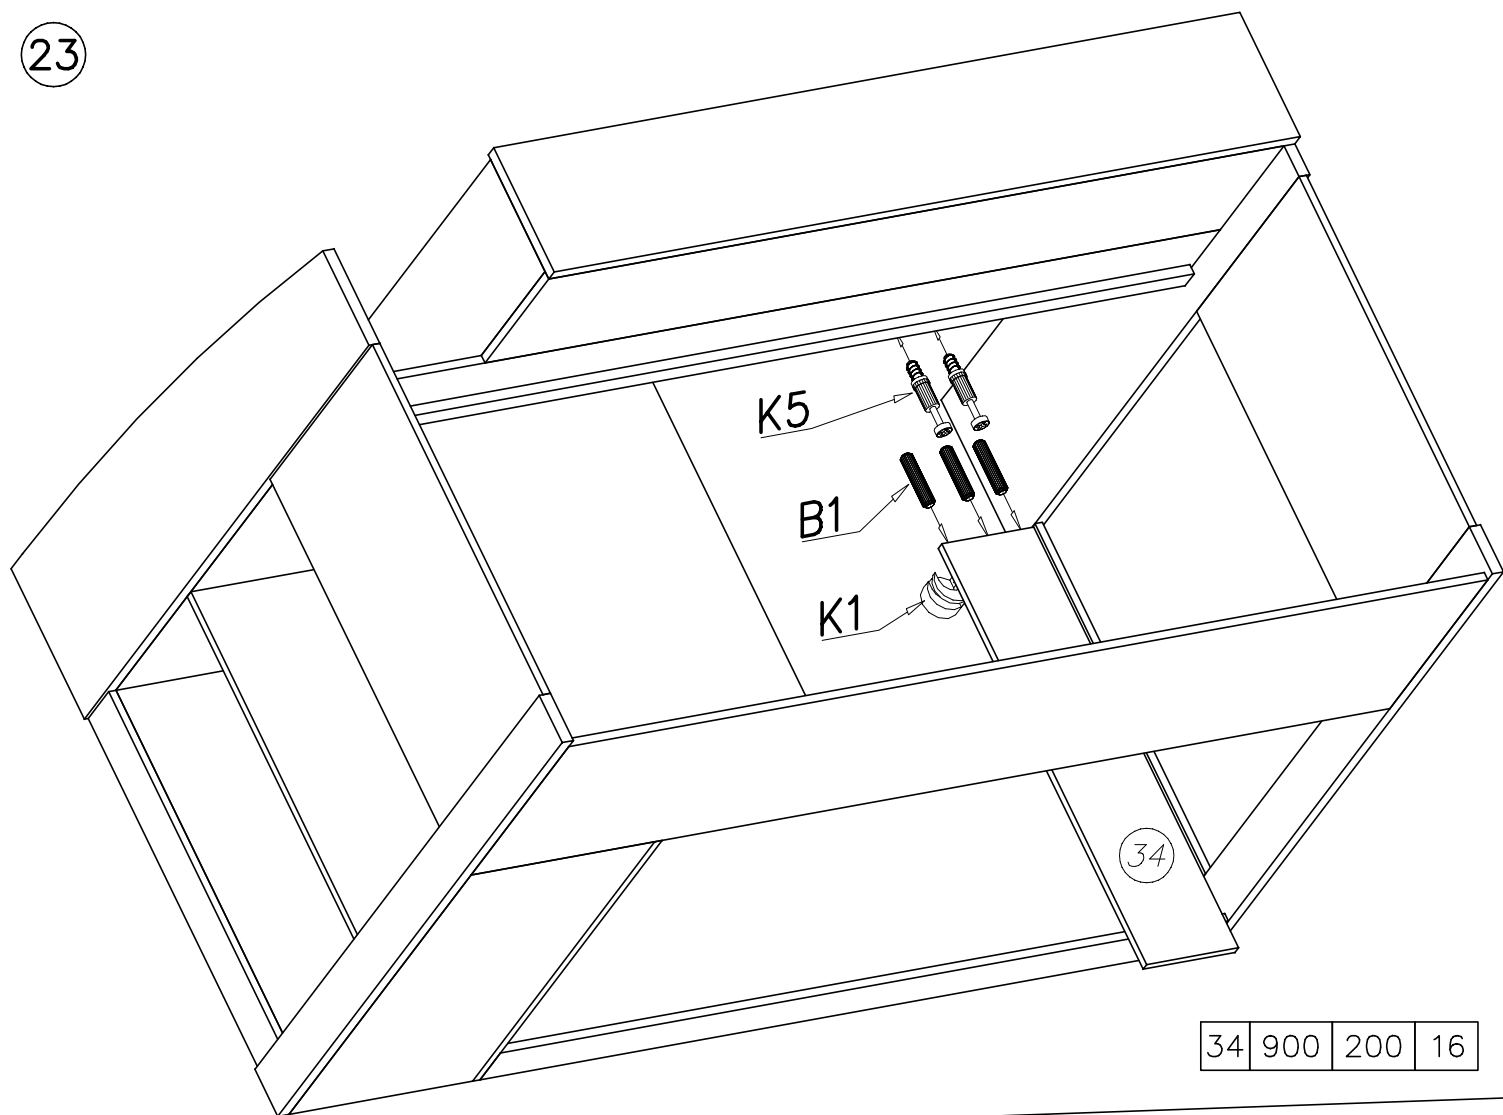




24

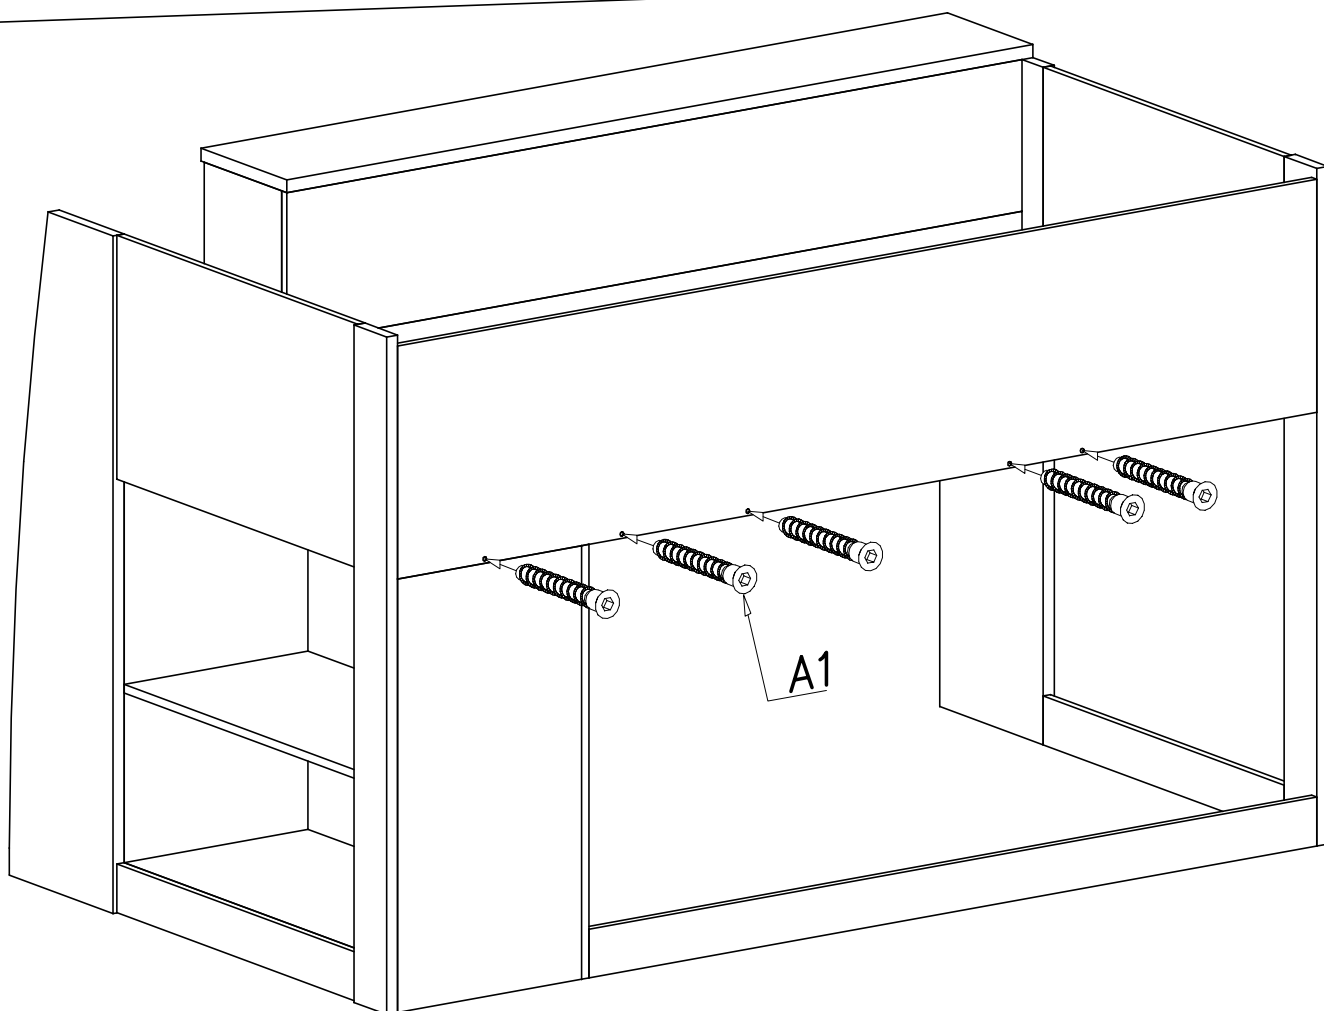


25

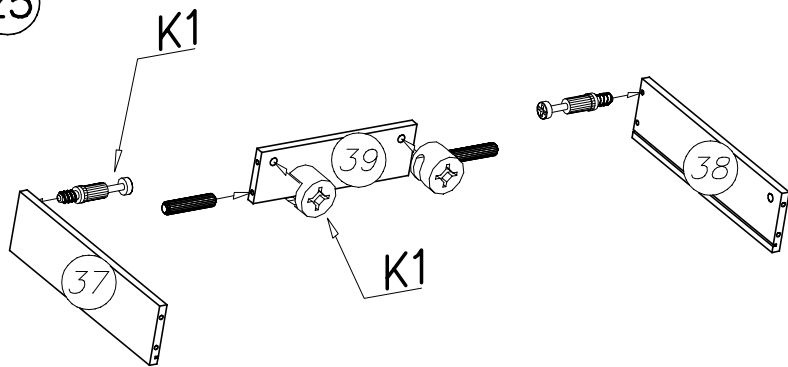

37	450	120	16
38	450	120	16
39	344	104	16
40	160	394	16
41	466	358	3

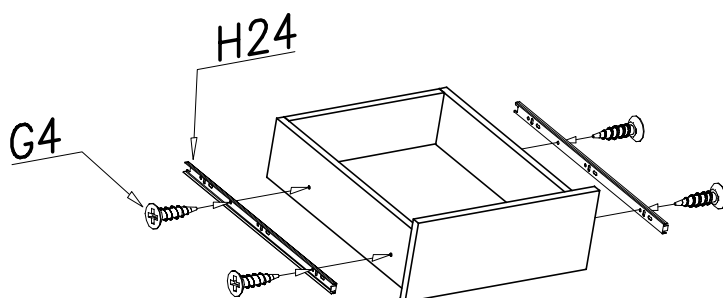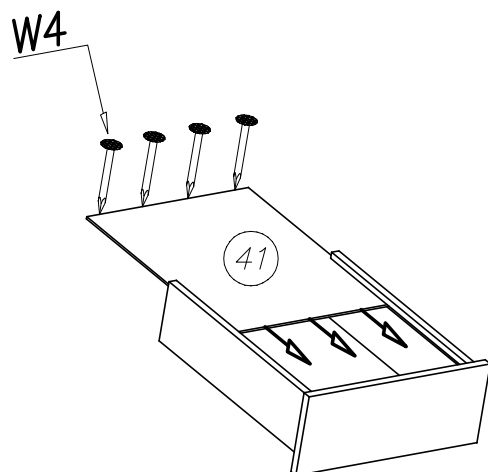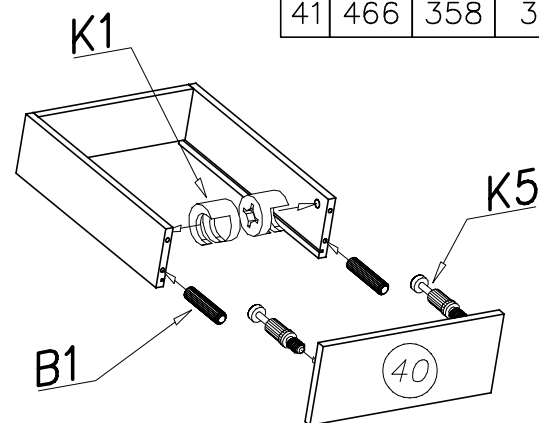

26

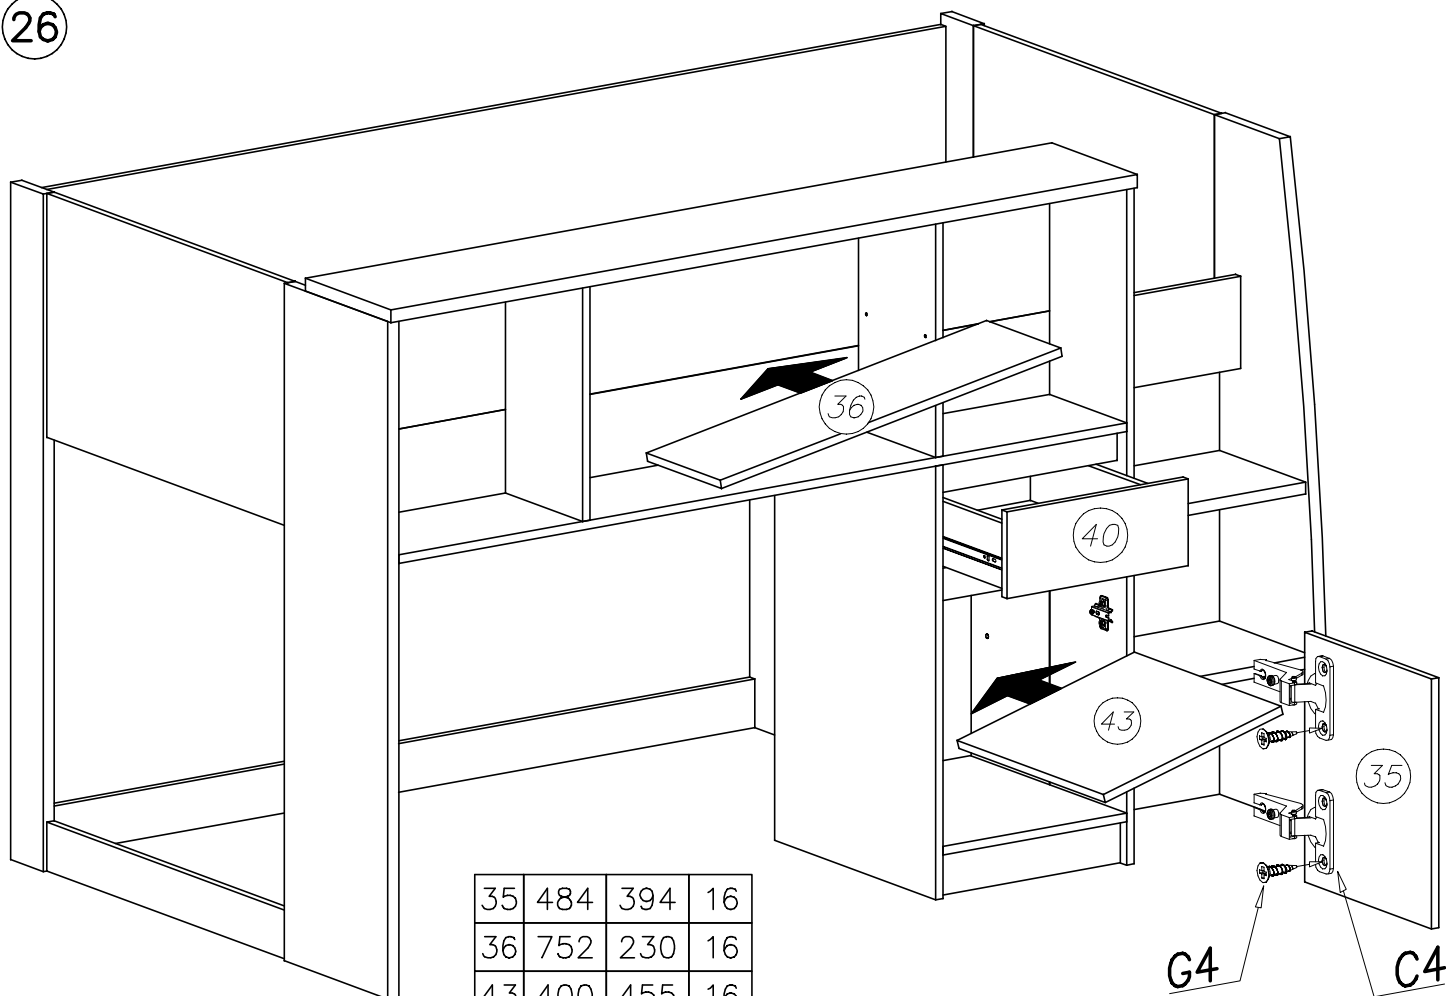

35	484	394	16
36	752	230	16
43	400	455	16