



# BRICO SZAFKA 200 - KORPUS

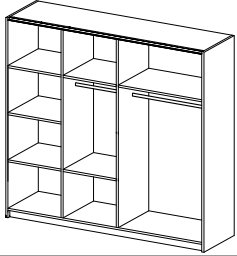

**UWAGA**  
KOLKI WBIJAĆ JAK NA  
PONIŻSZYM RYSUNKU  
W KRAWĘDZ ELEMENTU


**CAUTION**  
STICKING PINS HOW  
TO DRAWING

**ACHTUNG**  
DAS FESTHALTEN PINS  
HOW TO ZEICHNUNG

11.0 mm


OK!

No.	Stc.	L	W	T
1	1	2000	606	22
2	1	2000	617	16
3	1	2150	622	22
4	1	2150	650	22
5	1	2042	603	16
6	3	488	603	16
7	2	488	603	16
8	1	992	150	16
9	1	2000	70	16
10	1	2080	1014	3
11	1	2150	603	22
12	1	2080	510	3
13	1	2080	503	3
14	1	2000	70	16
15	1	992	603	16

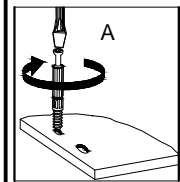

## Instrukcja montażu Assembly instructions

U1	U2	U	U3	R3	D	A	B	X	H	F	S3	N3	N4	V1	W
2	2	2	2	8	54	30	30	30	14	66	12	1	1	16	40
N2	X1	O	O1	R5	R4	R1	R2	V	J3	U4	J2	J1			
4	4	4	1	2	2	1	1	-	4	1	2	2			

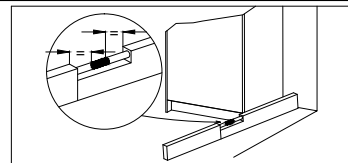

Wypoziomować miejsce docelowe  
Level the target  
Nivellieren das Ziel

WSKAZÓWKADOTYCZĄCA  
PIELĘGNACJI ! PROSZĘ CZYŚCIĆ  
TYLKO SUCHĄ LUB LEKKO  
WILGOTNĄ SZMATKĄ DO KURZU  
NIE UŻYWAĆ ZADNYCH ŚRODKÓW  
SZORSTKICH !

