







CLA-13

Montaż na miękkim podłożu!

A-28	B-28	C-32	D-10	E-10	F-37	G-8	H-4
I-20	J-4	K-4	L-6	M-6	N-8	O(L)-2	
O(P) - 2		P-12	R-8	S-1	T-1	U-1	

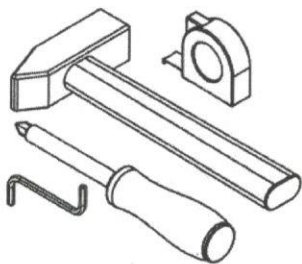


180 min.

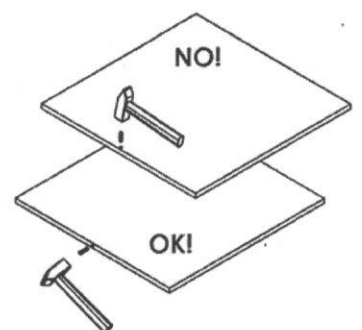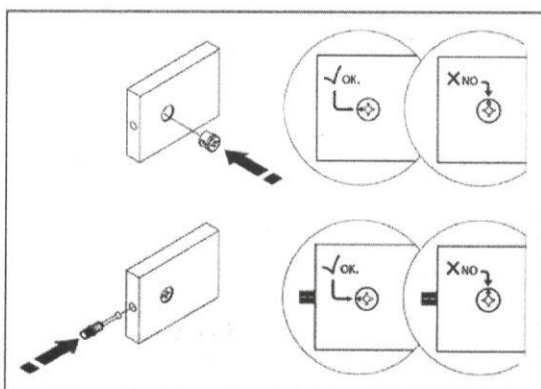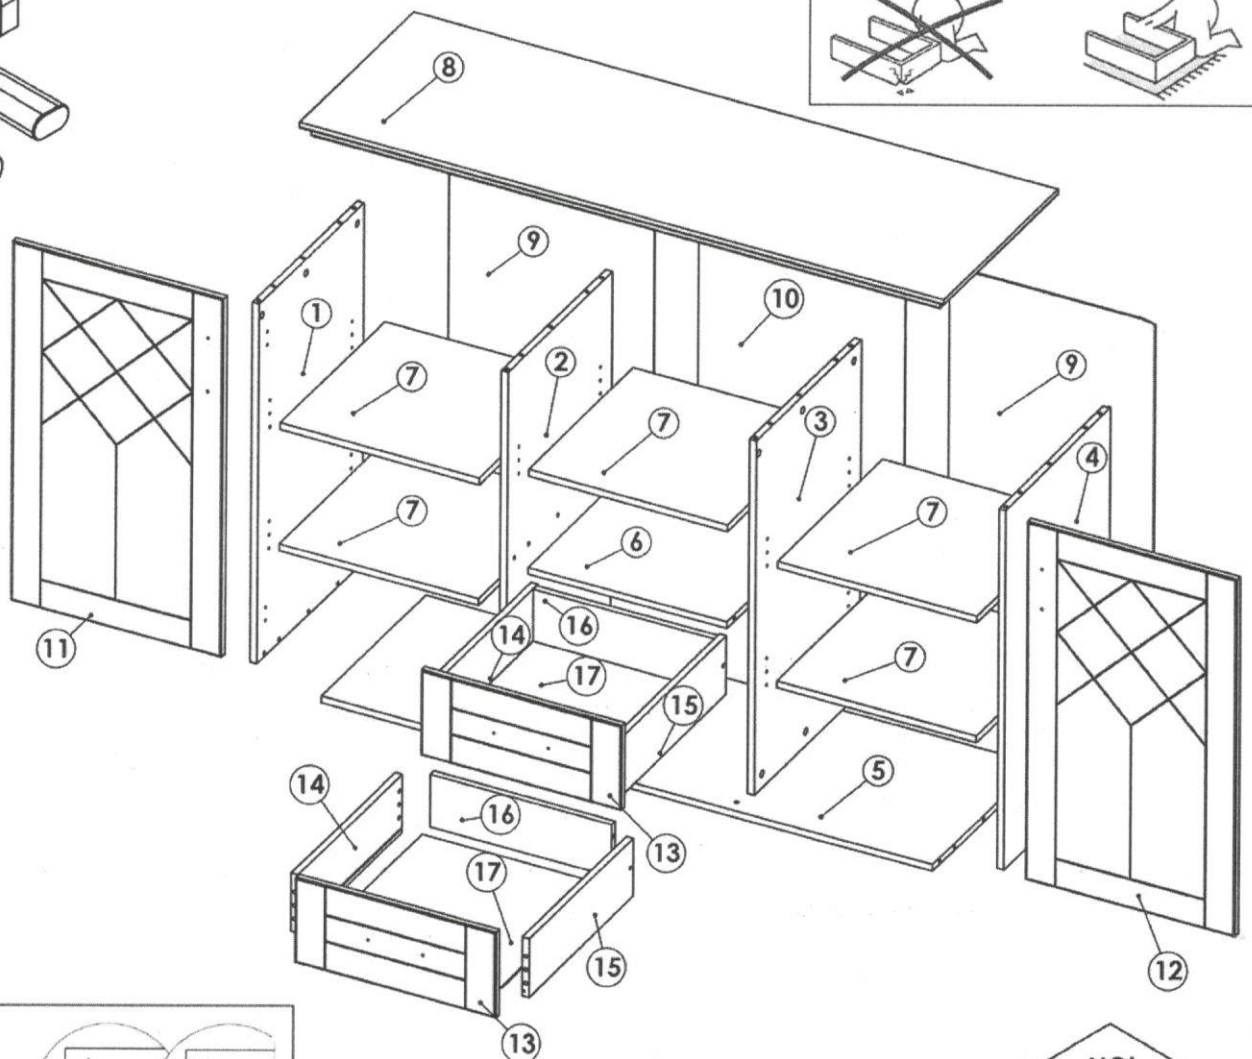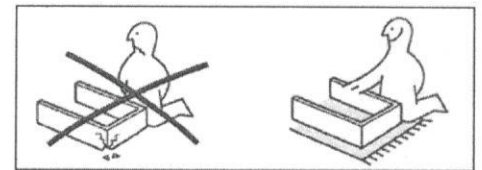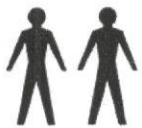


STEP-1

A-12	B-30	C-16	3,5x13 E-8	J-4	O(L) - 2


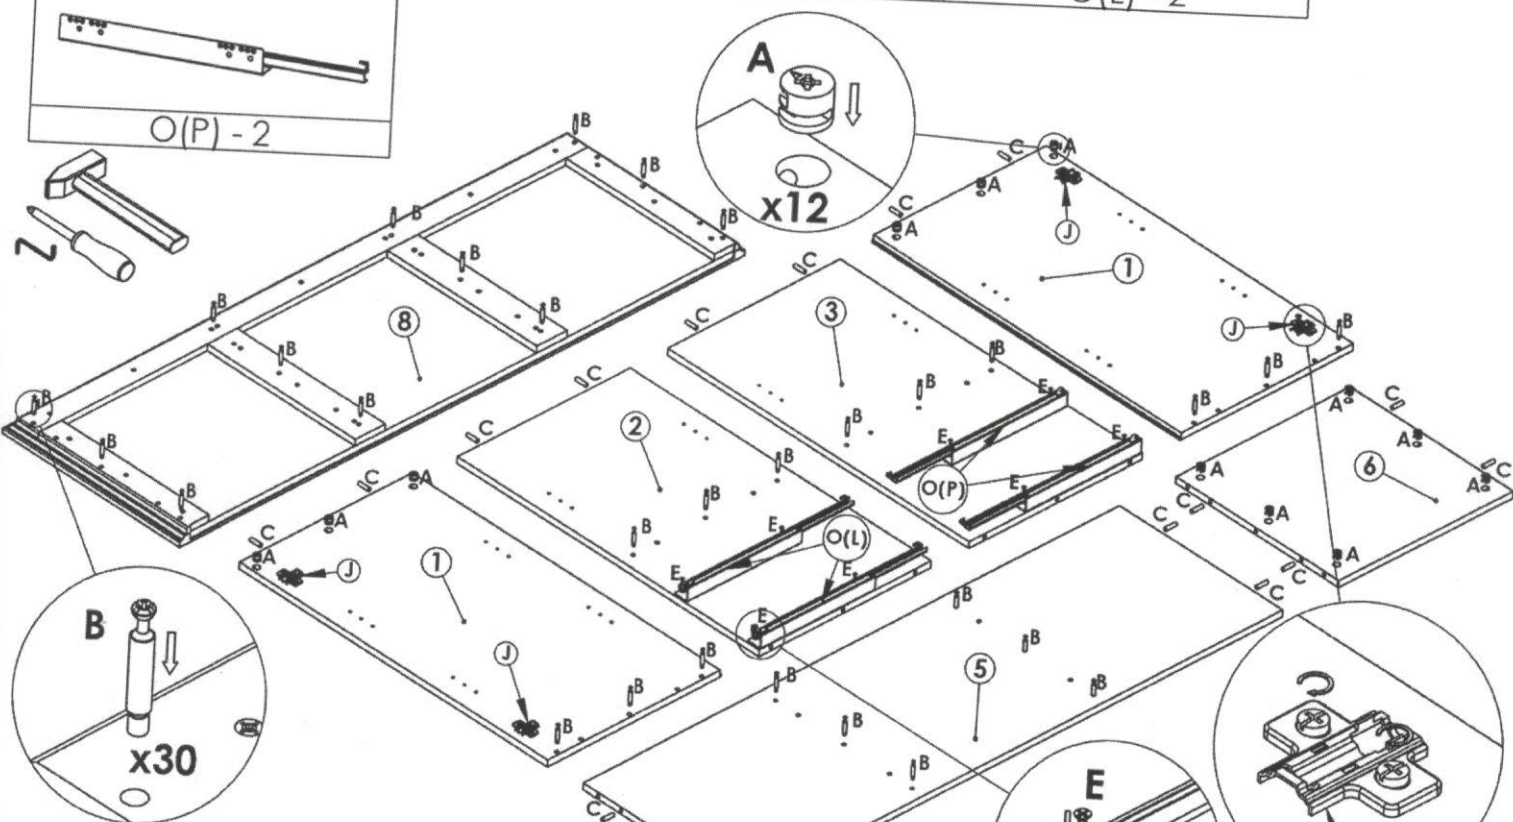


STEP-2




A-4	B-4	8x30 C-16

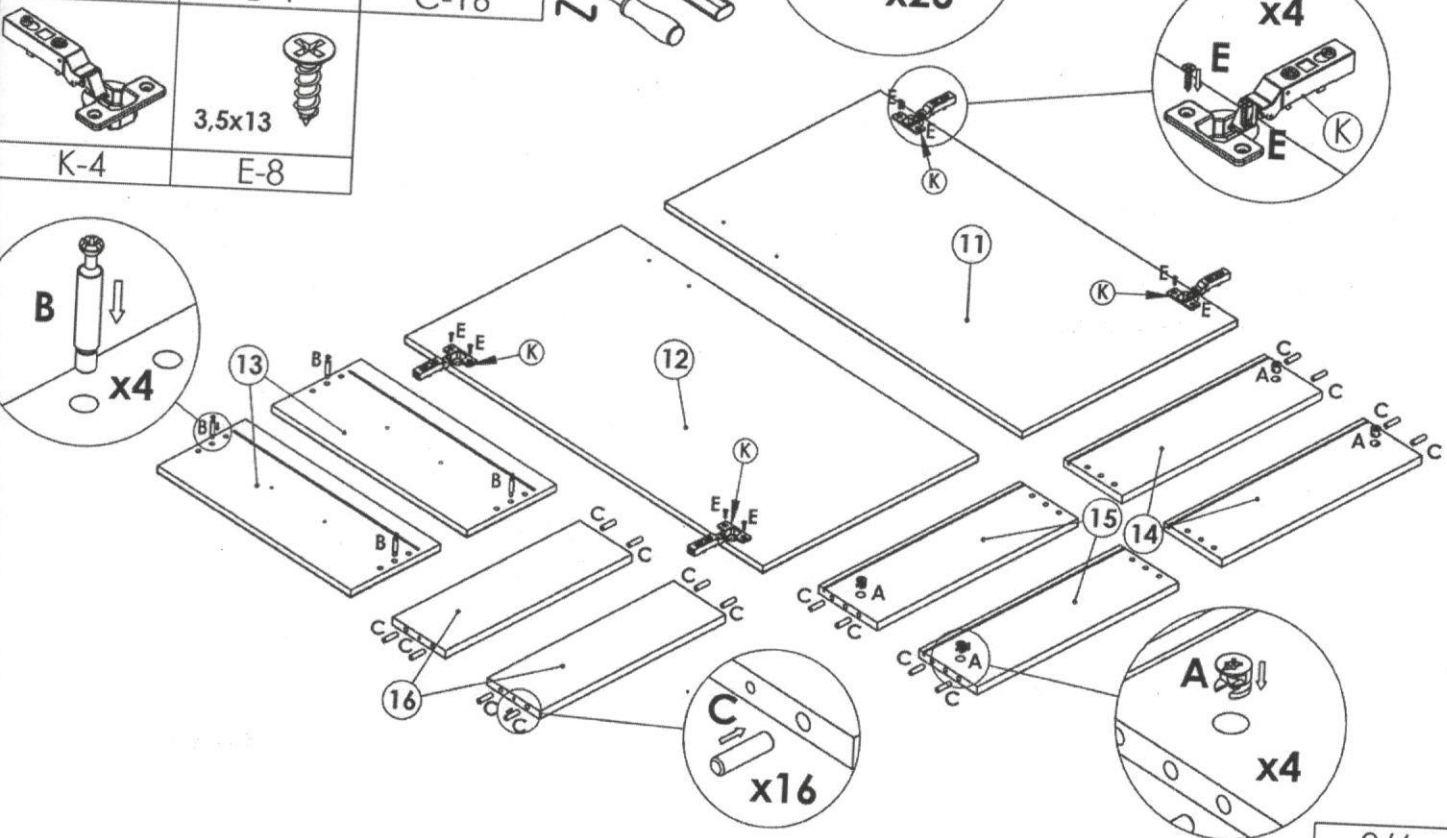




STEP-3

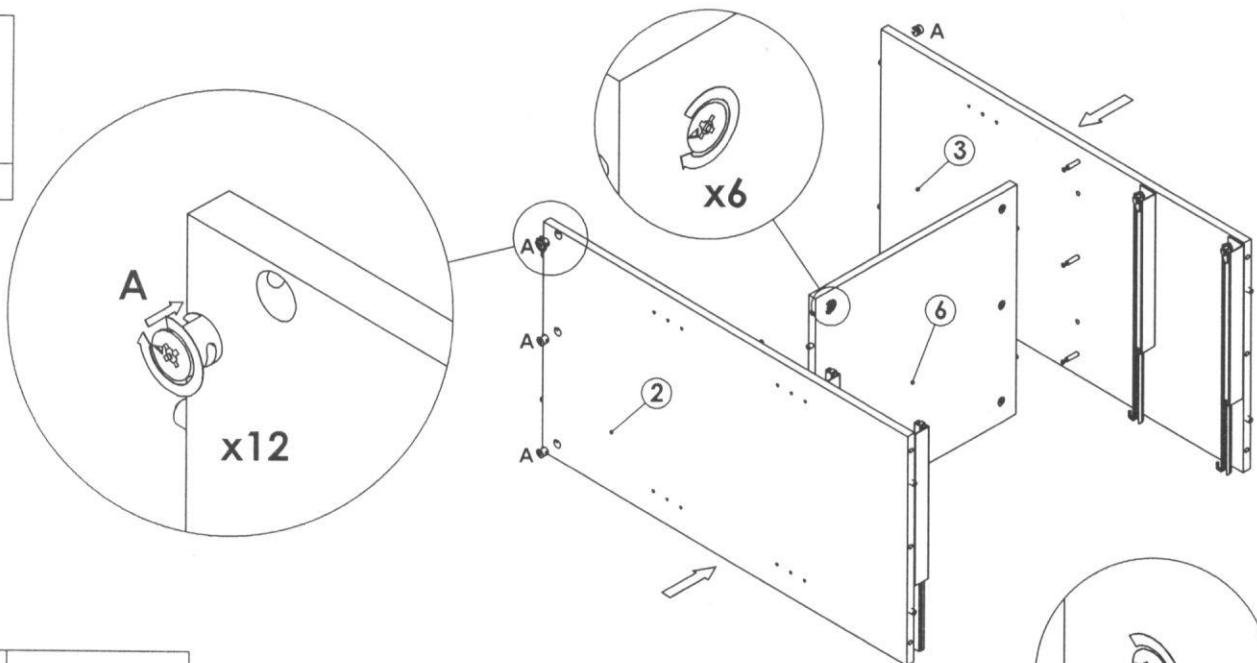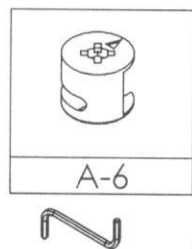


STEP-4

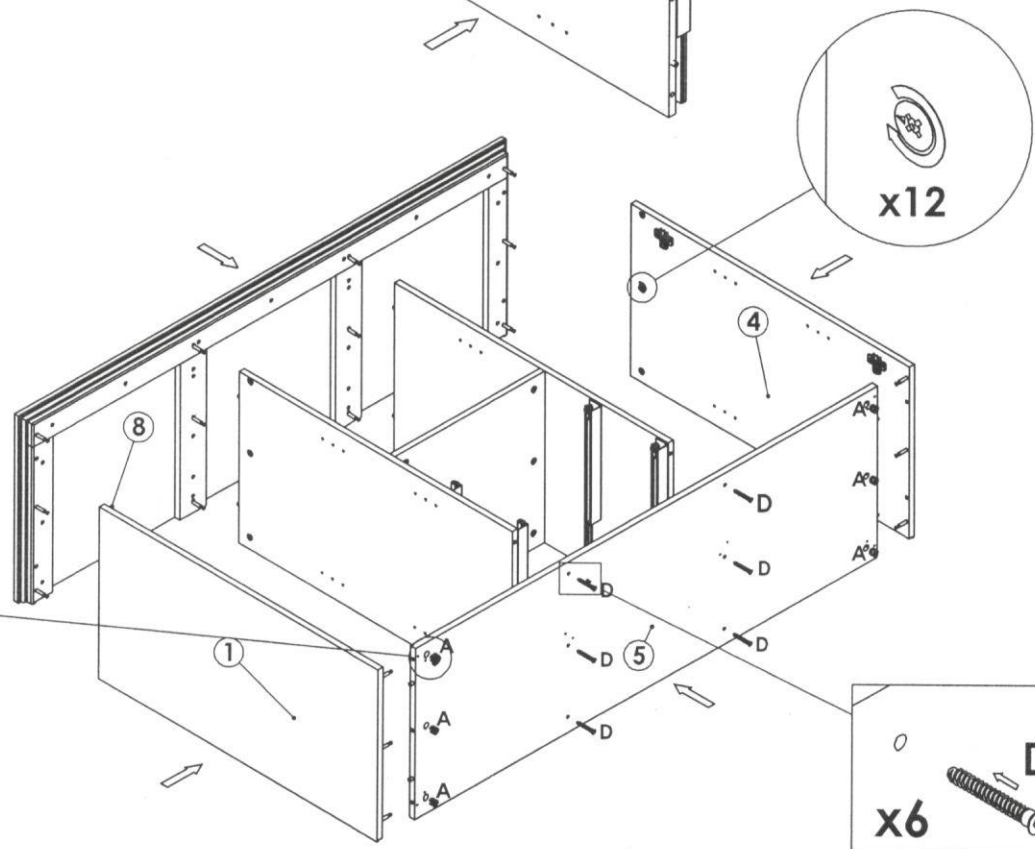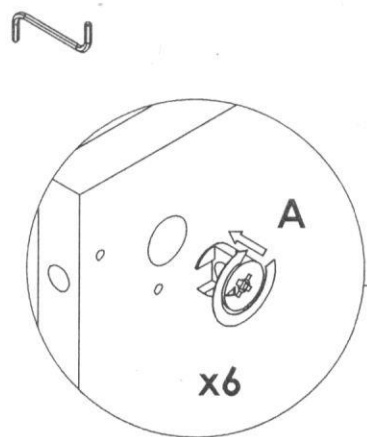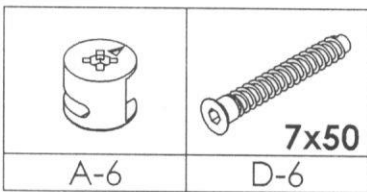






STEP-5

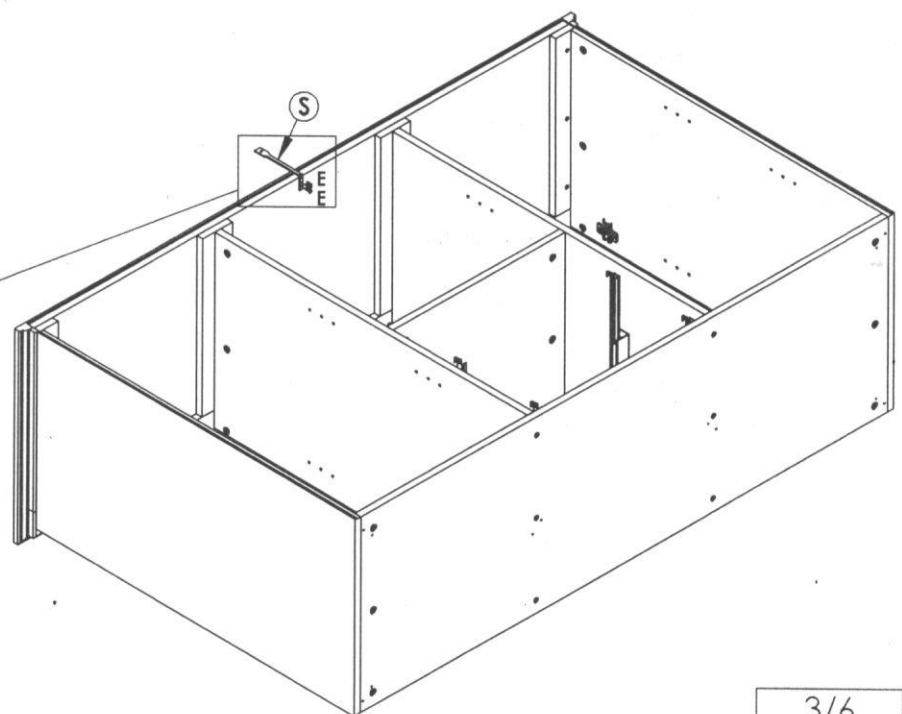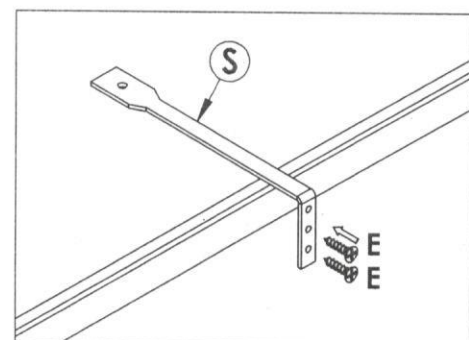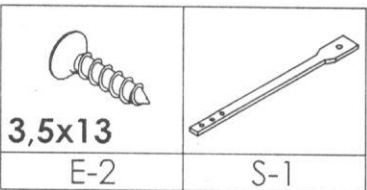



STEP-6

			
4x16 P-12	F-31	L-6	M-6





L1=L2

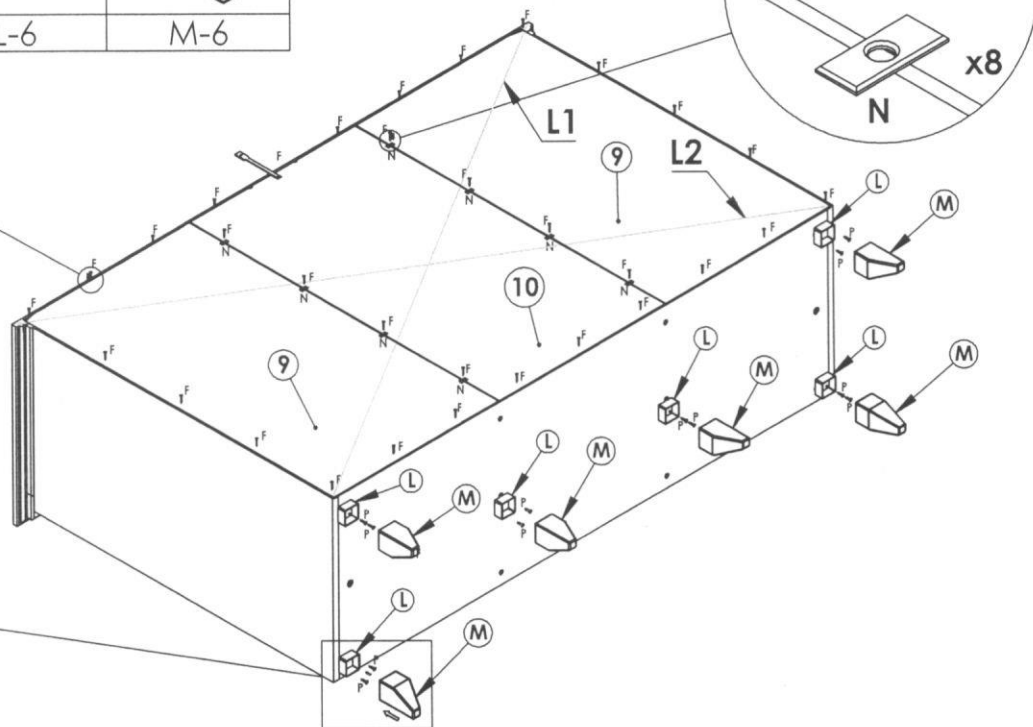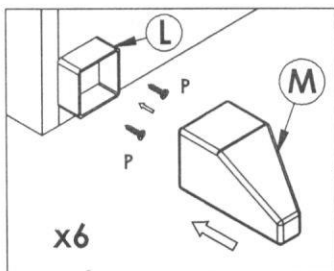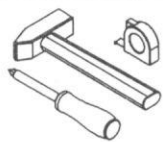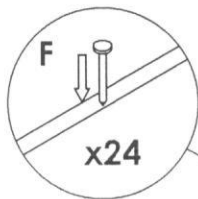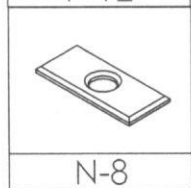


STEP-7

		
7x50 D-4	4x22 G-4	H-2

x2

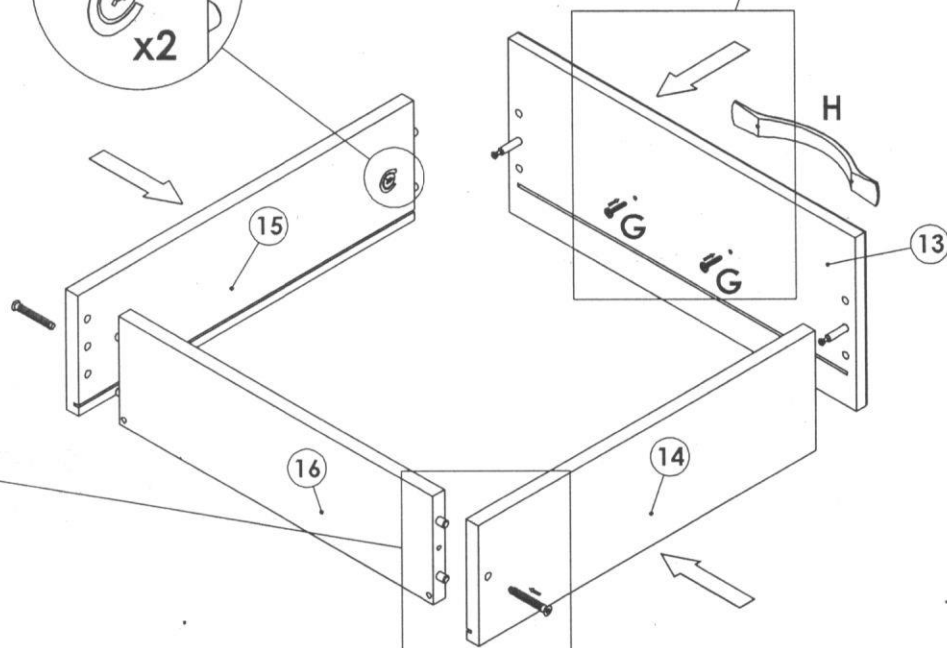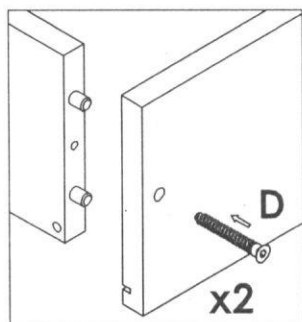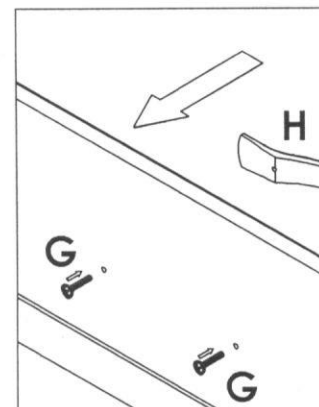
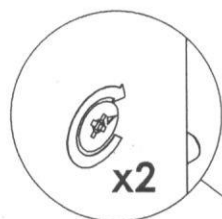


STEP-8





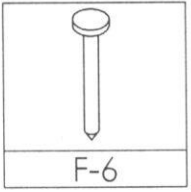


x2


L1=L2

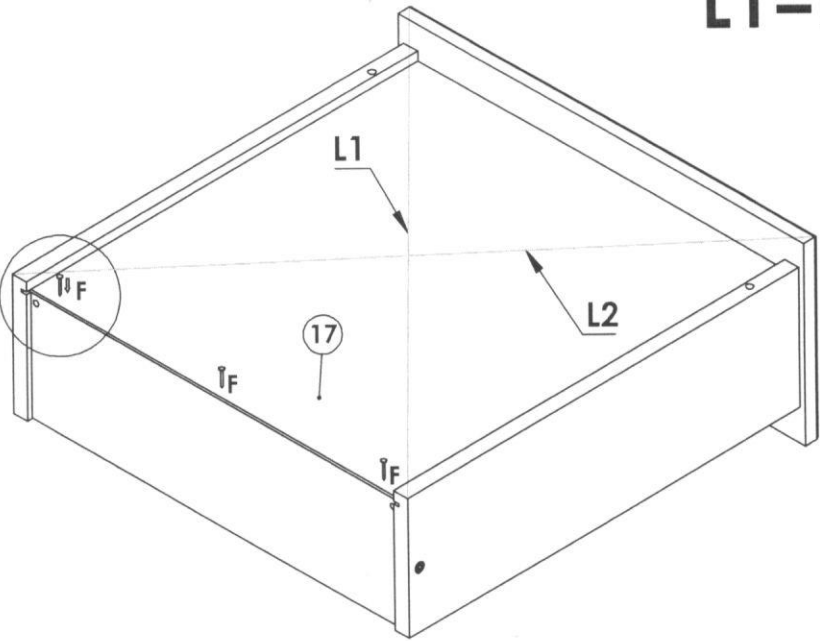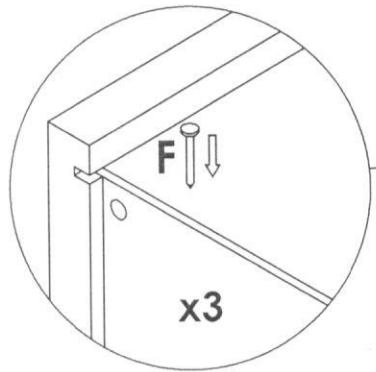

STEP-9

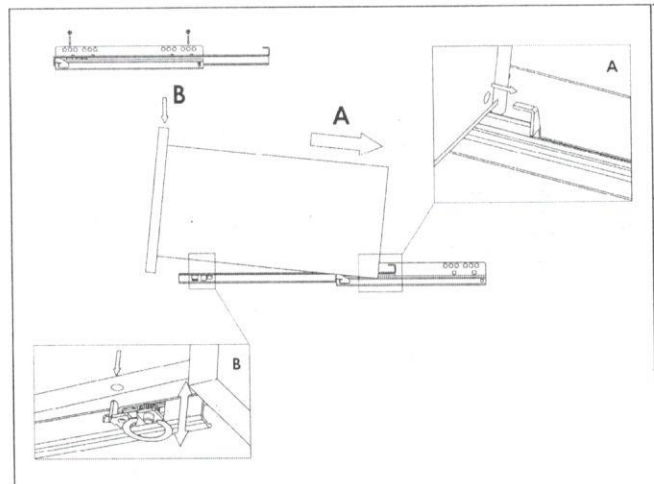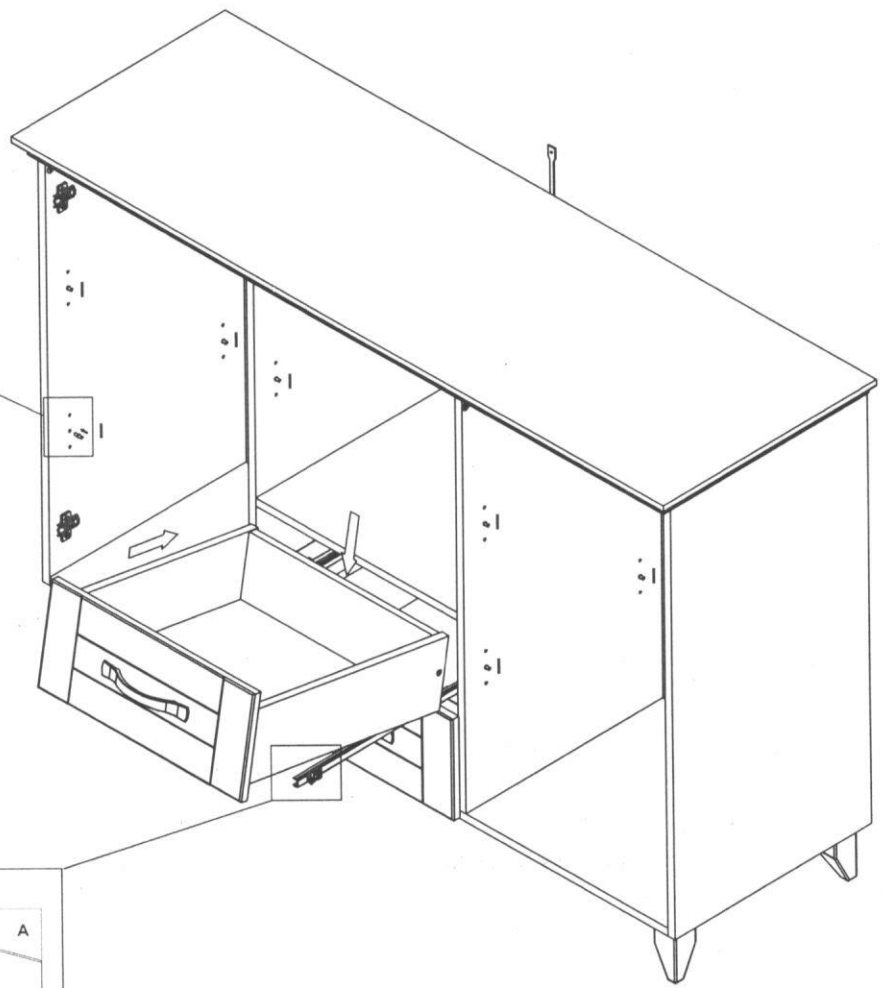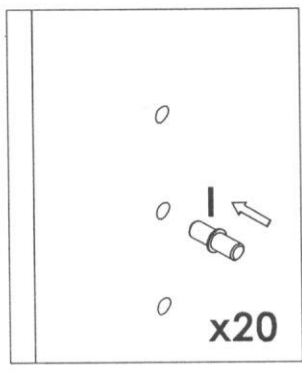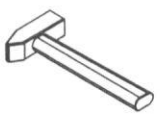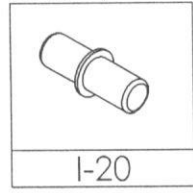

STEP-10

 4x22			
G-4	H-2	T-1	U-1

