



GORDIA K 3 D

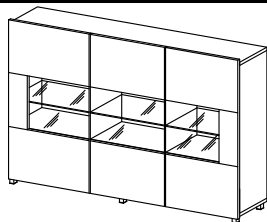

Instrukcja montażu Assembly instructions



No.	Stc.	L	W	T
1	1	1500	330	16
2	1	968	330	16
3	1	968	300	16
4	2	968	300	16
5	1	968	330	16
6	1	1500	330	16
7	4	496	340	16
8	3	478	300	16
9	3	478	300	16
10	3	476	300	4
11	1	1482	982	4
12	1	496	340	16
13	2	200	350	16
14	1	496	340	16
15	1	496	410	5
16	2	326	410	5

																			
6	12	12	12	28	28	44	16	8	8	44	24	8	14	14	1				

UWAGA ! WAŻNE !
KOLKI WBIAJAĆ JAK NA
PONIŻSZYM RYSUNKU
W KRAWĘDŹ ELEMENTU
11.0 mm

UWAGA !
ATTENTION !

