















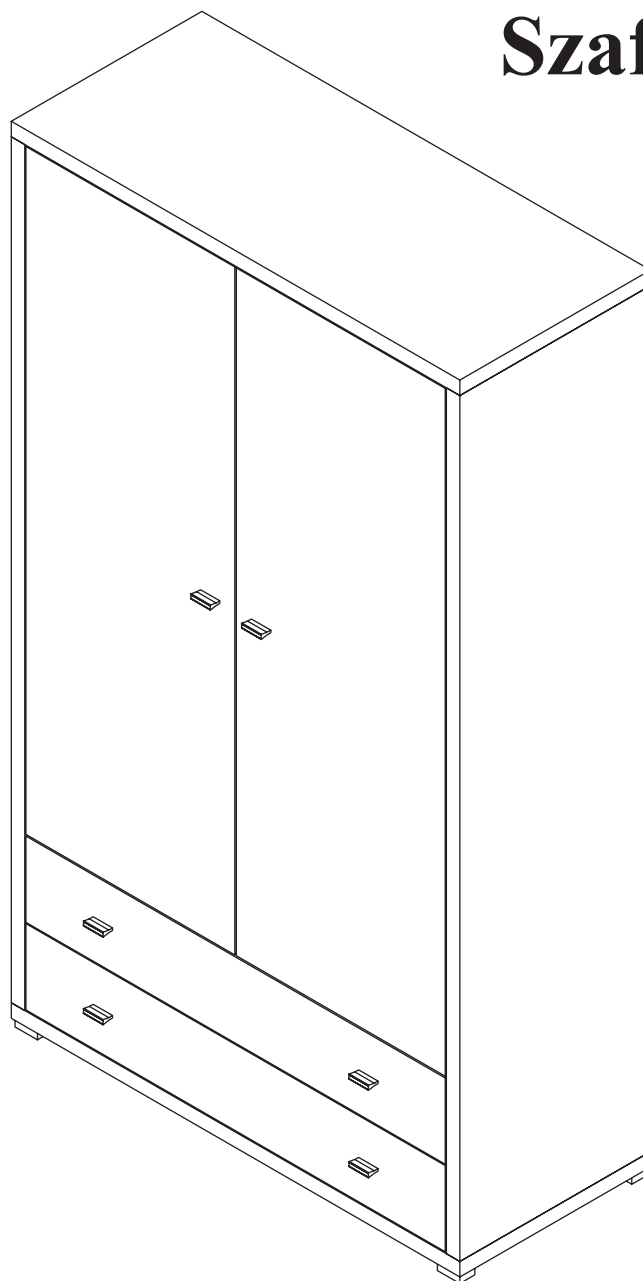



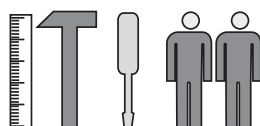
# KENDO K2

## Szafa 2 drz.






1  x16	2  x16	3  x16	4  8x35 x40	5  x2	6  3,5x16 x42
8  x80	9  x6	10  x8	11  x8	12  x16	13  4x28 x12
14  x1	15  x4	7  x1	16  x4	17  x1	
















Czas mont. - 120 min.











# KENDO K2











## Szafa 2 drz.










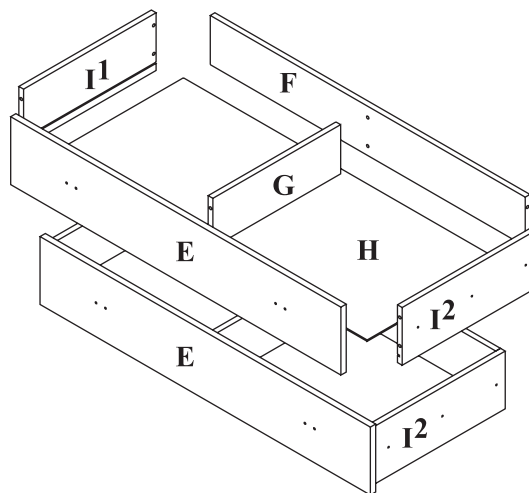
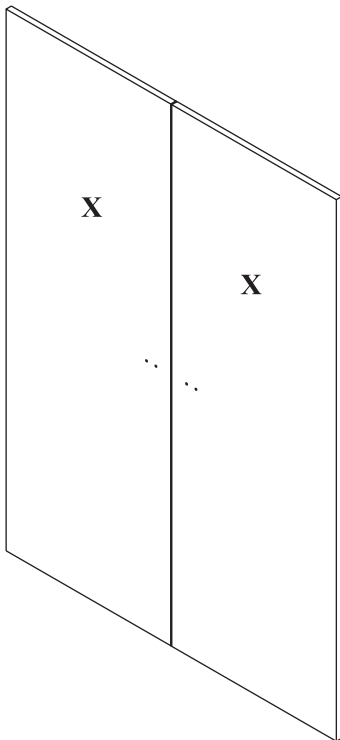
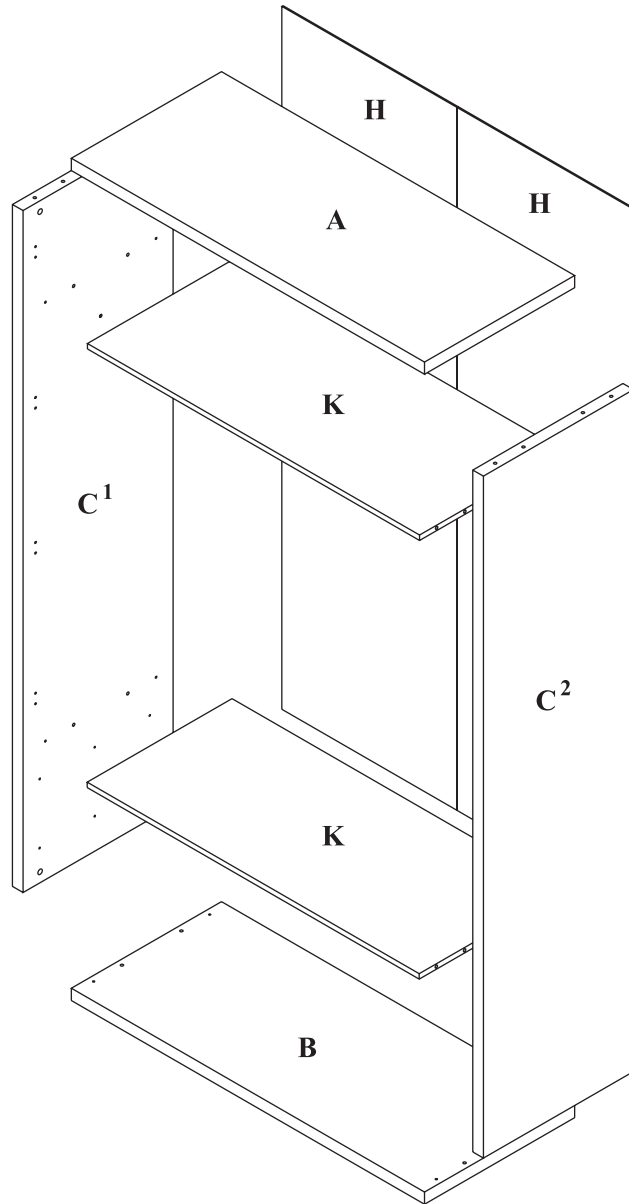


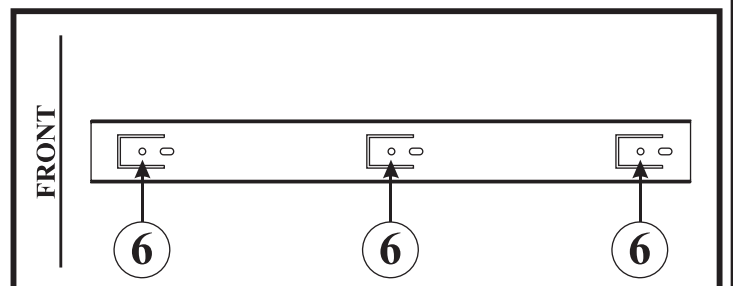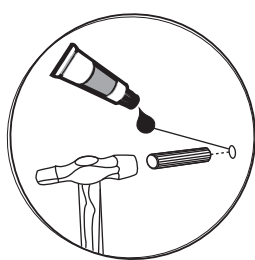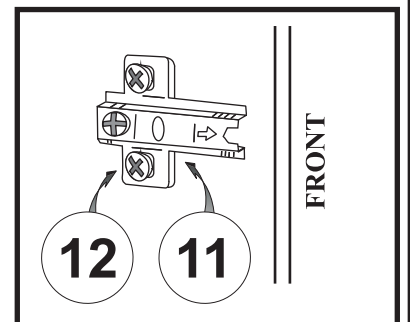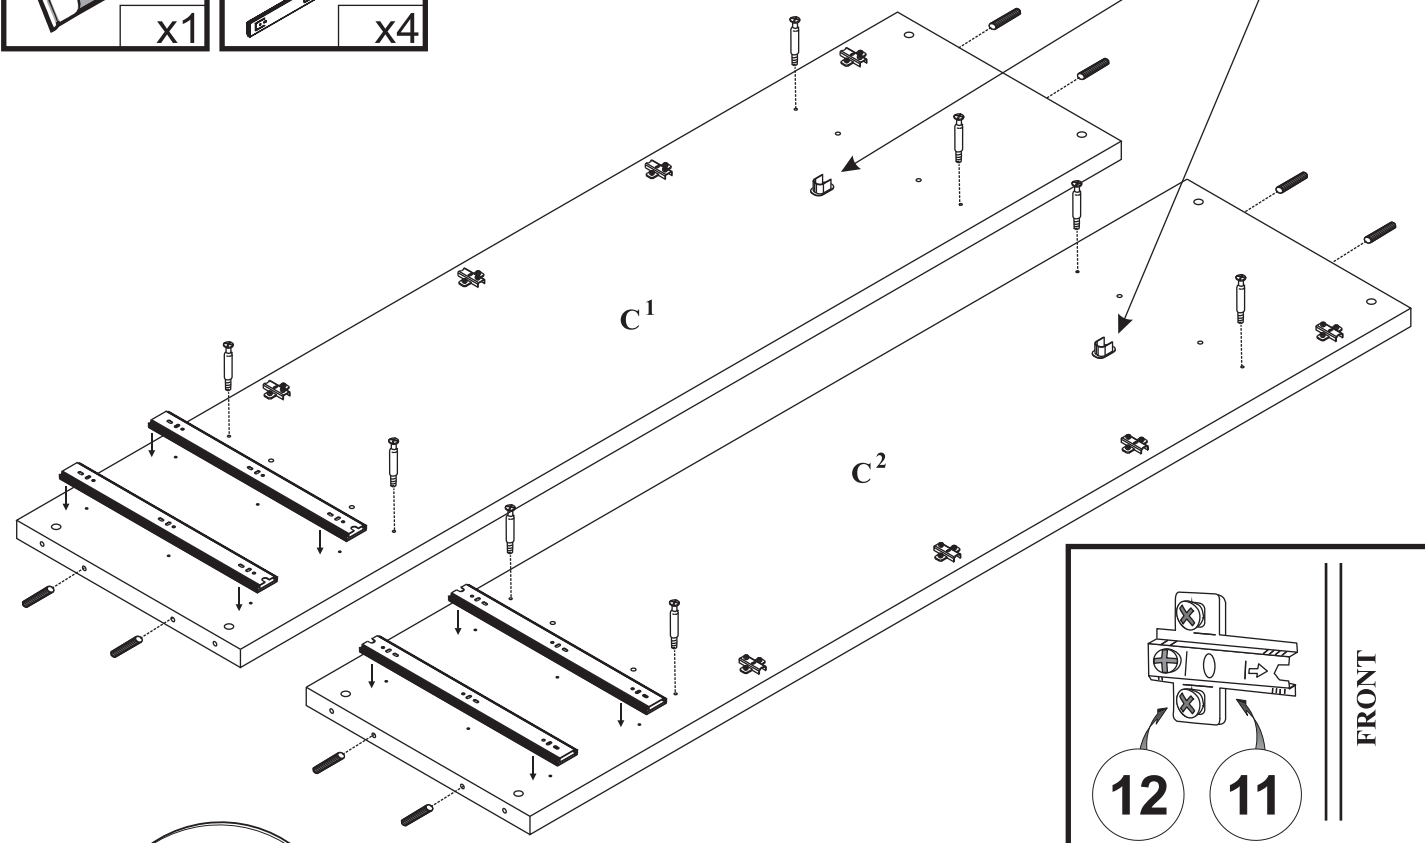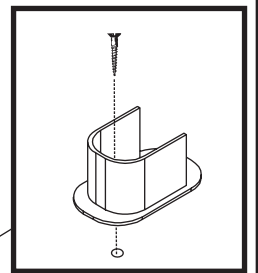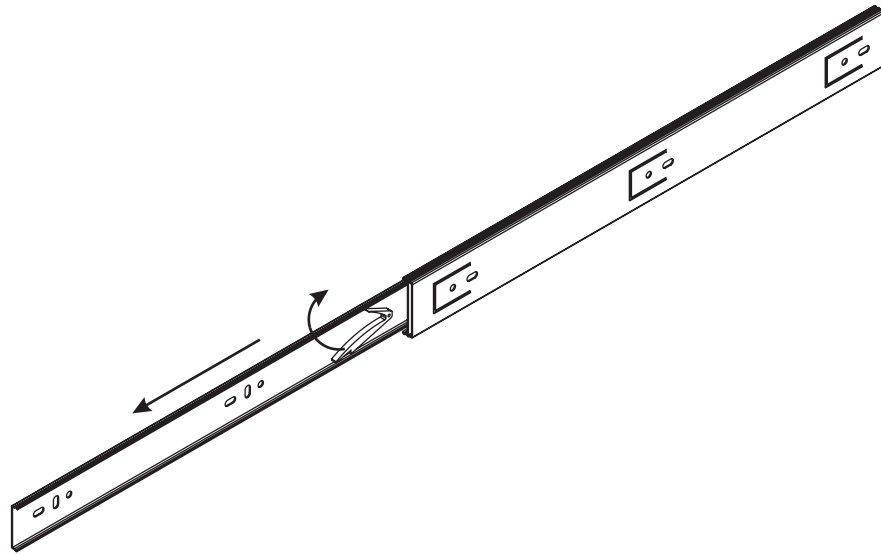

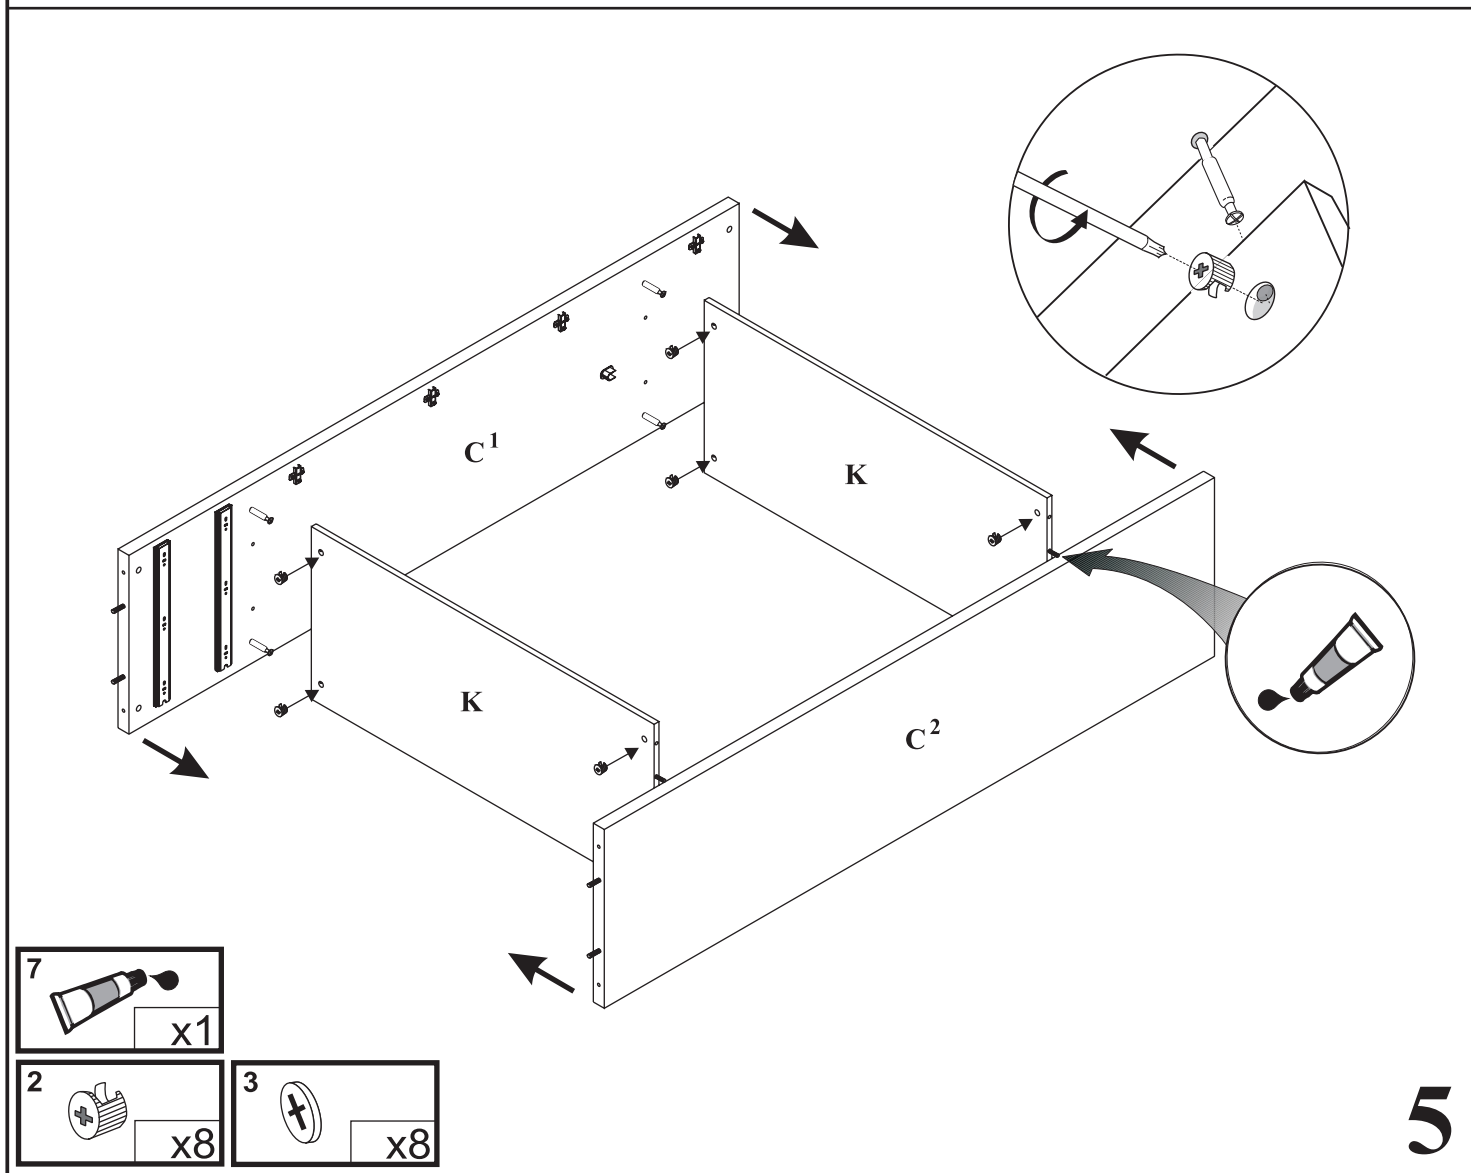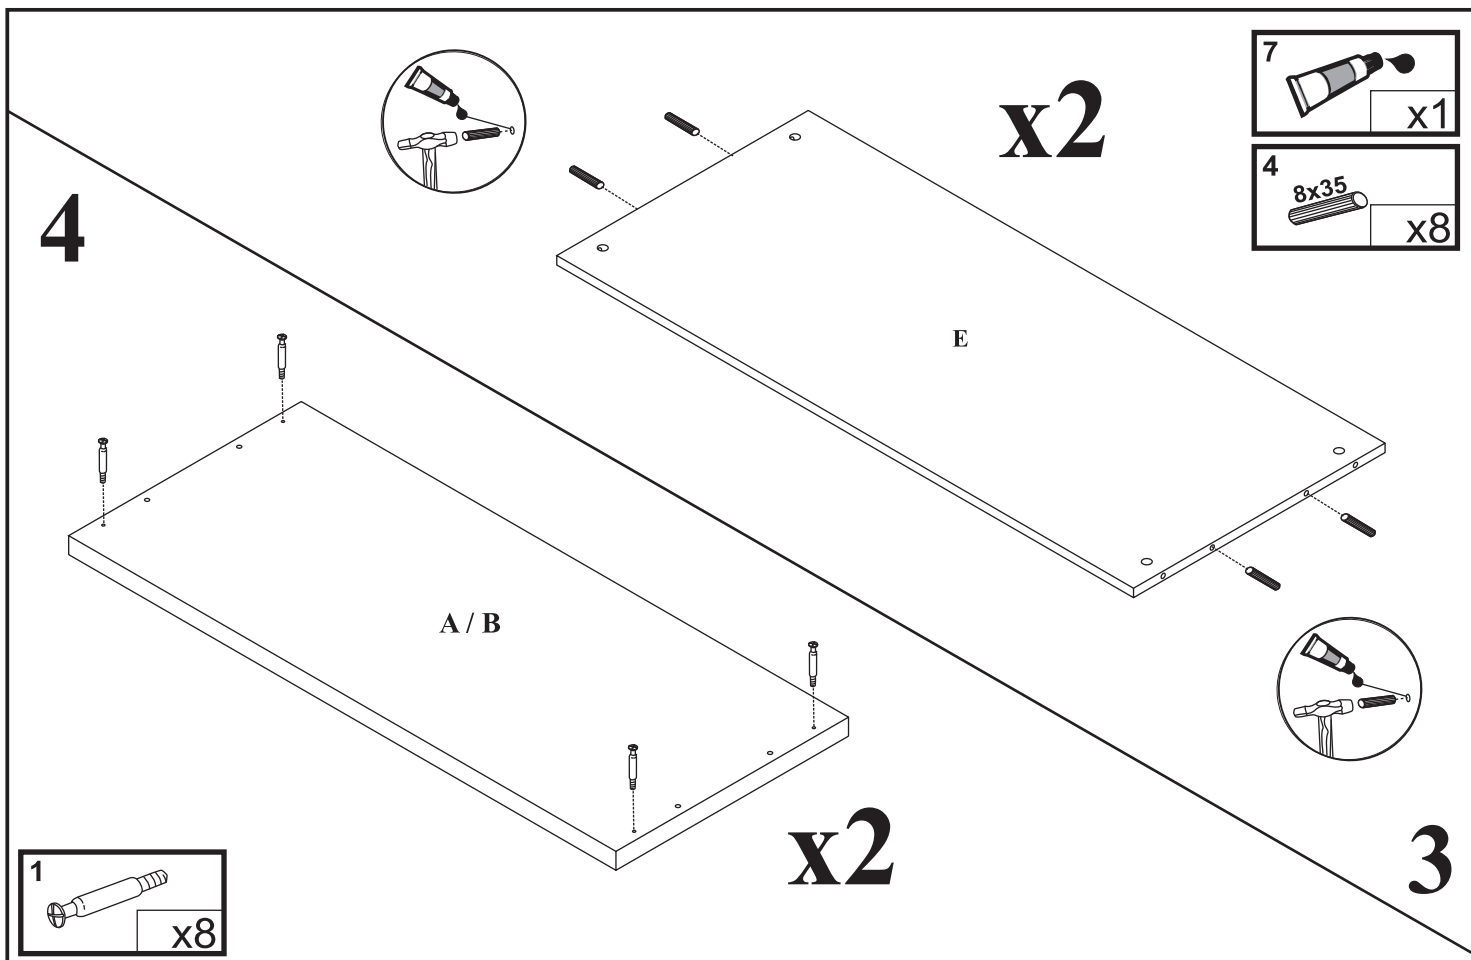

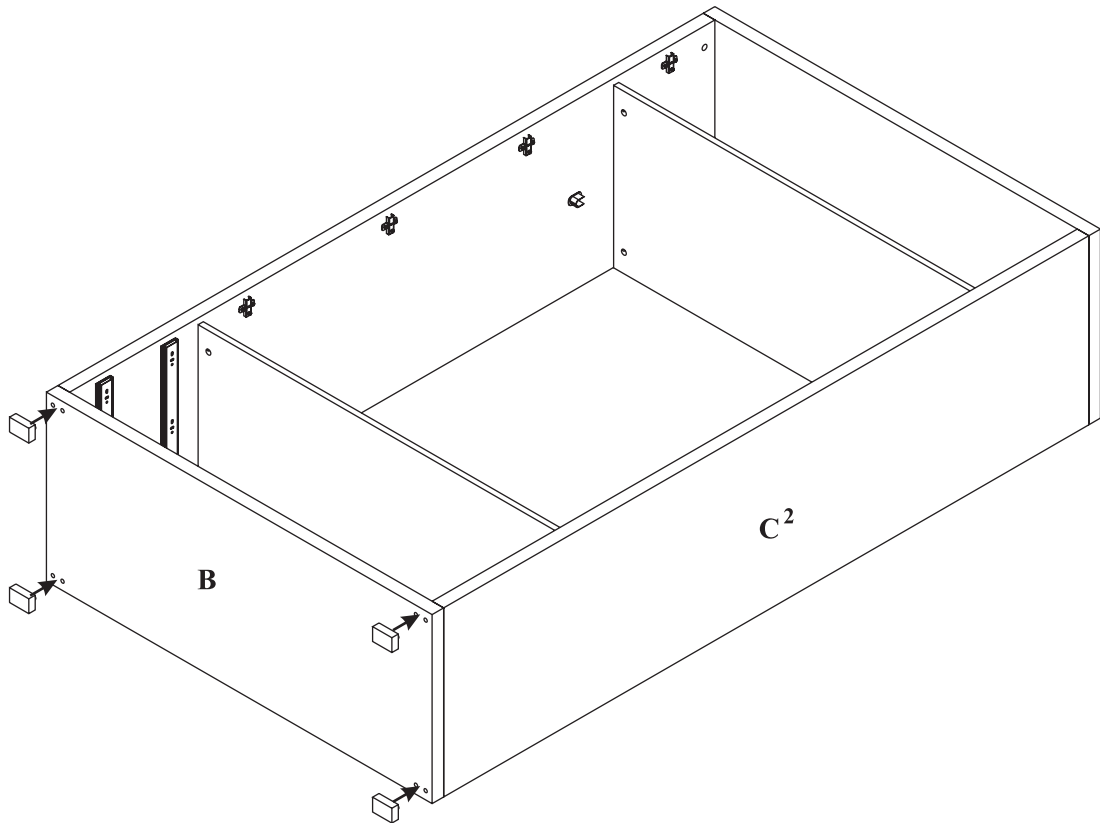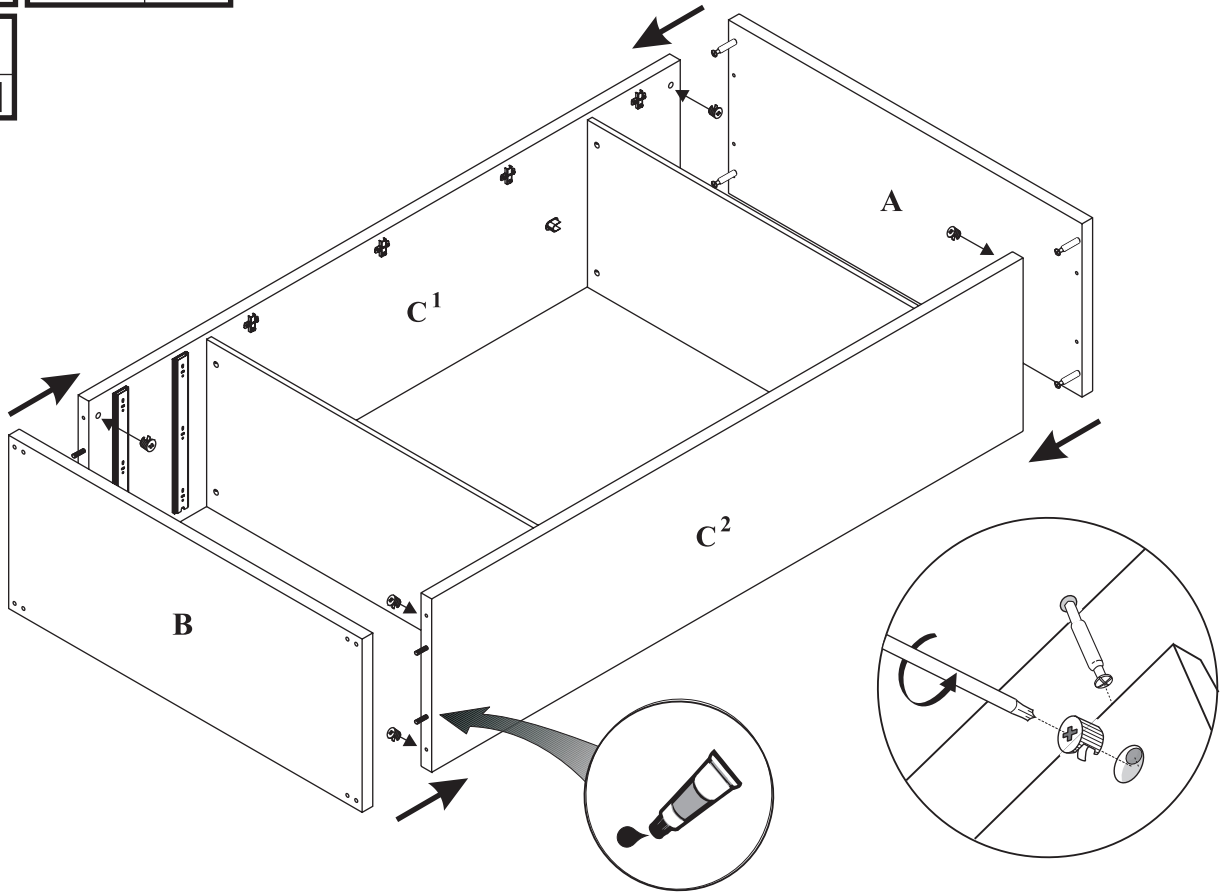




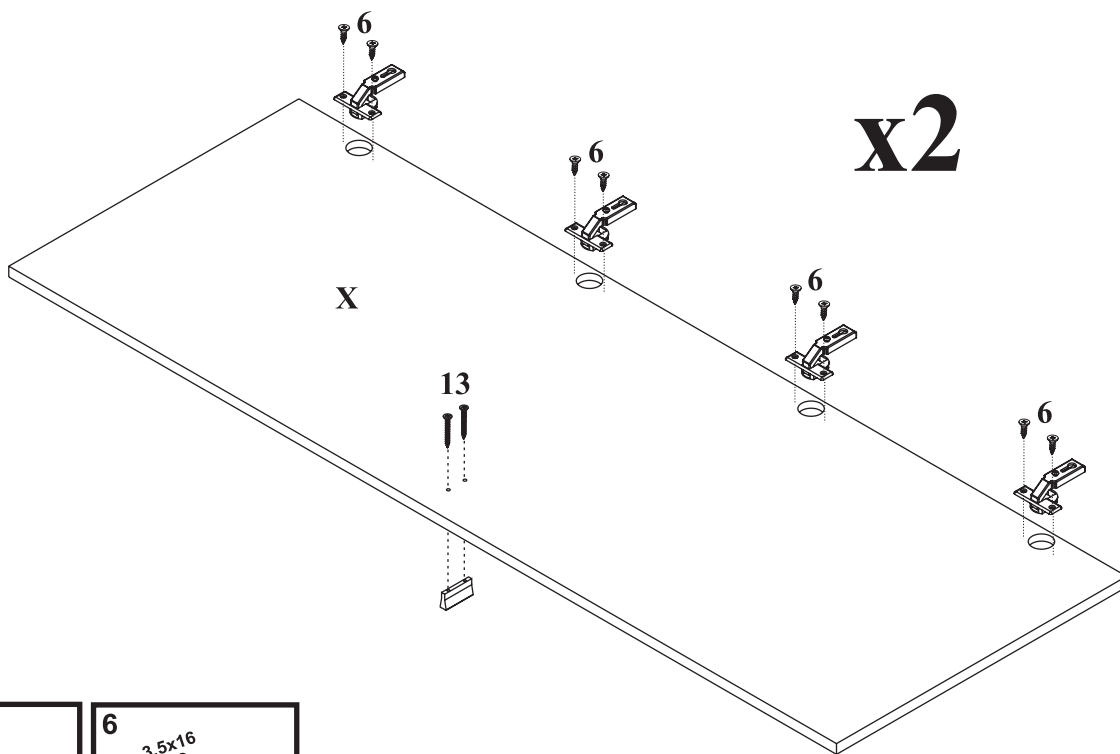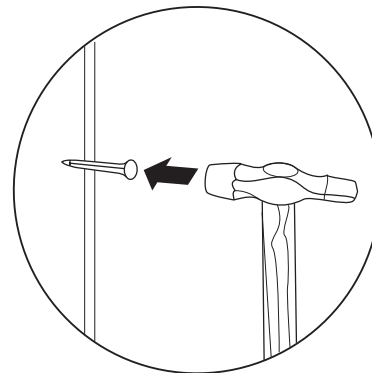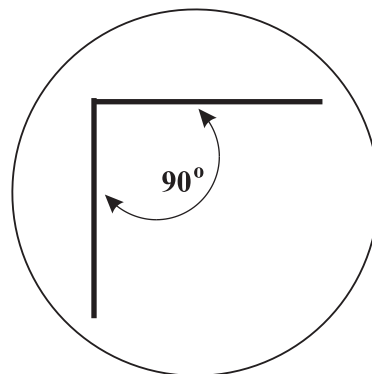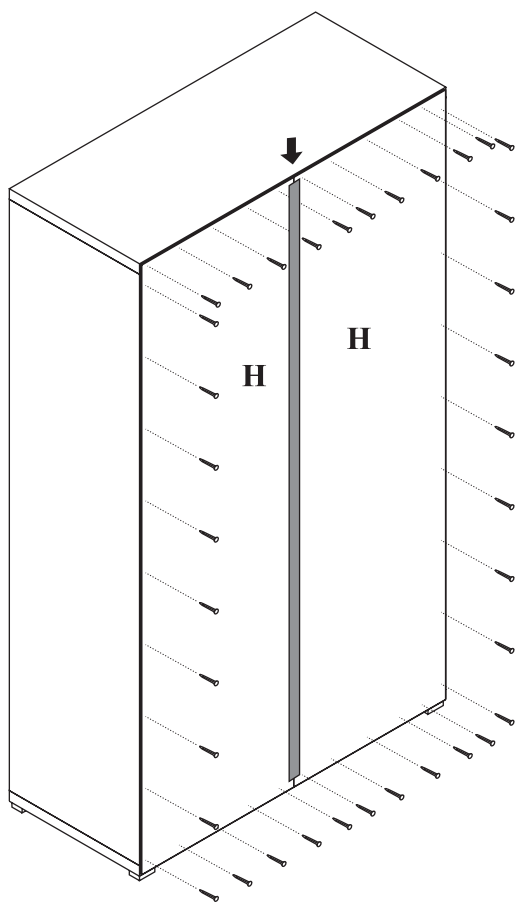

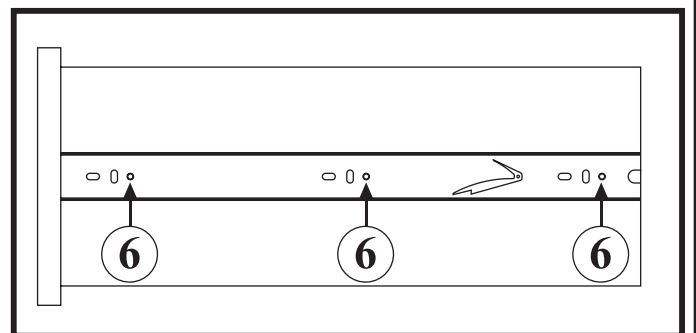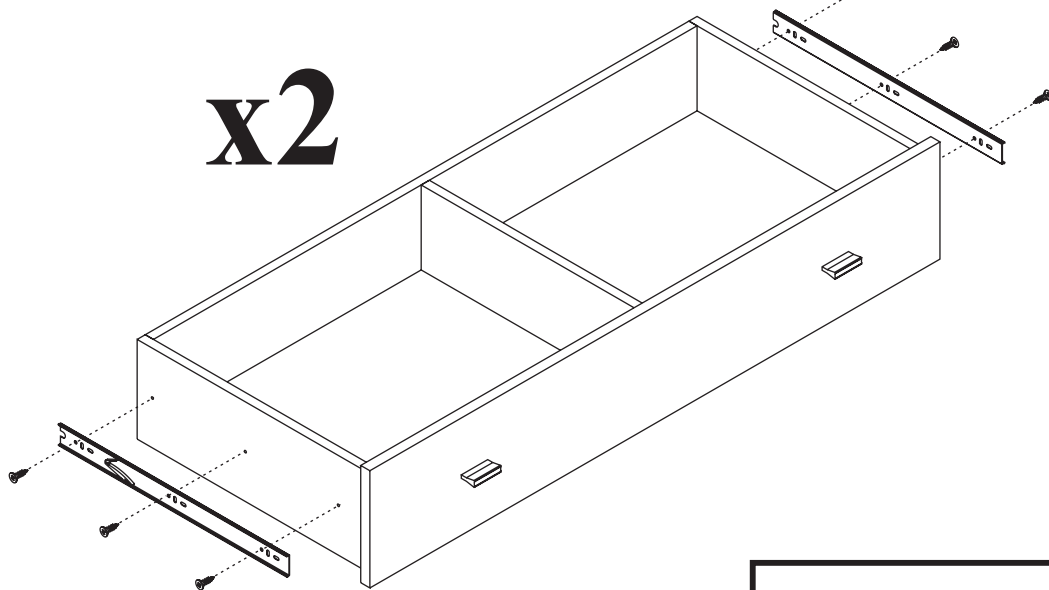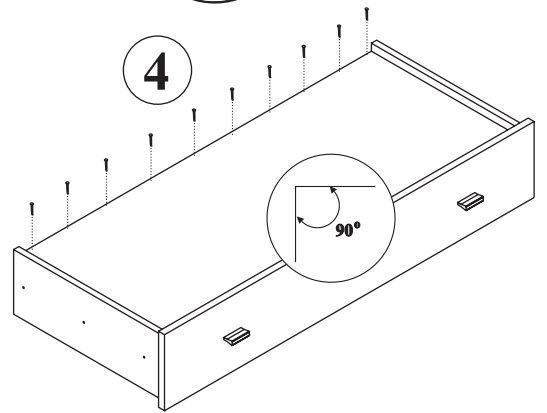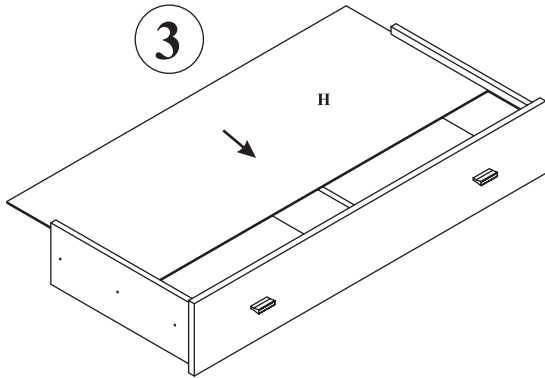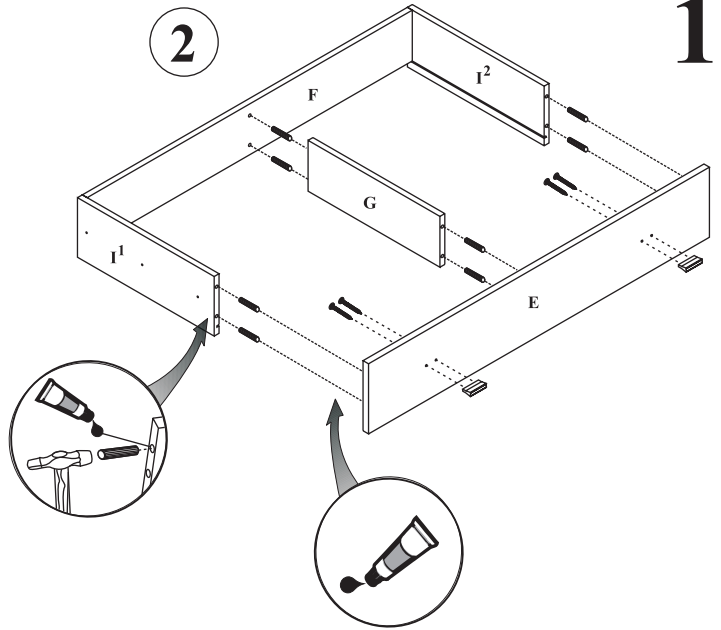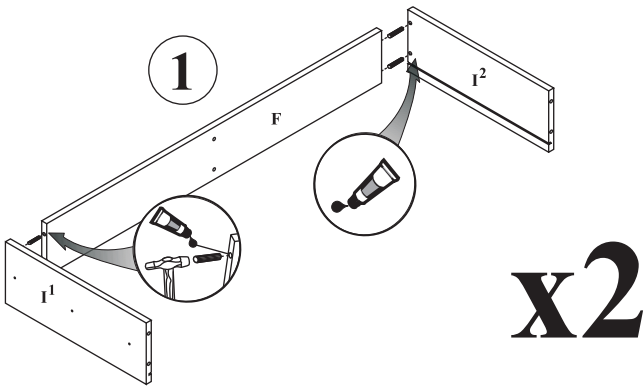



12

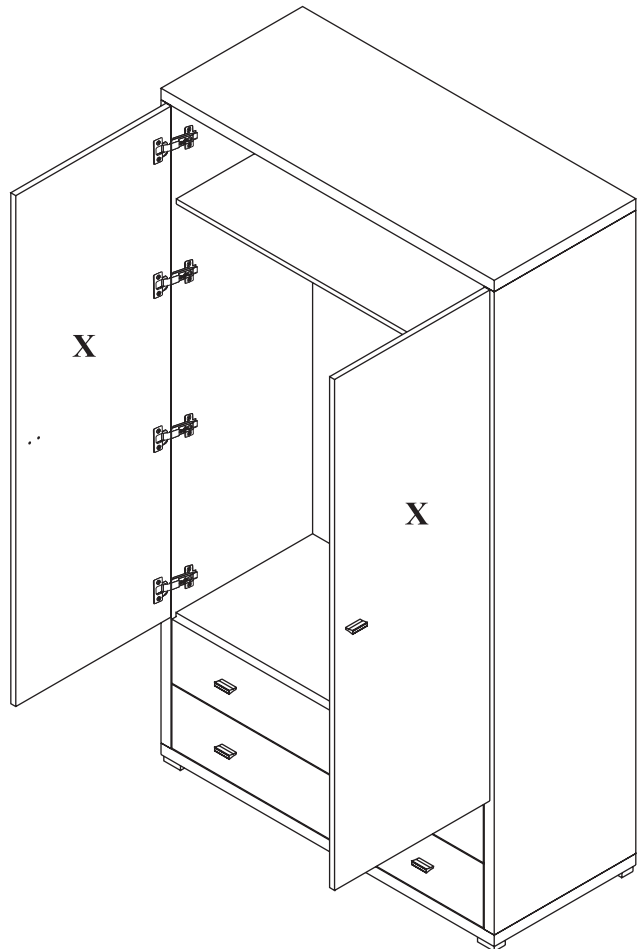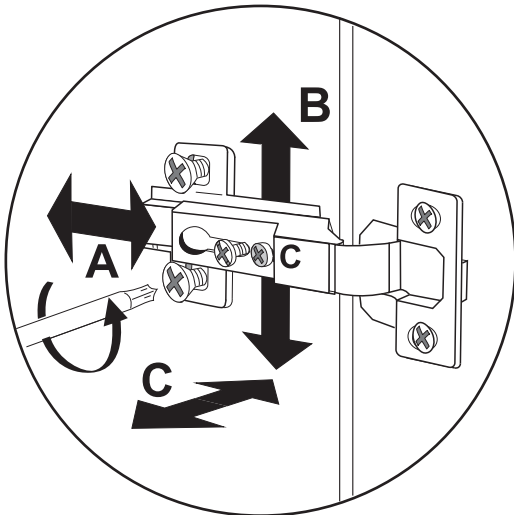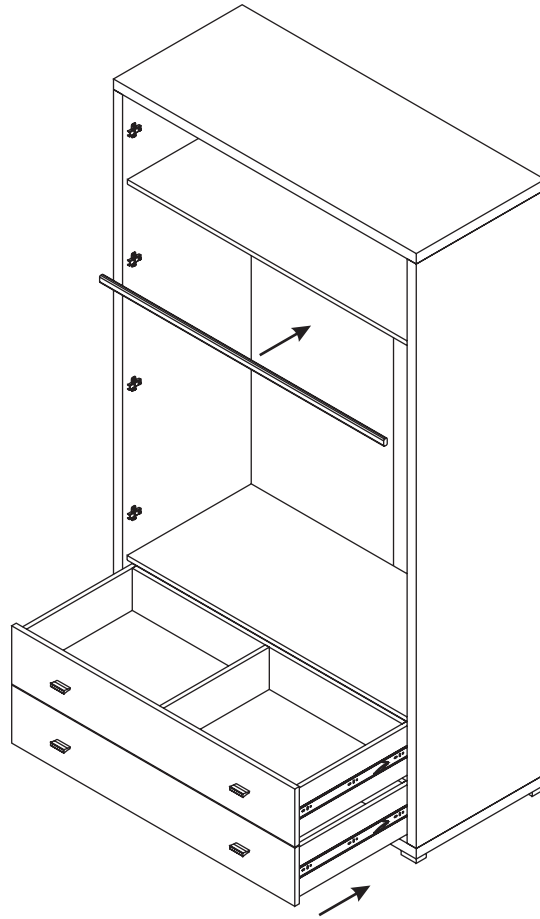

13