



KOLDER 2 D 2 SZ

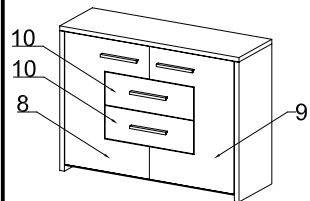

Instrukcja montażu
Assembly instructions



No.	Stc.	L	W	T
1	1	1000	390	38
2	2	924	367	16
3	1	390	367	16
4	1	924	367	16
5	1	865	390	38
6	1	865	390	38
7	1	964	405	4
8	1	812	458	16
9	1	812	458	16
10	2	514	200	16
11	2	350	160	16
12	2	445	142	16
13	2	350	160	16
14	2	357	460	4
15	2	458	200	16
16	2	200	412	16
17	2	458	200	16
18	1	964	225	4
19	1	964	203	4

CAUTION
STICKING PINS HOW TO DRAWING
ACHTUNG
DAS FESTHALTEN PINS
HOW TO ZEICHNUNG
UWAGA ! WAŻNE !
KOLKI WBIJAĆ JAK NA
PONIŻSZYM RYSUNKU
W KRAWĘDZ ELEMENTU
11.0 mm
UWAGA !
ATTENTION !

8	2	2	30	8	40	32	48	24	40	2	4	4	2	2	6			

Wypoziomować miejsce docelowe
Level the target
Nivellieren das Ziel

