


KOLDER 3 D 2 SZ

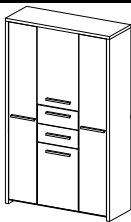


Instrukcja montażu Assembly instructions



CAUTION
STICKING PINS HOW TO
DRAWING

ACHTUNG
DAS FESTHALTEN PINS
HOW TO ZEICHNUNG

UWAGA ! WAŻNE !
KOLKI WBIJAĆ JAK NA
PONIŻSZYM RYSUNKU



UWAGA !
ATTENTION !

No.	Stc.	L	W	T
1	1	1460	590	38
2	1	1384	567	16
3	1	2000	590	38
4	1	1934	567	16
5	1	1934	567	16
6	1	2000	590	38
7	2	567	461	16
8	2	567	430	16
9	2	567	430	16
10	2	461	150	16
11	2	1947	458	16
12	1	768	458	16
13	2	768	458	16
14	2	1970	488	4
15	1	1970	445	4
16	2	500	160	16
17	2	500	160	16
18	2	373	142	16
19	2	508	387	4
20	2	458	200	16

8	10	100	12	78	44	44	36	44	4	6	10	6	2	2	4	16	
													4	2	2	1	

