



KOLDER ŁÓŻKO

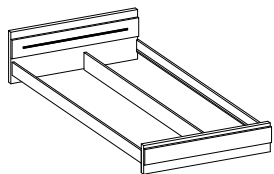


Instrukcja montażu
Assembly instructions



M6.0X70 8 M	8.0X35 12 D	A 4	B 4	F 8	M6.0X45 16 H	4.0X25 15 G
-------------------	-------------------	--------	--------	--------	--------------------	-------------------

CAUTION
STICKING PINS HOW TO
DRAWING

ACHTUNG
DAS FESTHALTEN PINS
HOW TO ZEICHNUNG
UWAGA ! WAŻNE !
KOLKI WBIJAĆ JAK NA
PONIŻSZYM RYSUNKU
W KRAWĘDZ ELEMENTU



UWAGA !
ATTENTION !

No.	Stc.	L	W	T
1	1	1680	1030	38
2	1	1680	500	38
3	2	2000	350	38
4	1	2000	300	16
5	3	2000	650	16
6	1	1680	400	15
7	1	1680	370	15
8	1	1680	400	15
9	1	1680	370	15

