




www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

INSTRUKCJA MONTAŻU

KSAWERY 01 N

↑ 200 → 55 ↗ 41

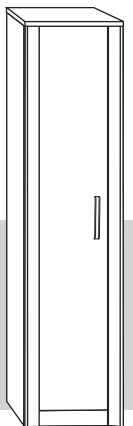

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :

x 16 KK 8/32	x 12 KT 6,3/50	x 12 ZAN	x 60 GZ 1,4/25	x 4 SG 8/8	x 12 MD	x 12 ZAM	x 8 PA Ø5
x 22 WT 3,5x16	x 2 WT 4x27	x 6 WT 3,5x20	x 4 WT 3x10	x 2 ZPP	x 2 ZPL	x 1 UTO	x 3 WK 2N
x 3 ZPR	x 3 PK H-0	x 6 WE 6,3x30	x 4 KT 50	x 3 DPP 03	x 1 klej / glue / kleber / lepidlo / lepidlo / клей / klíjaj	x 1 kluczyk / key / schlüssel / klíč / kľúč / ключ / raktas	x 1 Ø35 ZA35

do montażu potrzebne są:

are needed for assembly:


sind erforderlich für die montage:


jsou potřebné pro montáž:




sú potrebné pre montáž:


которые необходимы для сборки:

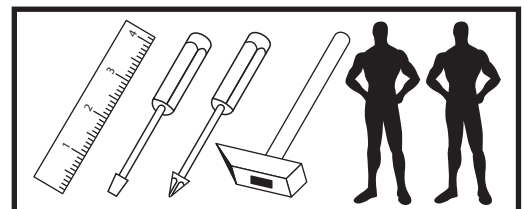
Surinkimui reikės

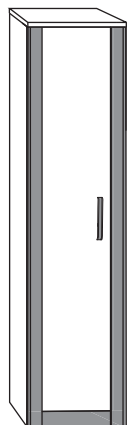




	CODE			
1	KSAWERY01_01	550	405	1
2	KSAWERY01_02	1970	368	1
3	KSAWERY01_03	1970	368	1
4	KSAWERY01_04	508	352	2
5	KSAWERY01_05	507	340	2
6	KSAWERY01_06	508	60	1
7	KSAWERY01_07	397	1907	1
8	KSAWERY01_08	508	124	1
9	KSAWERY01HDF_01	1925	267	2
10	KSAWERY01N_01_MDF	1968	70	2
11				
12				
13				
14				
15				

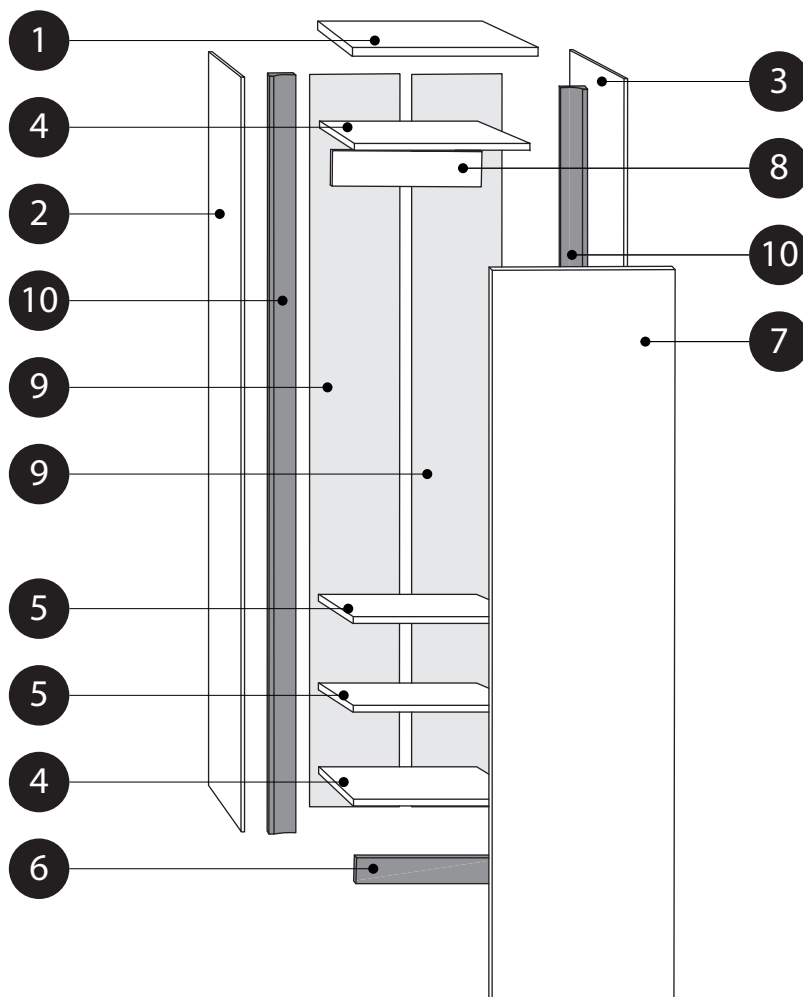

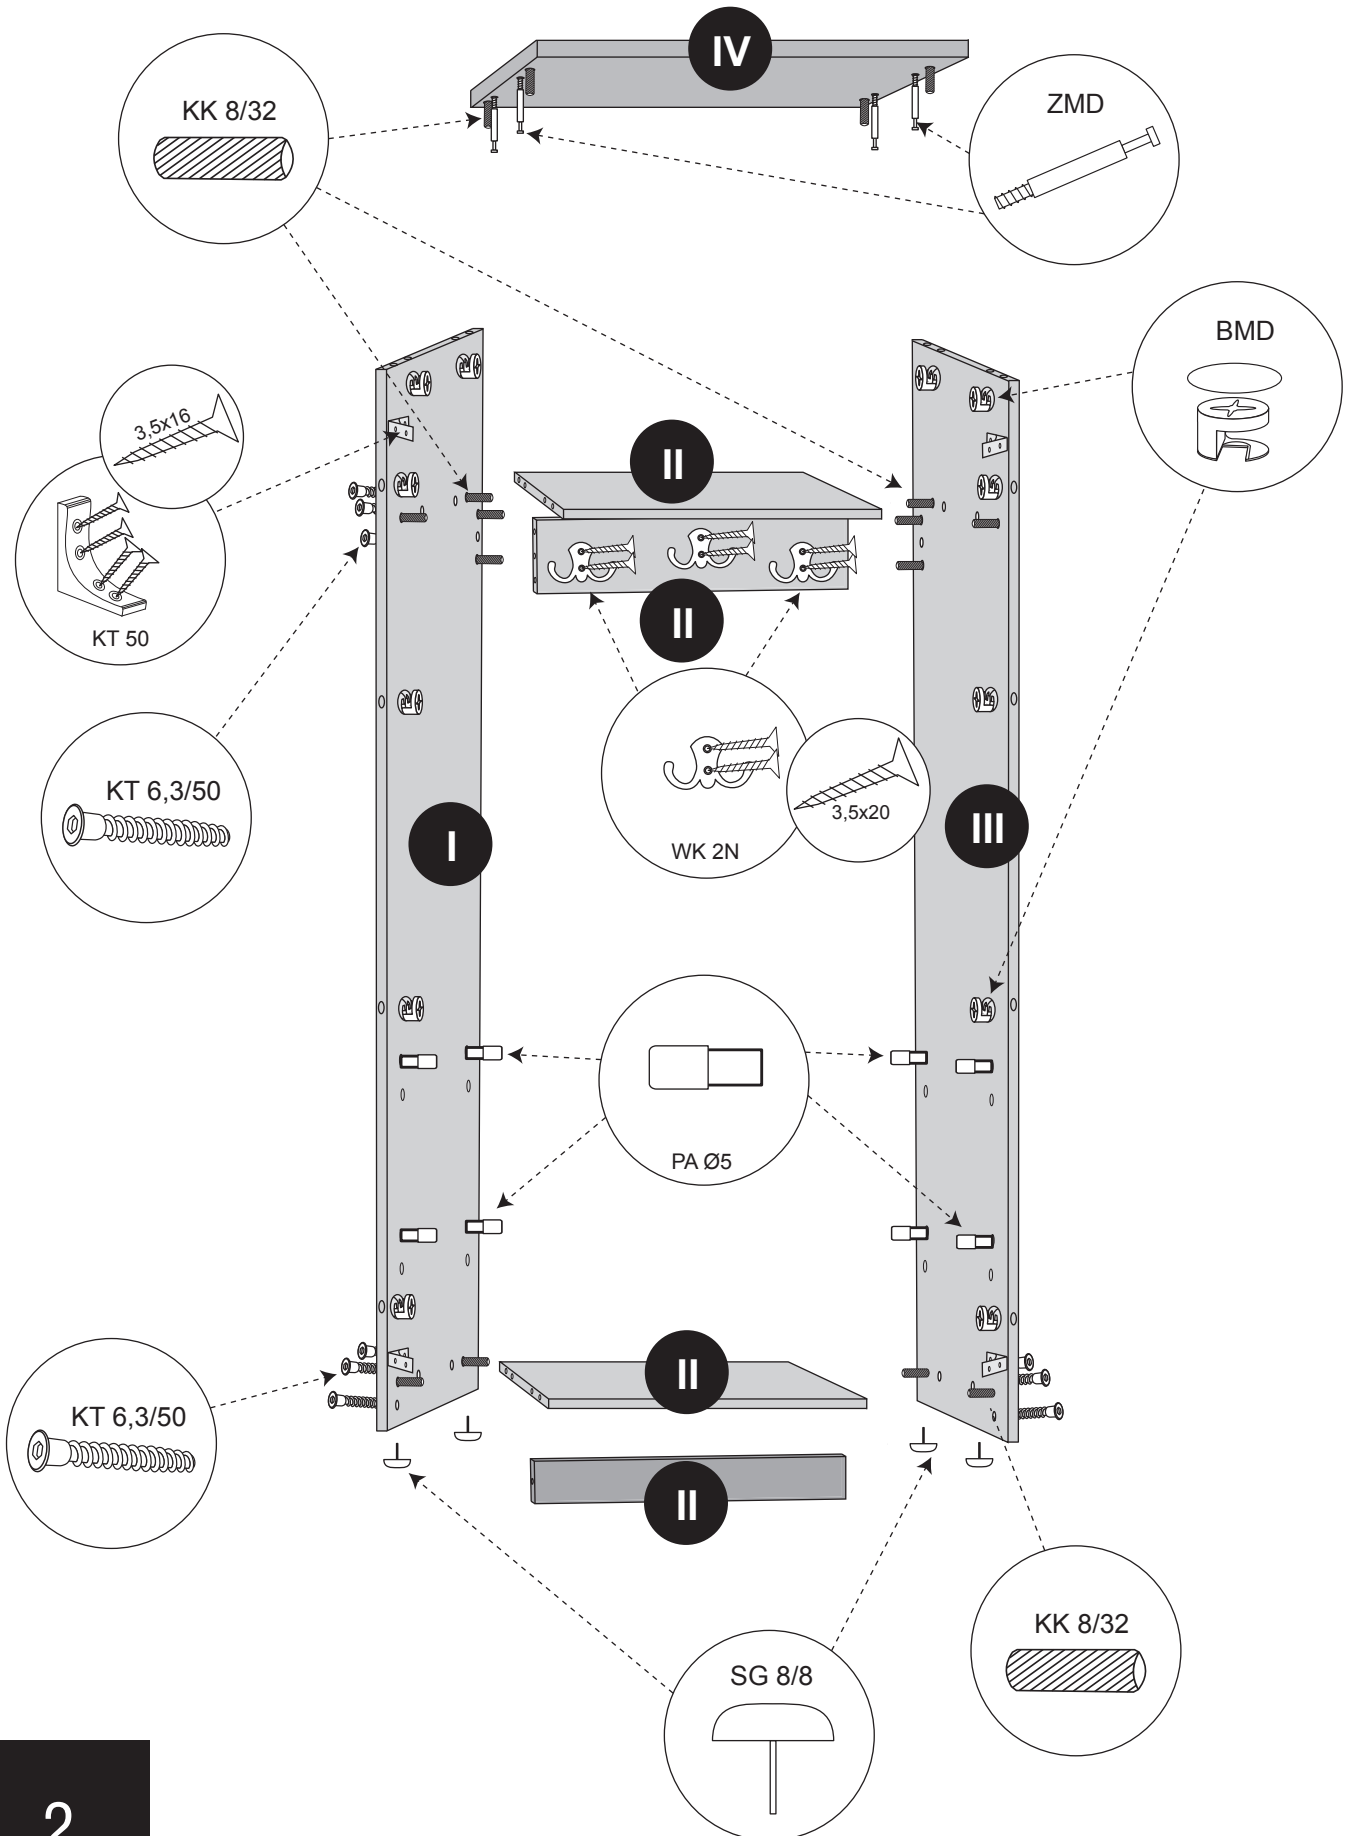

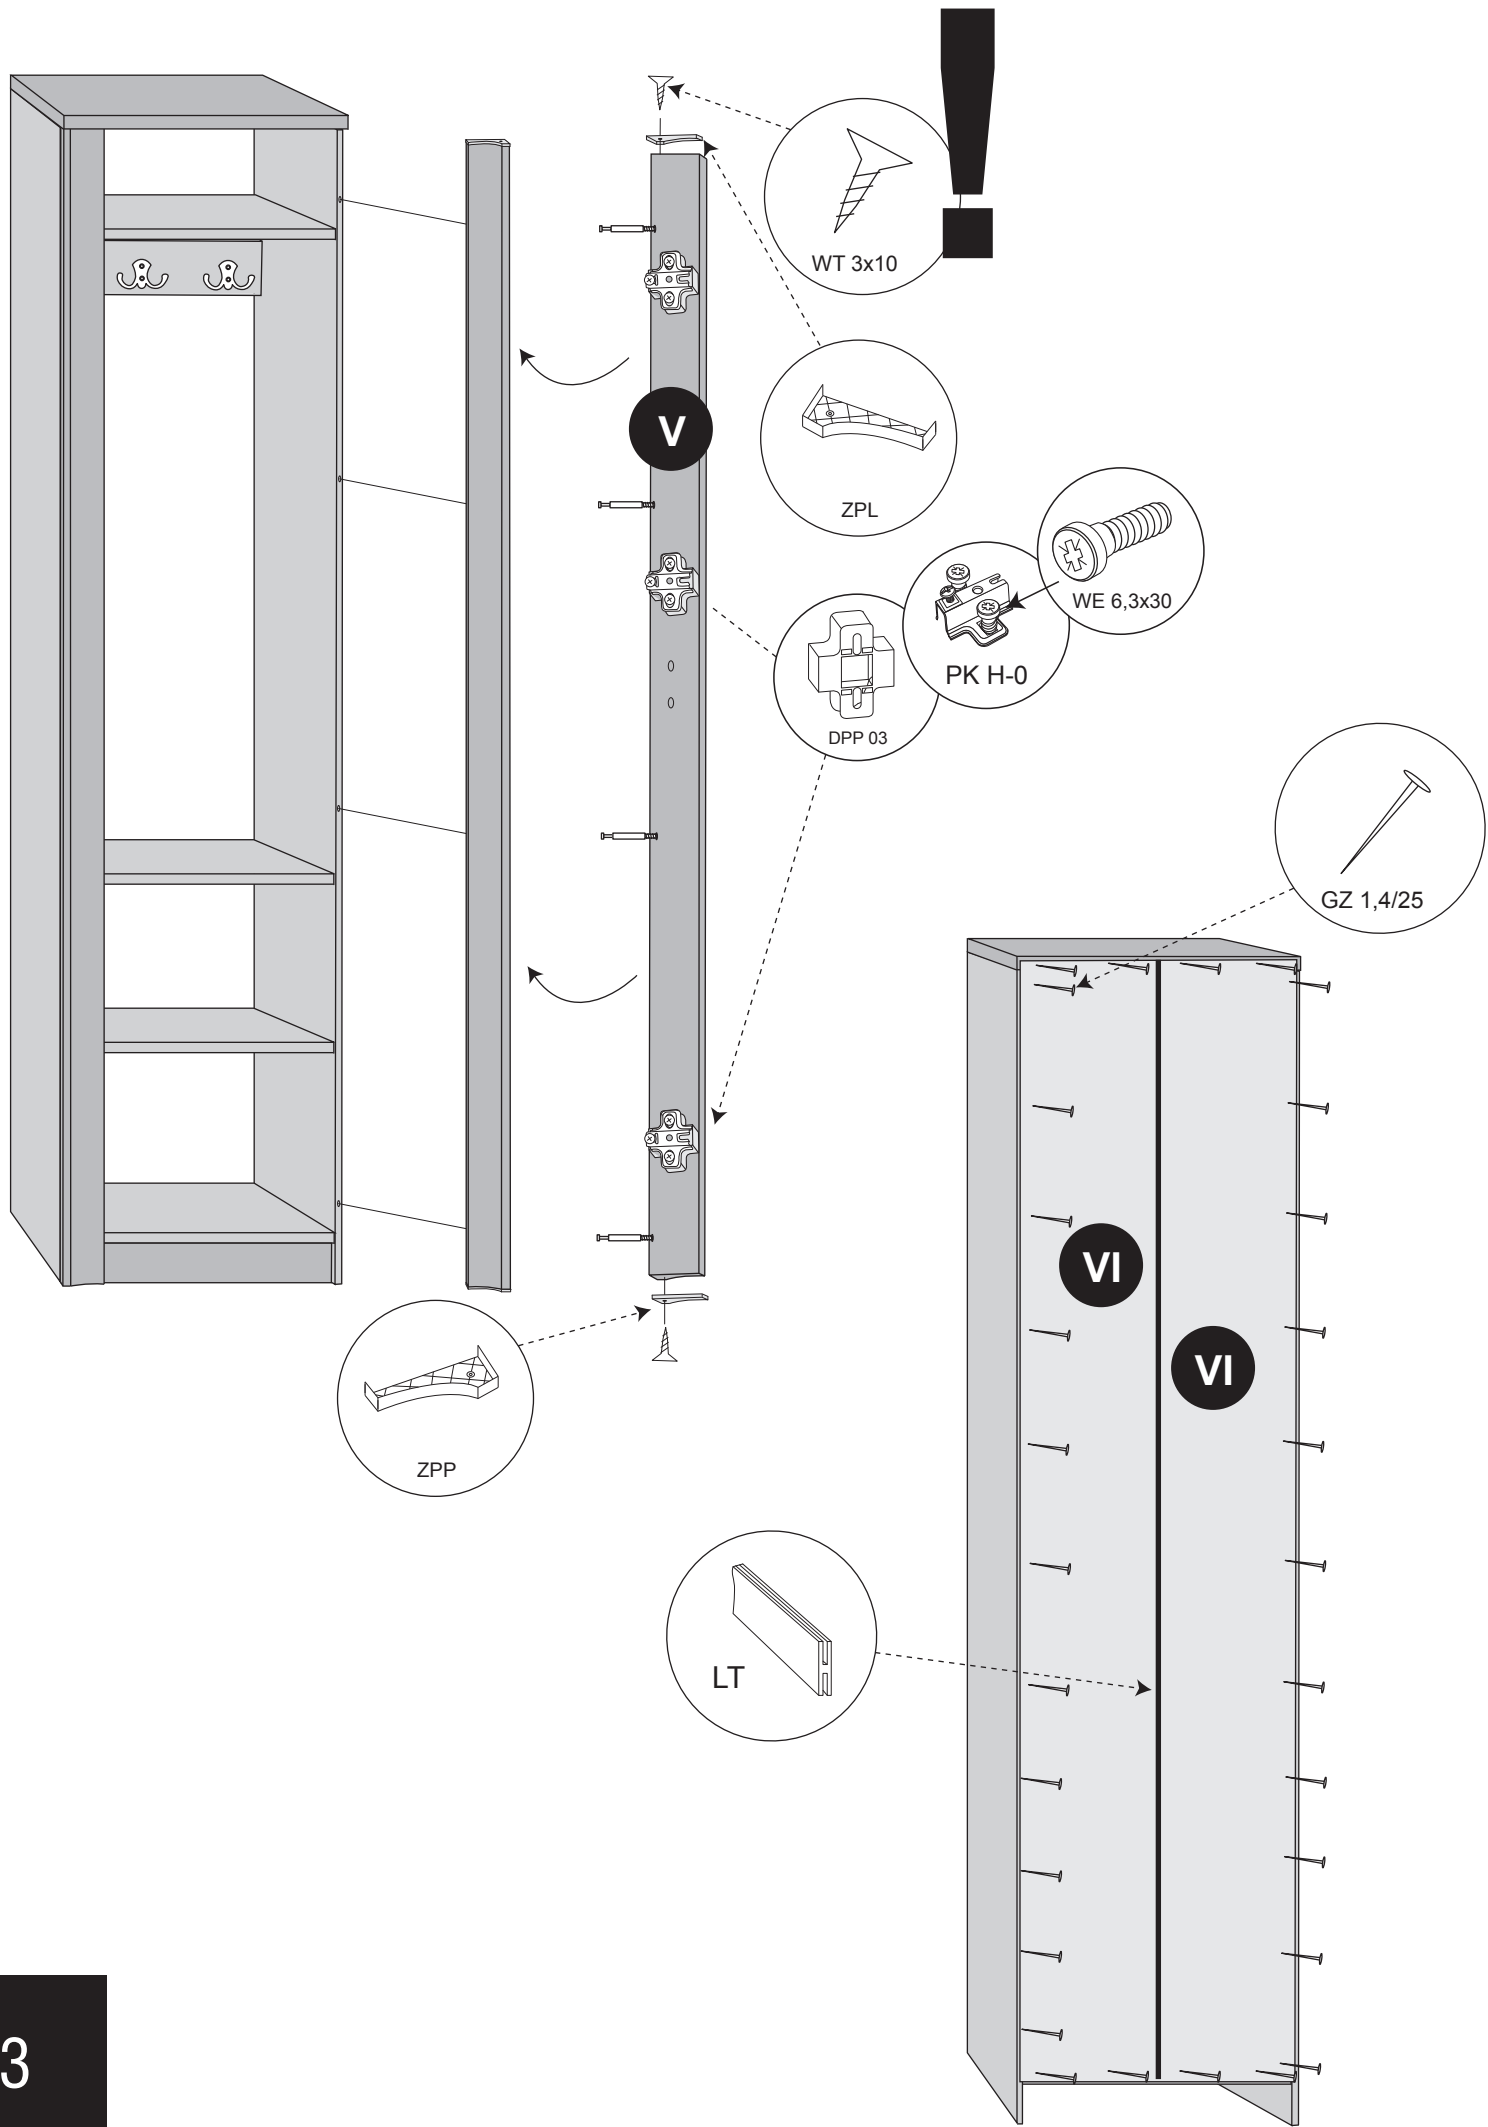

Kolejność montażu: I II III IV V VI VII

