






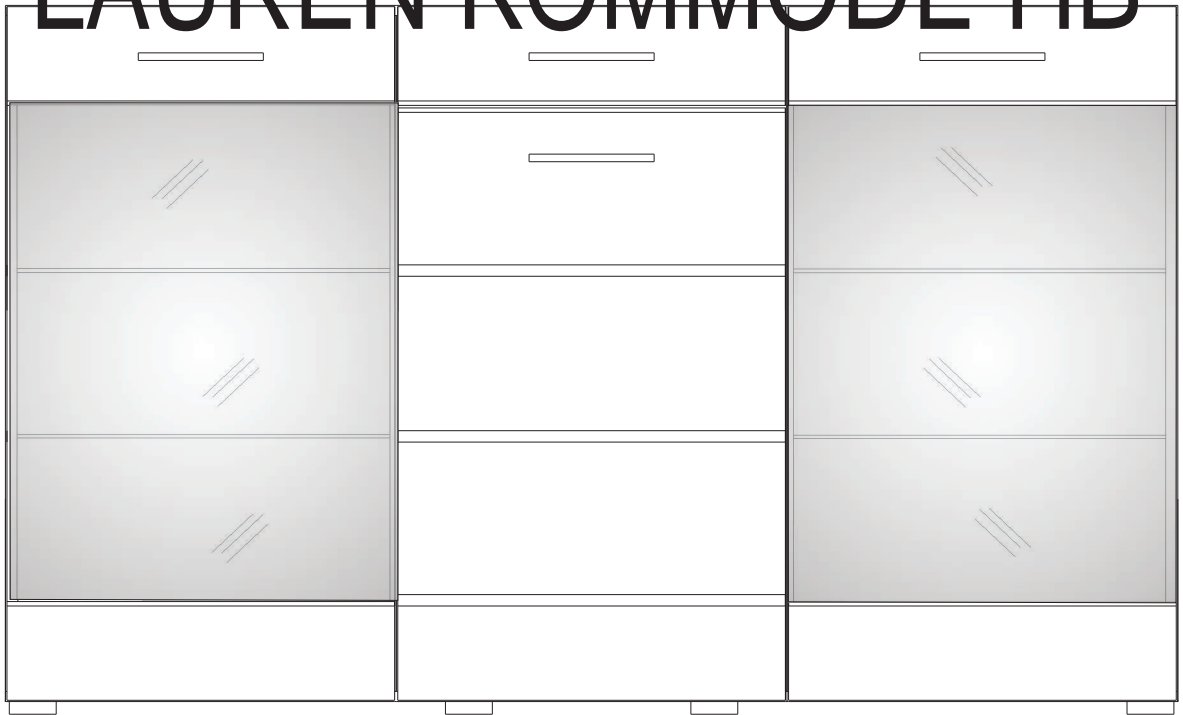

































MONTAGEANLEITUNG


LAUREN KOMMODE HB

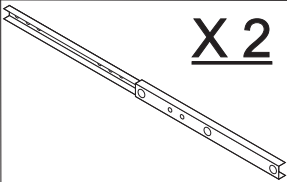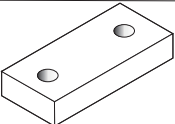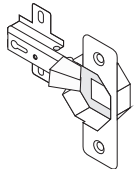





1	 8x35	<u>X 18</u>	14	 X 16				
2	 4x16	<u>X 14</u>	4A	 4x16	X16	22	 7x50	<u>X 12</u>
3	 X 4	<u>X 4</u>	13	 X 4	X 4	25	 M 4 X 8	<u>X 2</u>
4	 4X30	<u>X 8</u>	9	 X 8	X 8	23	 X 2	<u>X 2</u>
5	 X 4	<u>X 4</u>	10	 X 6	X 6	29	 X 2	<u>X 2</u>
6	 5x11	<u>X 28</u>	26	 X 1	X 1			
12	 X 70	<u>X 70</u>	24	 X 2	X 2	35	 X 16	X 16
37	 3x16	X 16	30	LED LIGHTS	X 1	36	 X 12	<u>X 12</u>

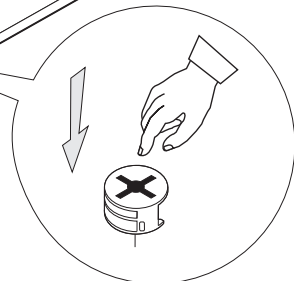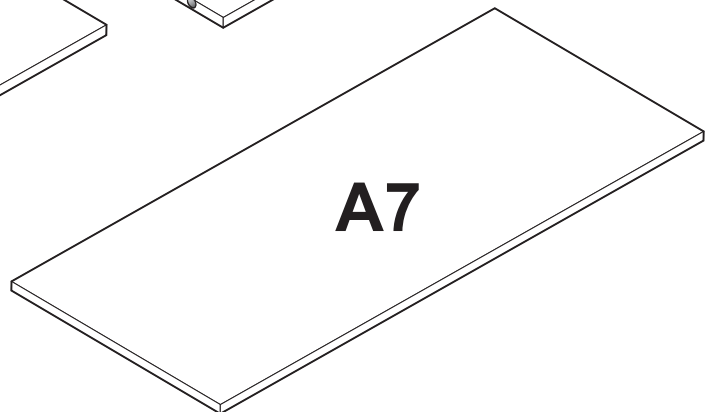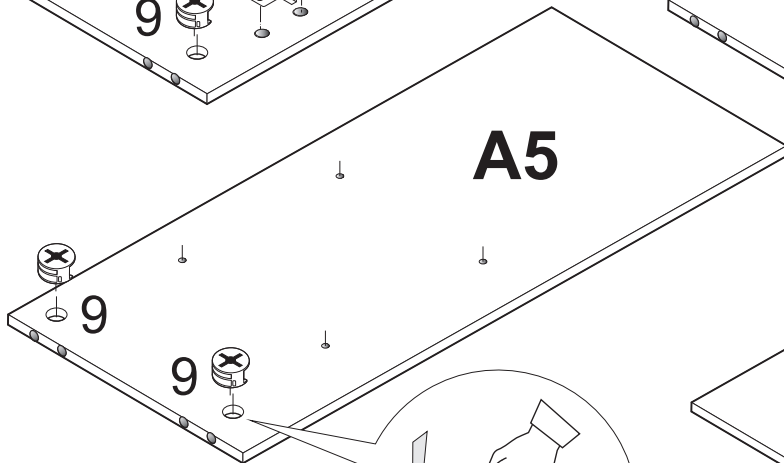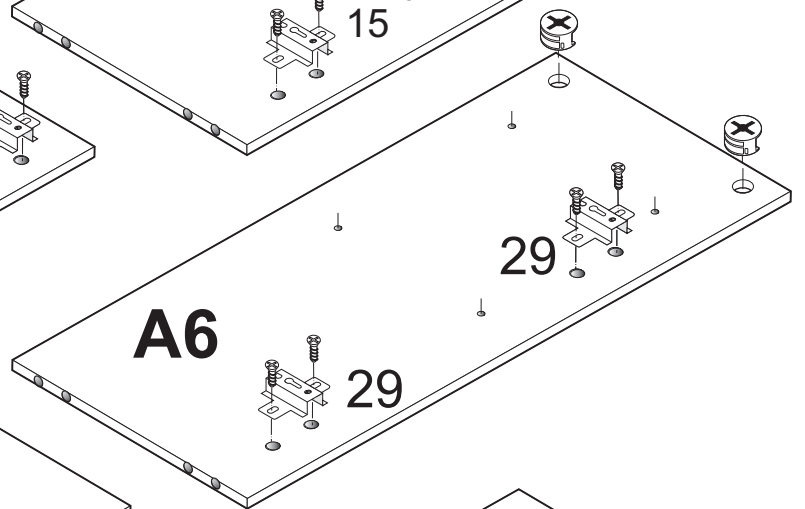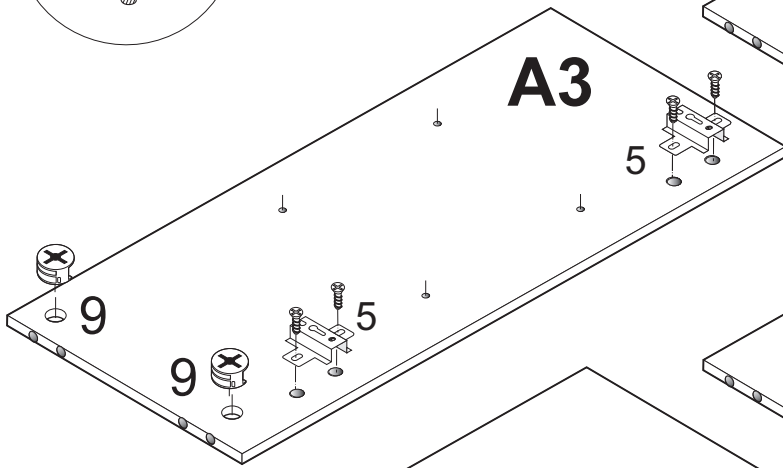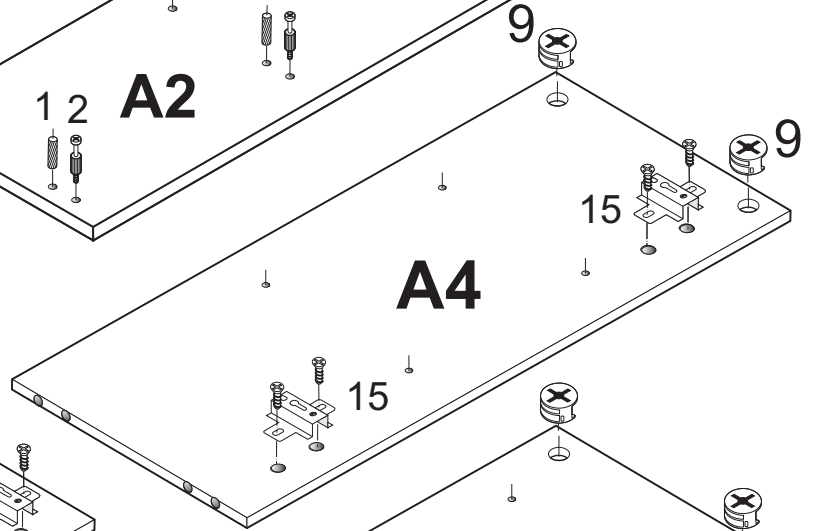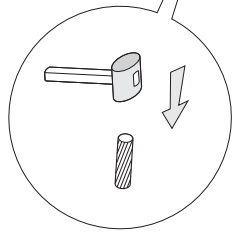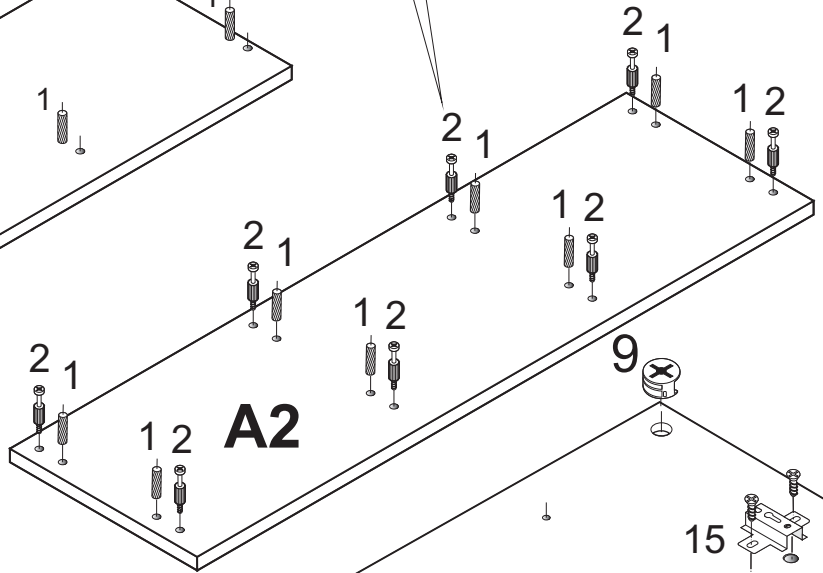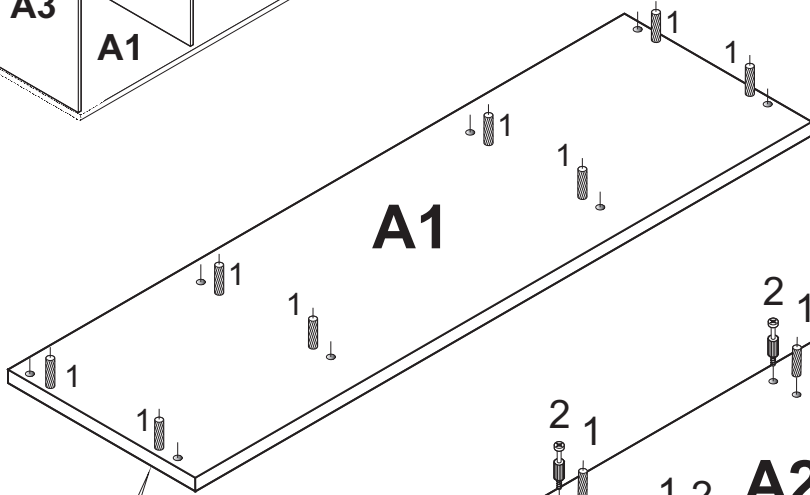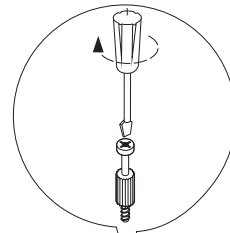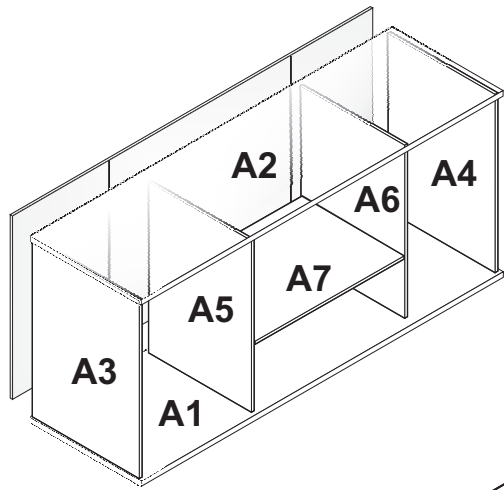


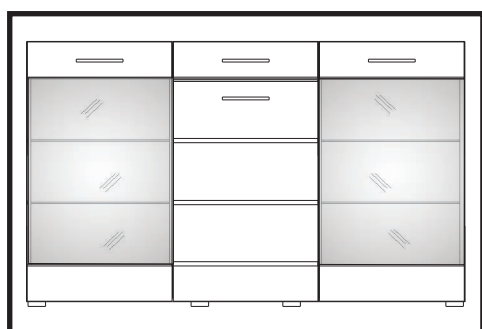
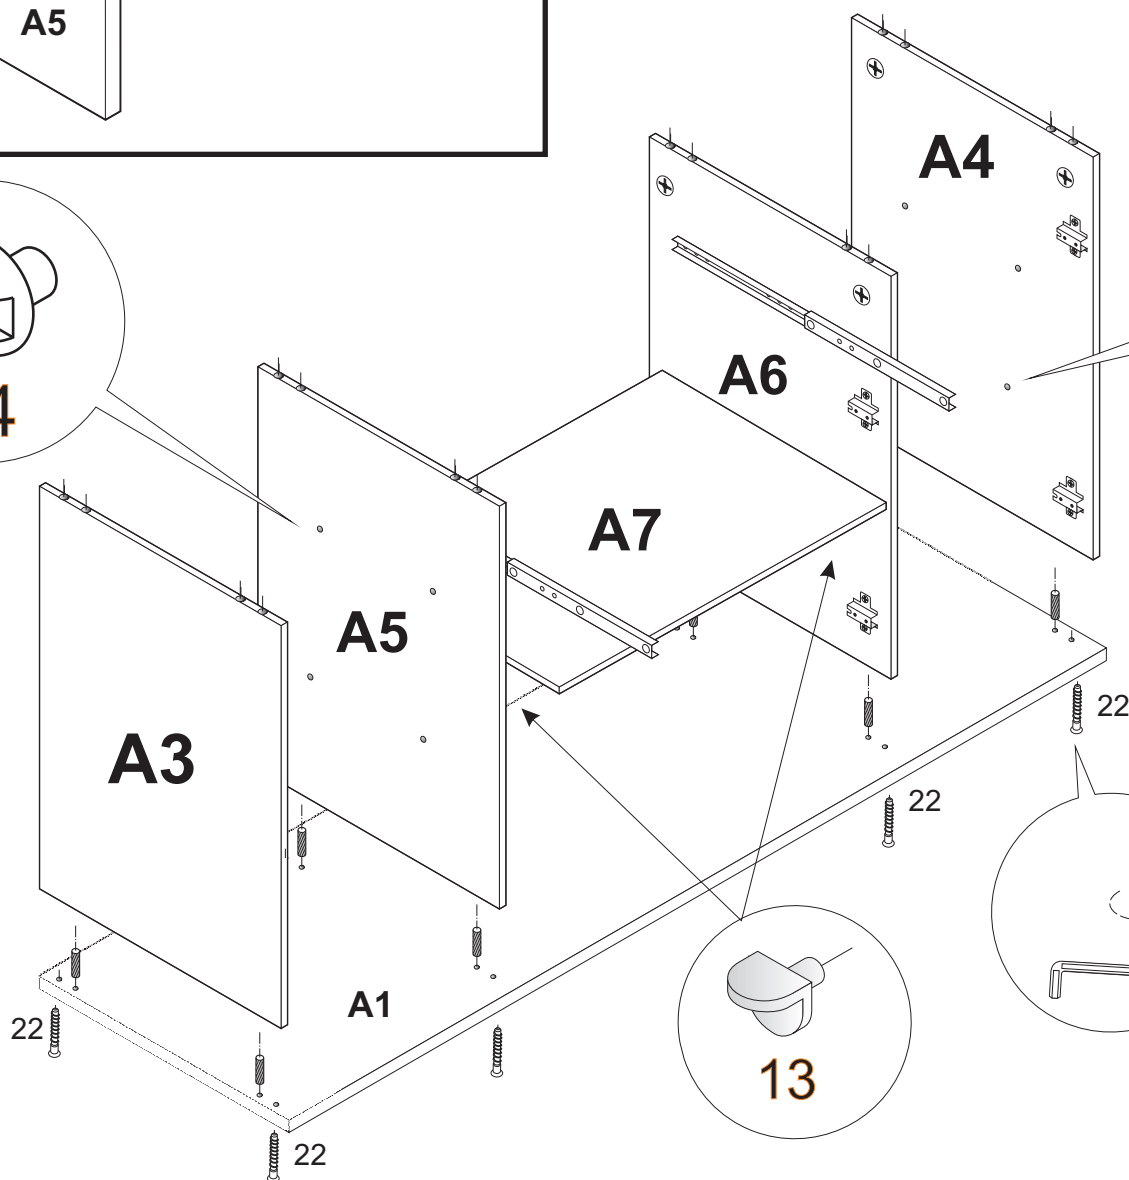
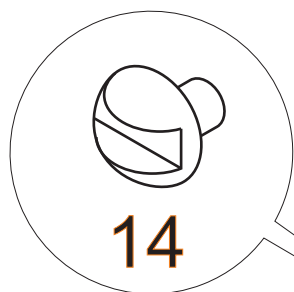
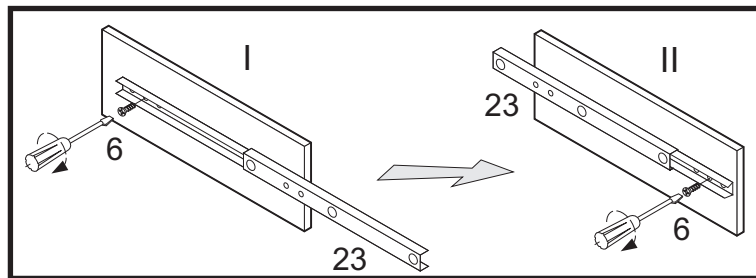
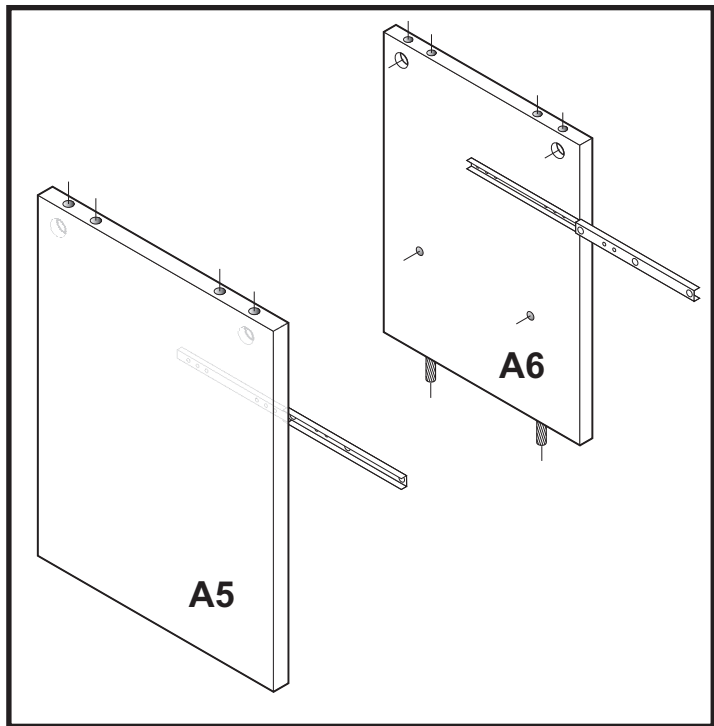



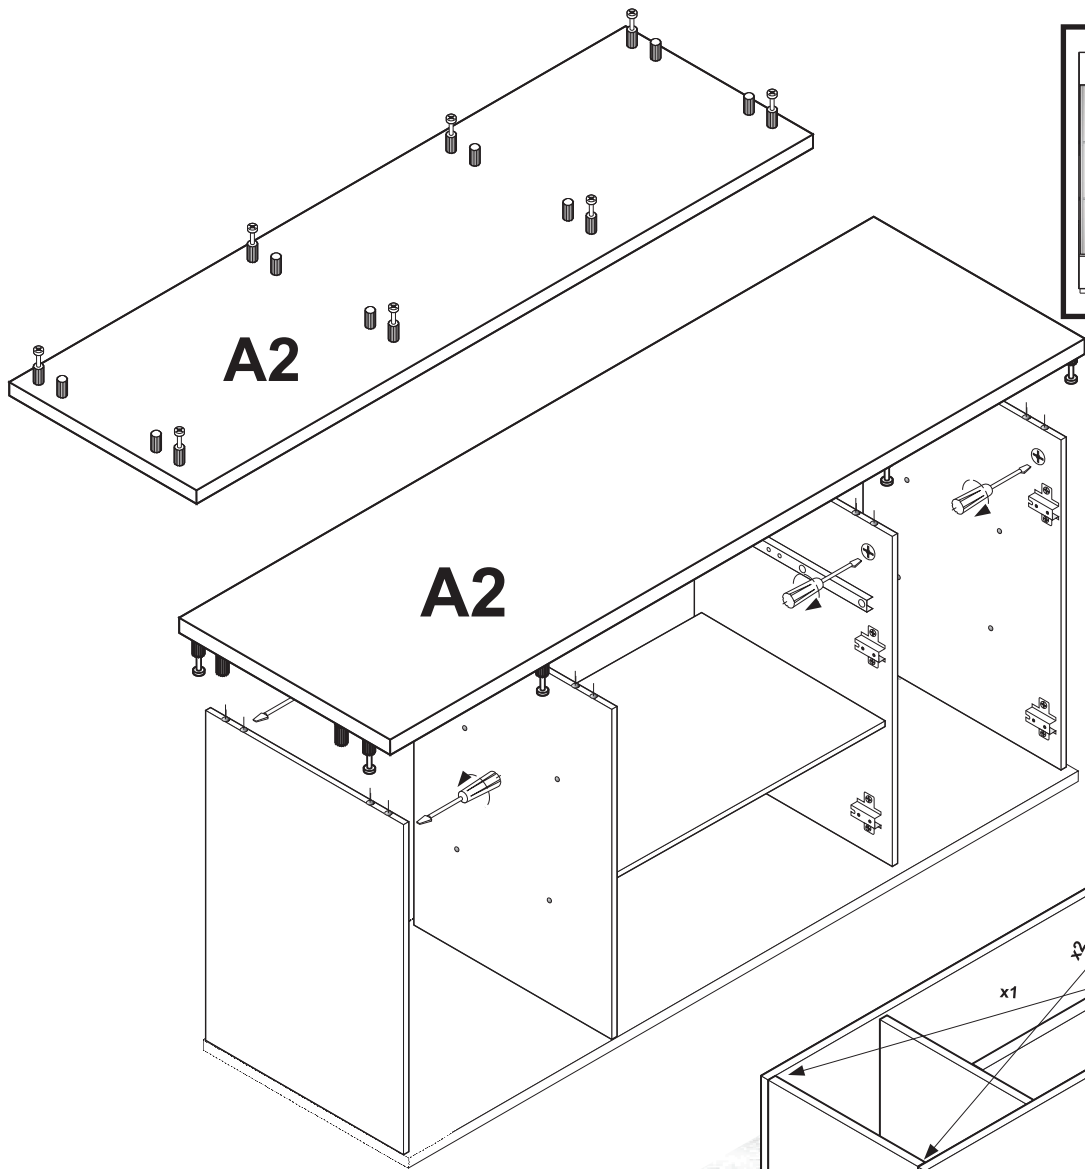


x1 = x2

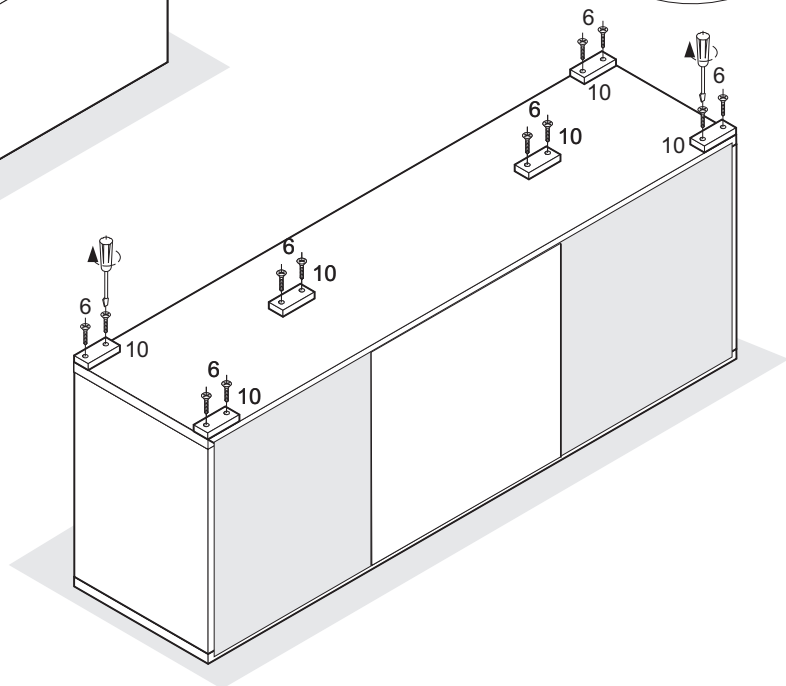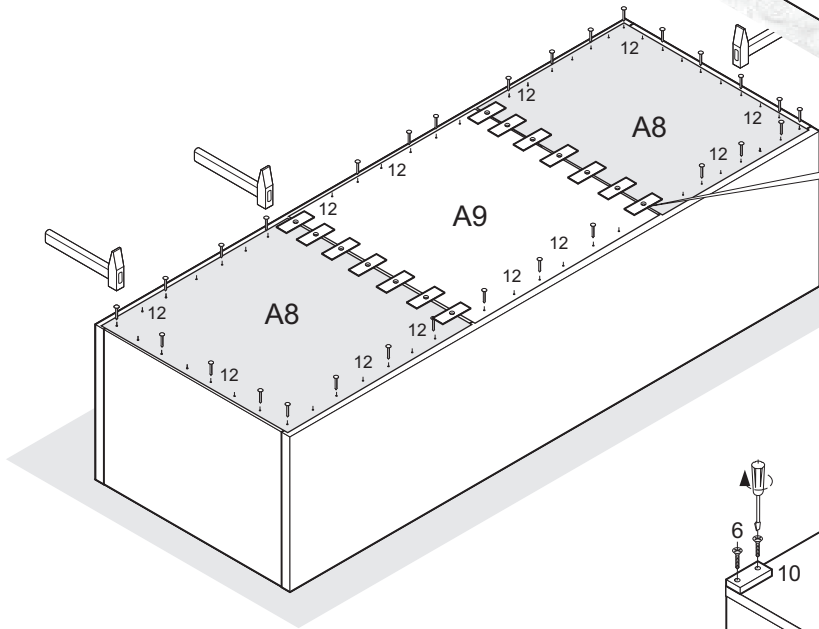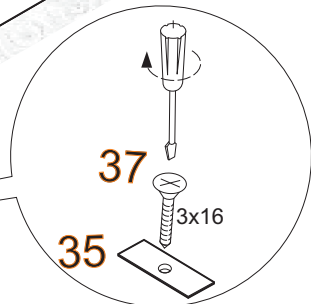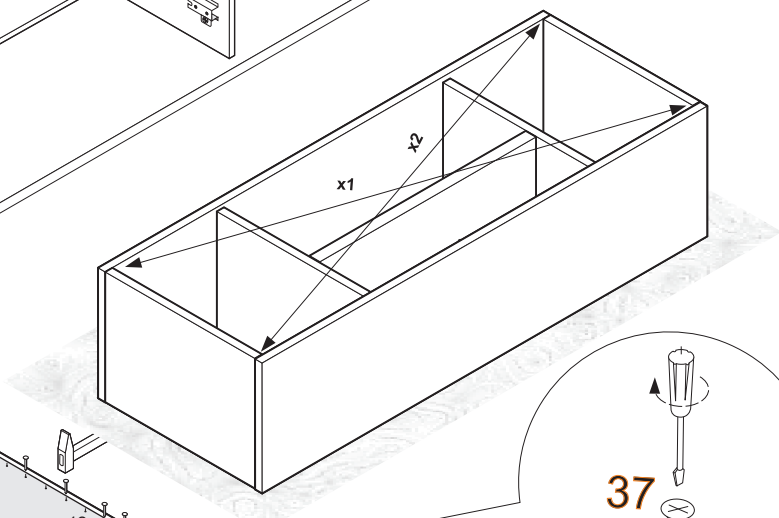


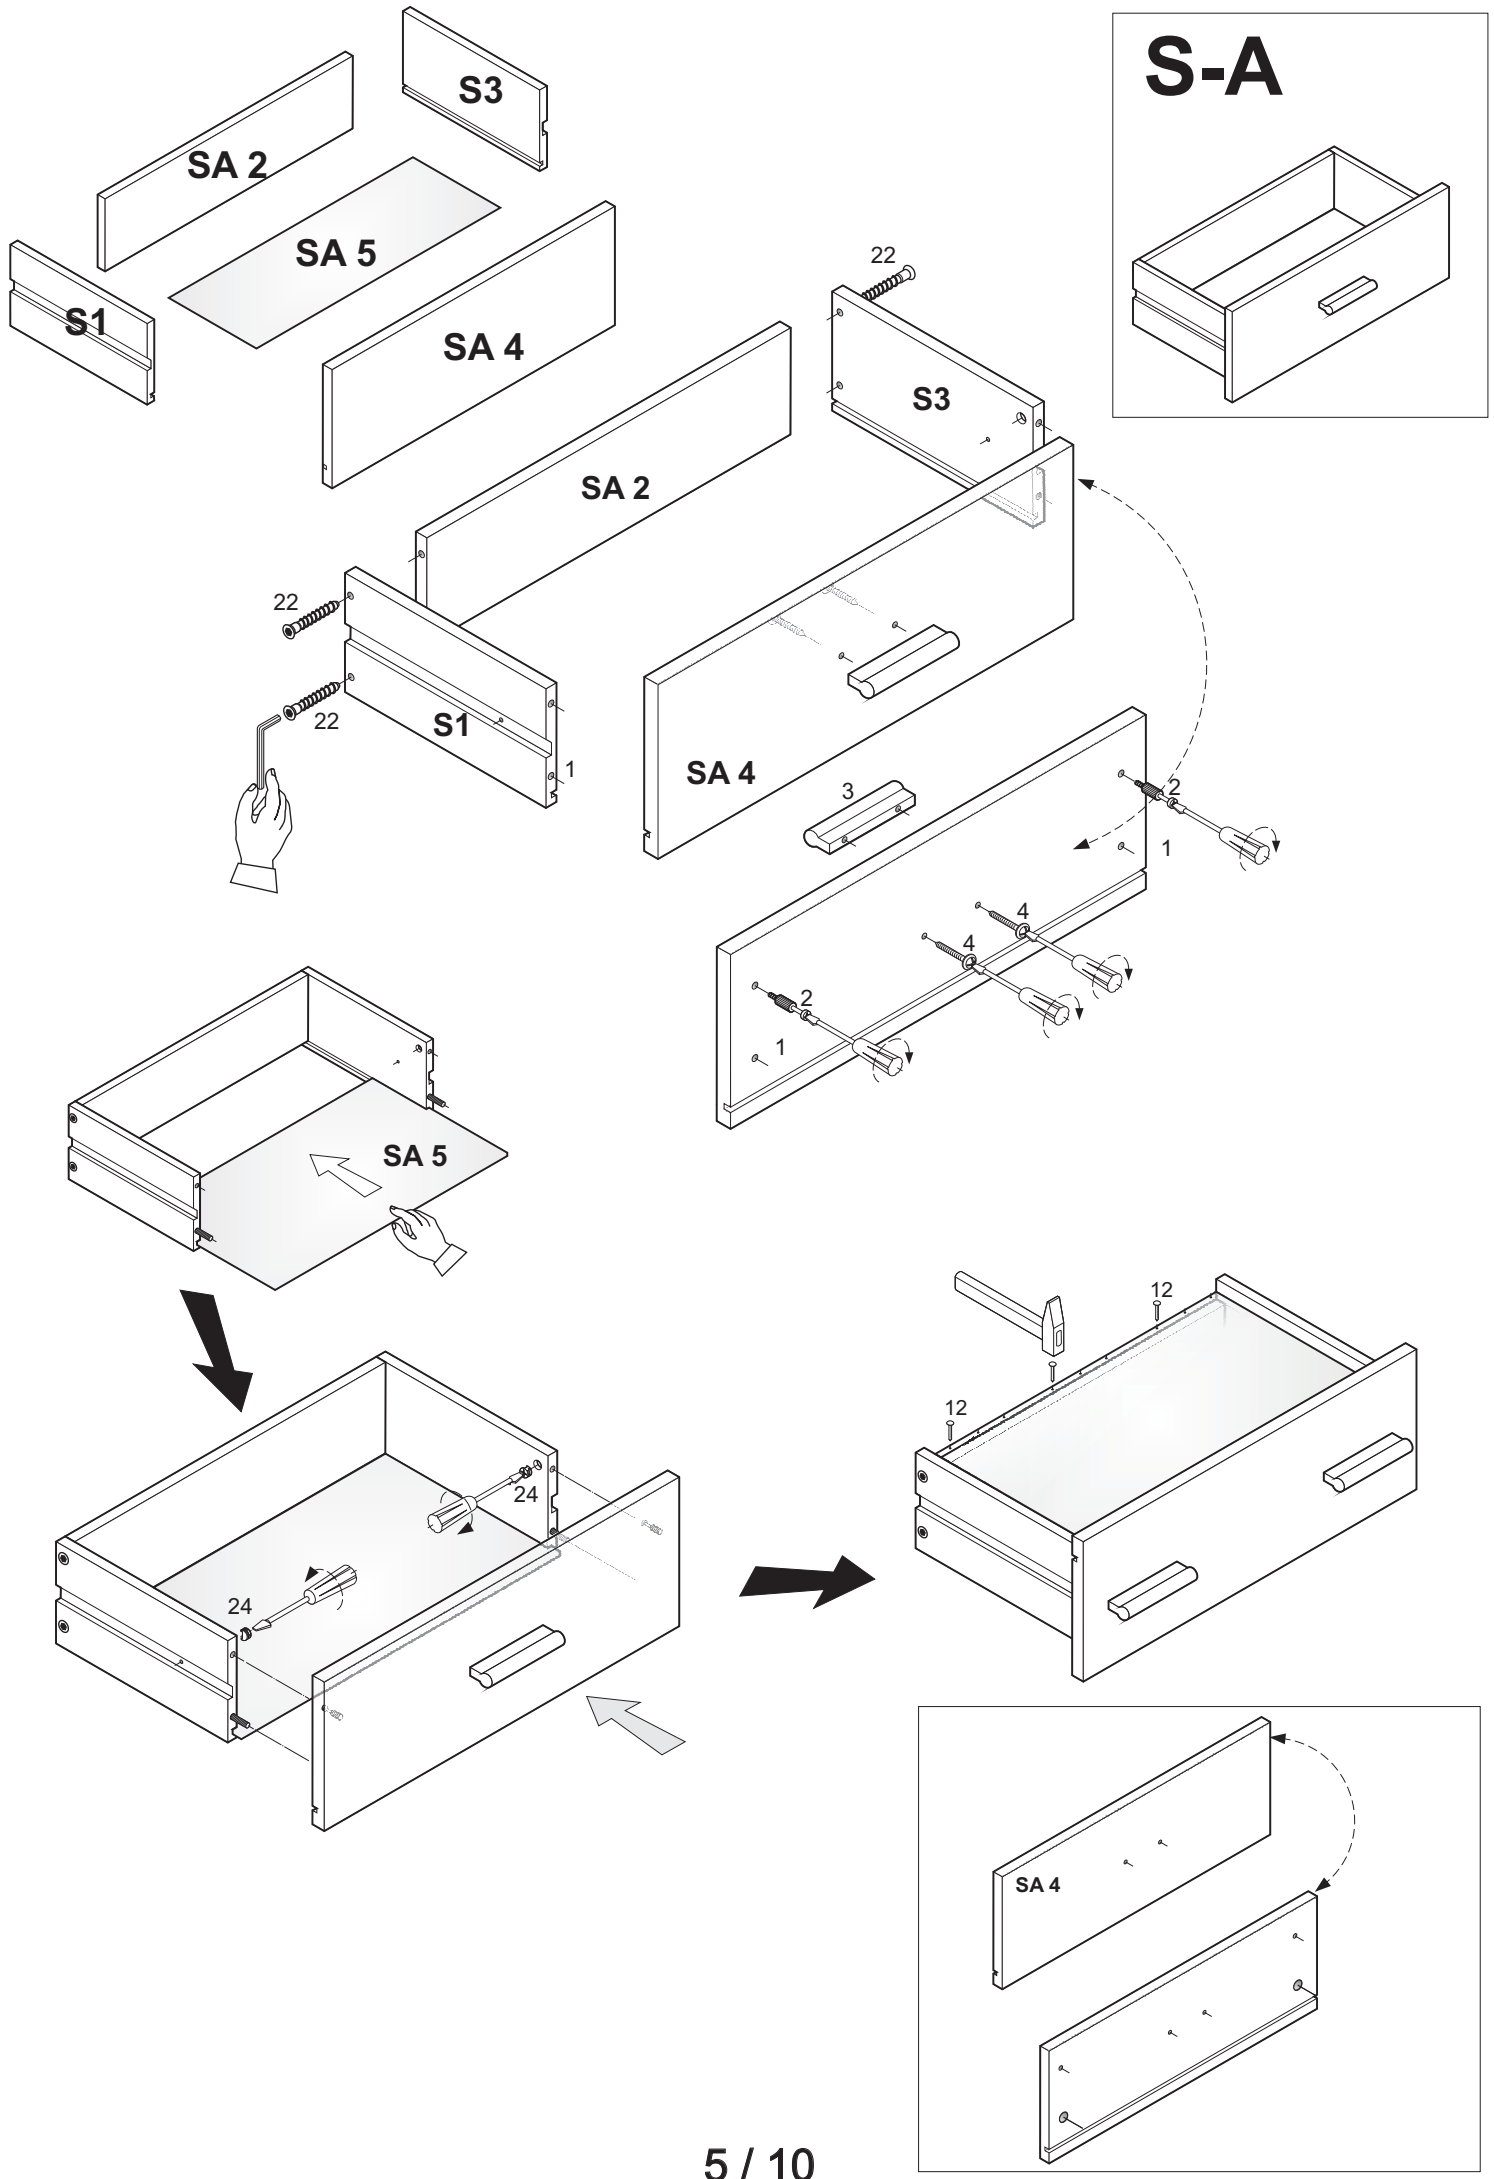

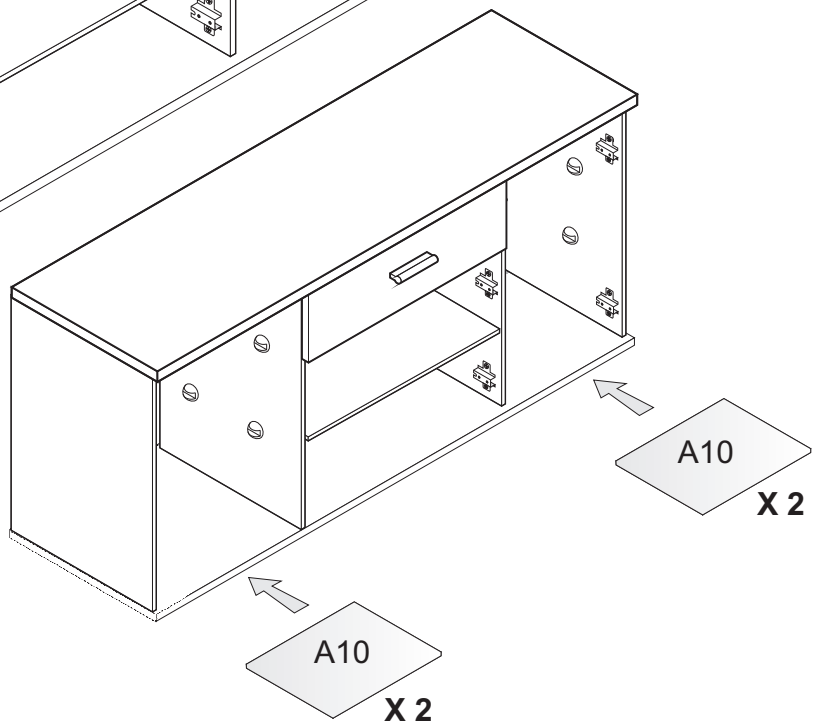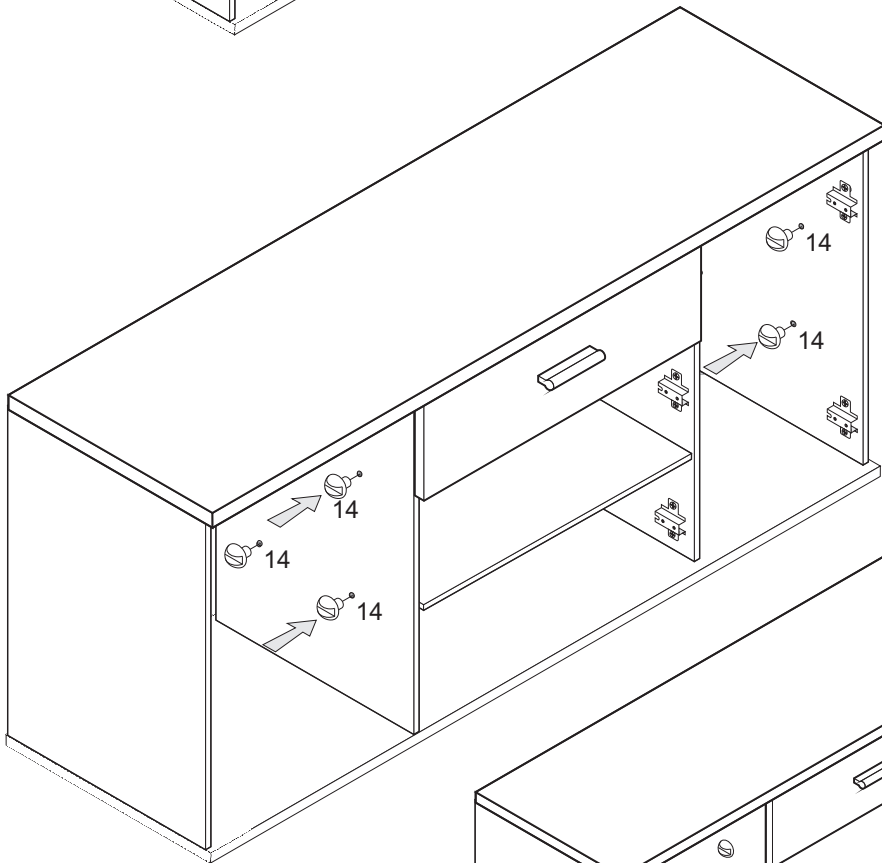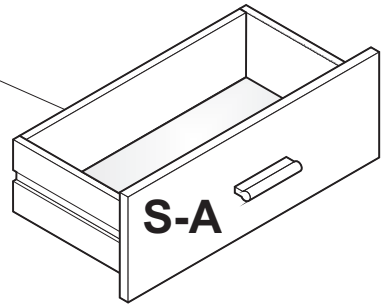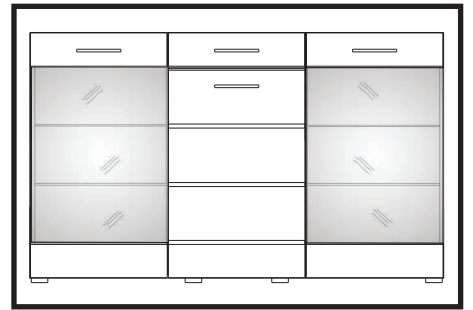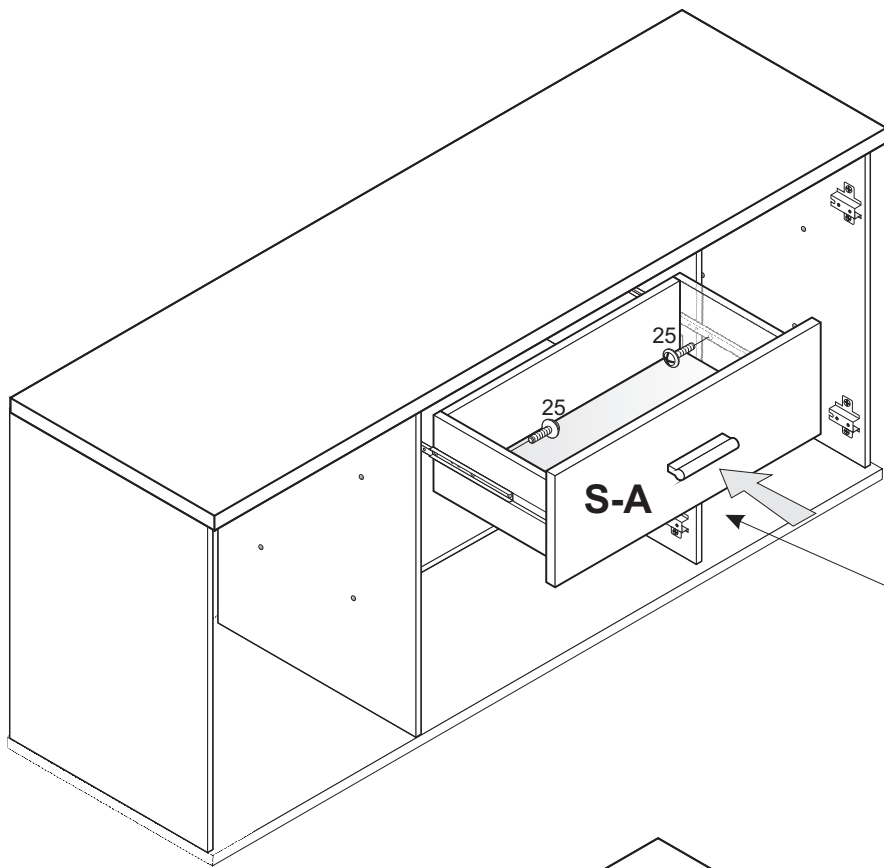

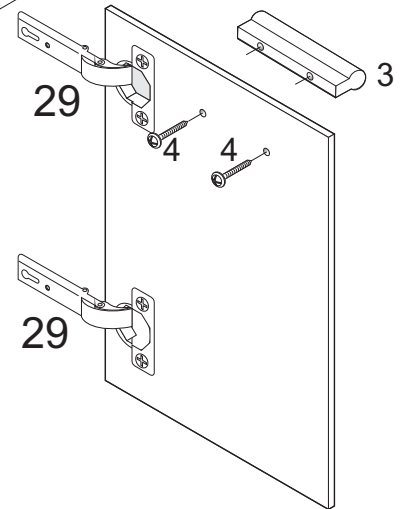
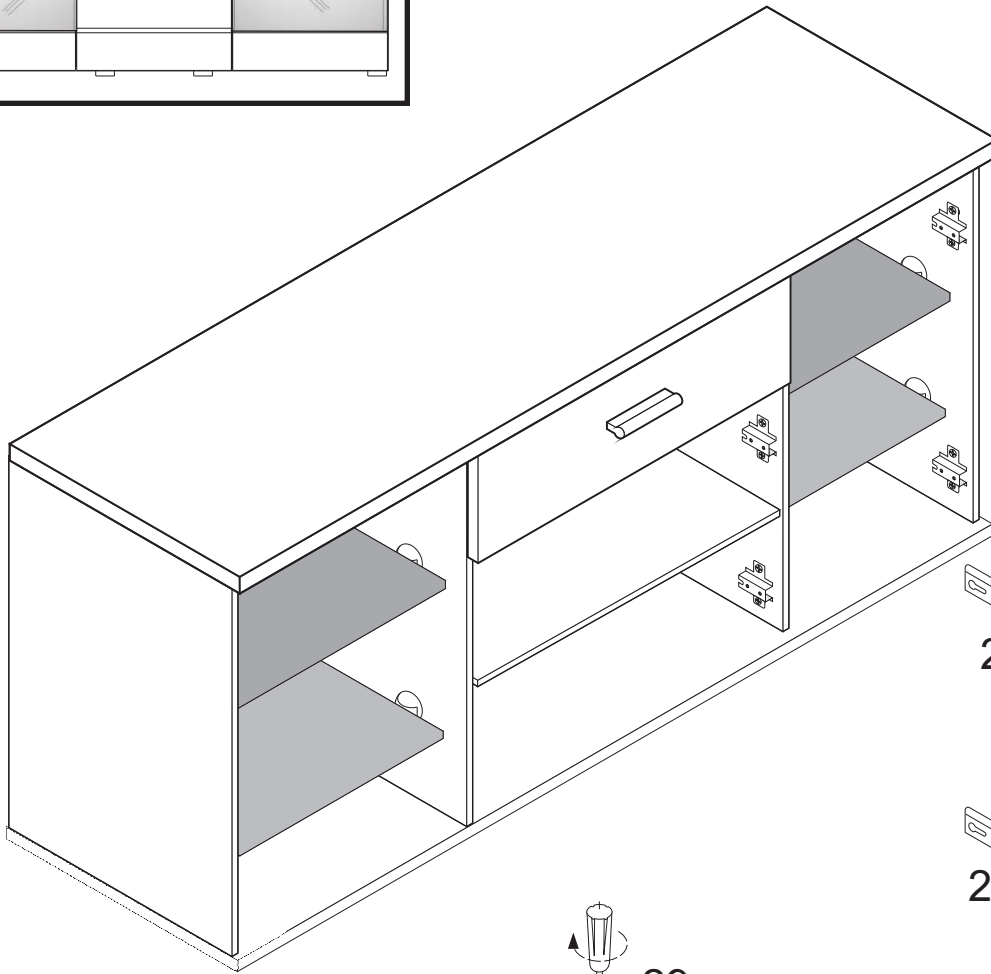



A17

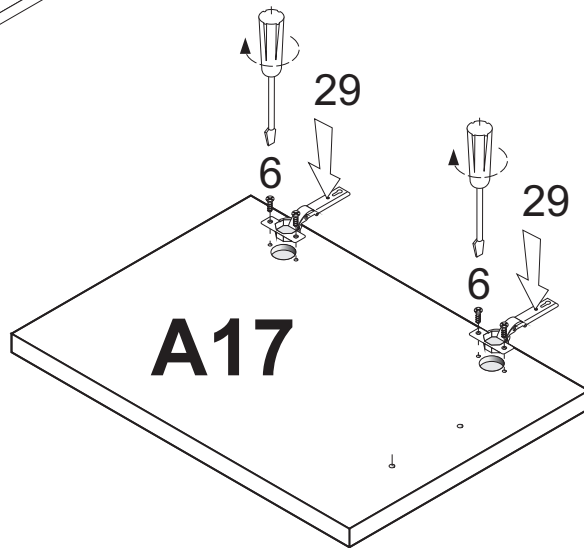

A17

ACHTUNG!
 SCHUTZFOLIE AUF
 DIE FRONTEN. BITTE
 VORSICHTIG ABZIEHEN
 UND 14 TAGE
 DIE FRONTEN
 NICHT PUTZEN, DA DIE
 OBERFLACHE ABHARTEN
 MUSS. SONST WIRD
 DIE FRONT ZERKRATZT!

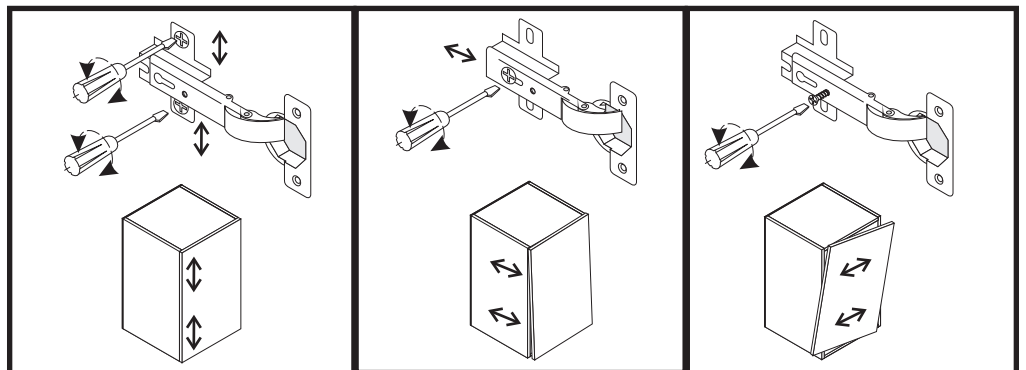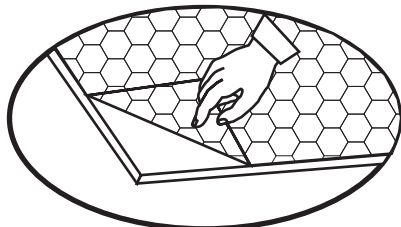


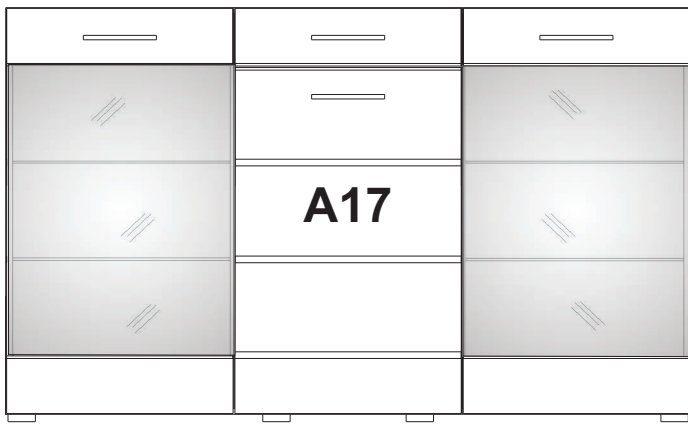


A11

A17


A12

A13

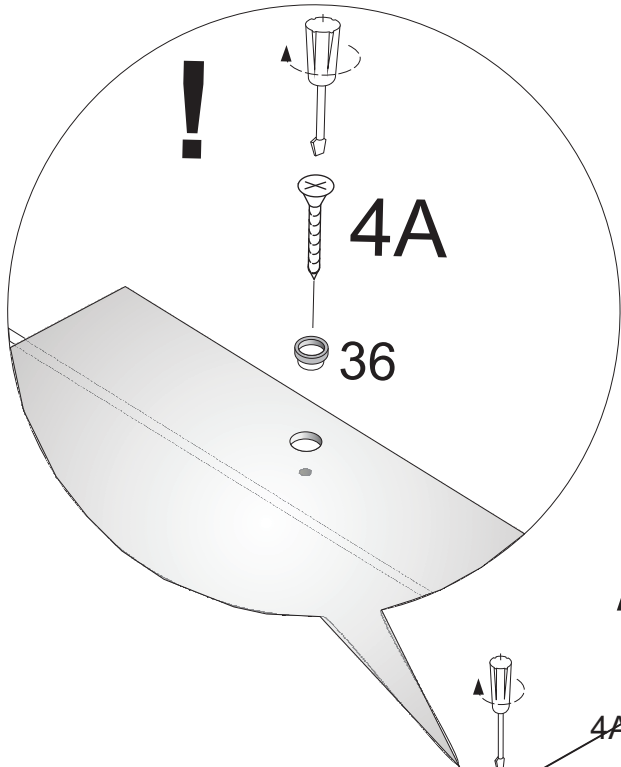
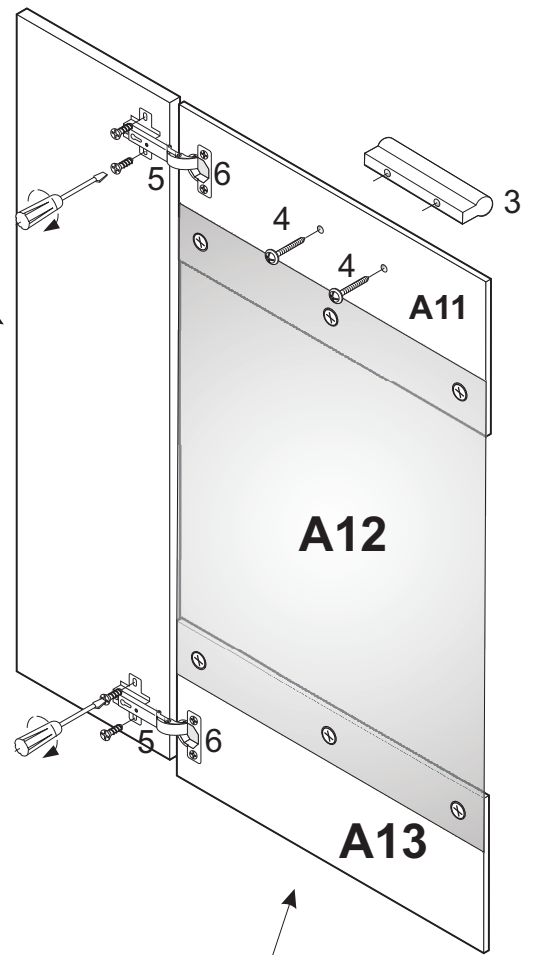






4A

36


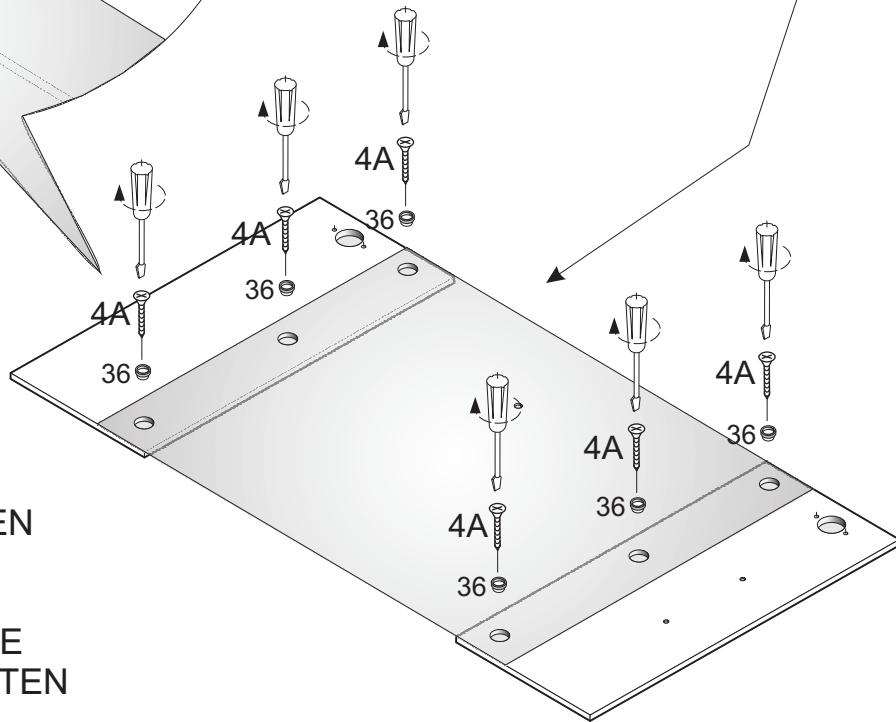





ACHTUNG!
 SCHUTZFOLIE AUF
 DIE FRONTEN. BITTE
 VORSICHTIG ABZIEHEN
 UND 14 TAGE
 DIE FRONTEN
 NICHT PUTZEN, DA DIE
 OBERFLÄCHE ABHARTEN
 MUSS. SONST WIRD
 DIE FRONT ZERKRATZT!

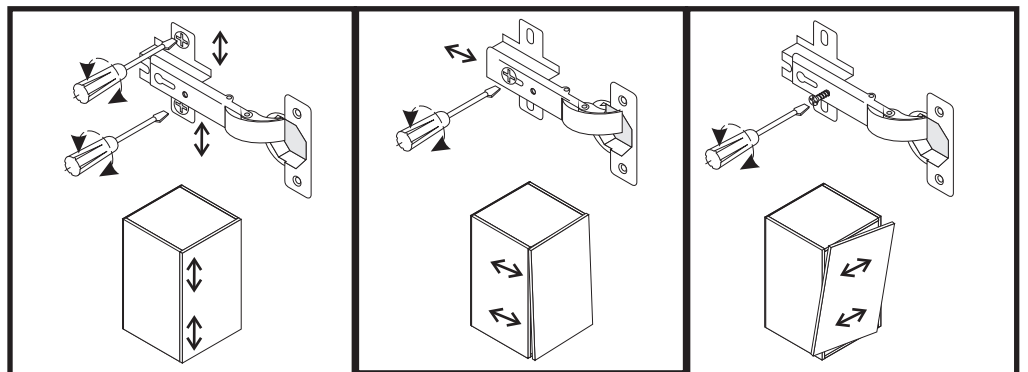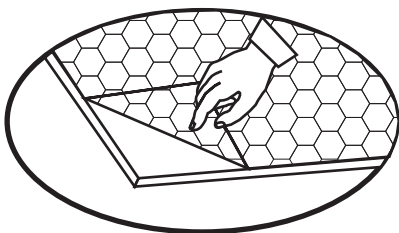

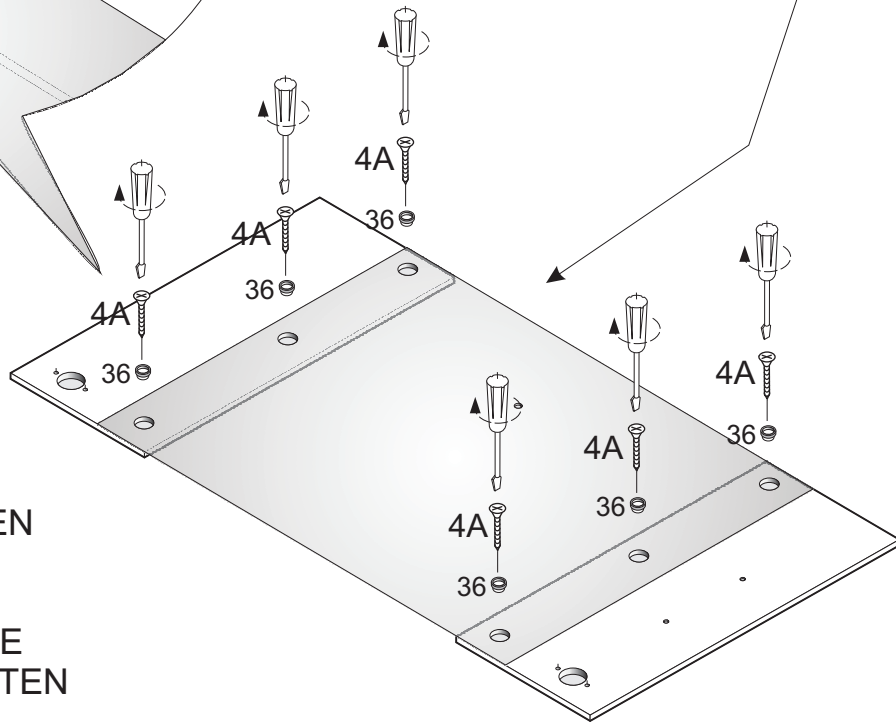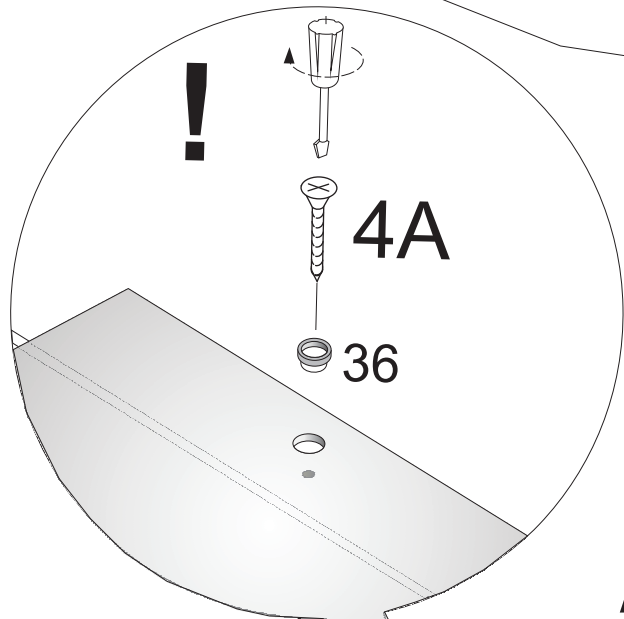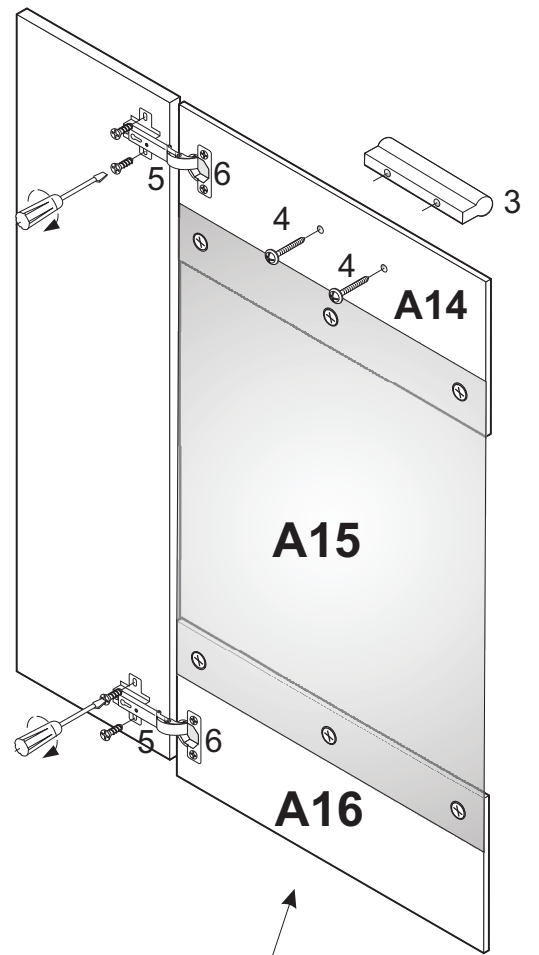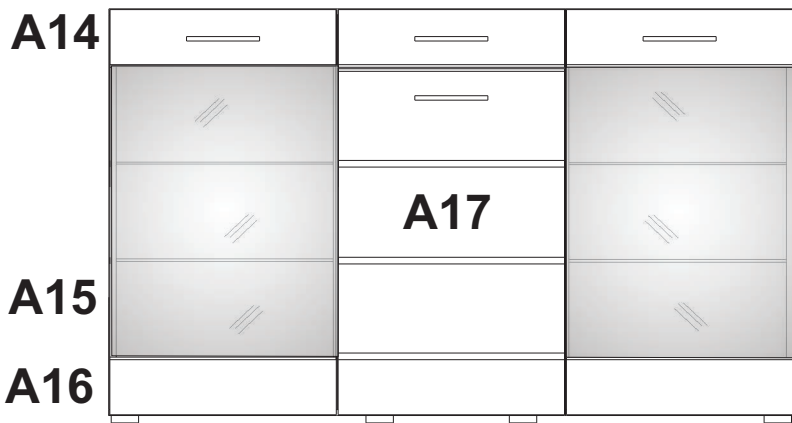

ACHTUNG!
 SCHUTZFOLIE AUF
 DIE FRONTEN. BITTE
 VORSICHTIG ABZIEHEN
 UND 14 TAGE
 DIE FRONTEN
 NICHT PUTZEN, DA DIE
 OBERFLÄCHE ABHARTEN
 MUSS. SONST WIRD
 DIE FRONT ZERKRATZT!

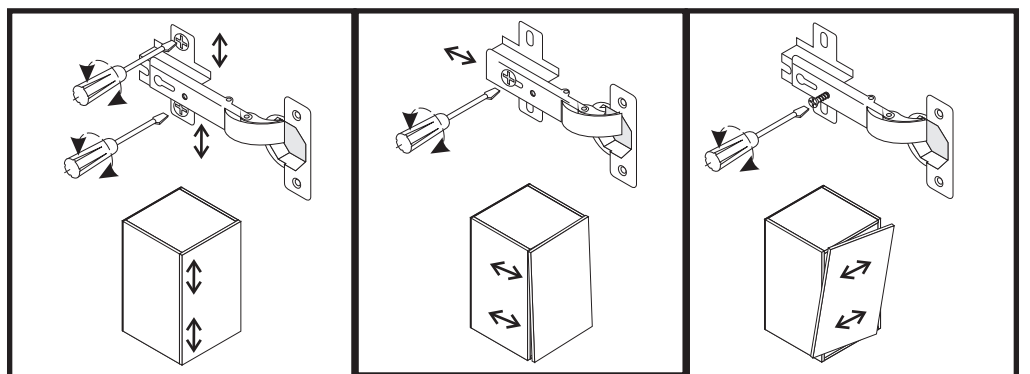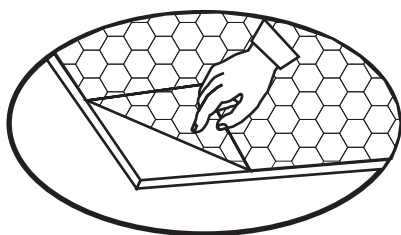

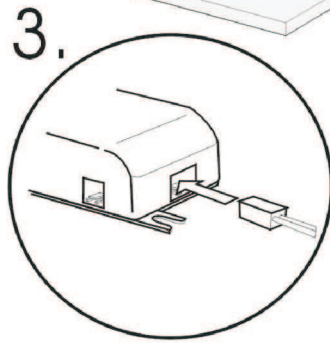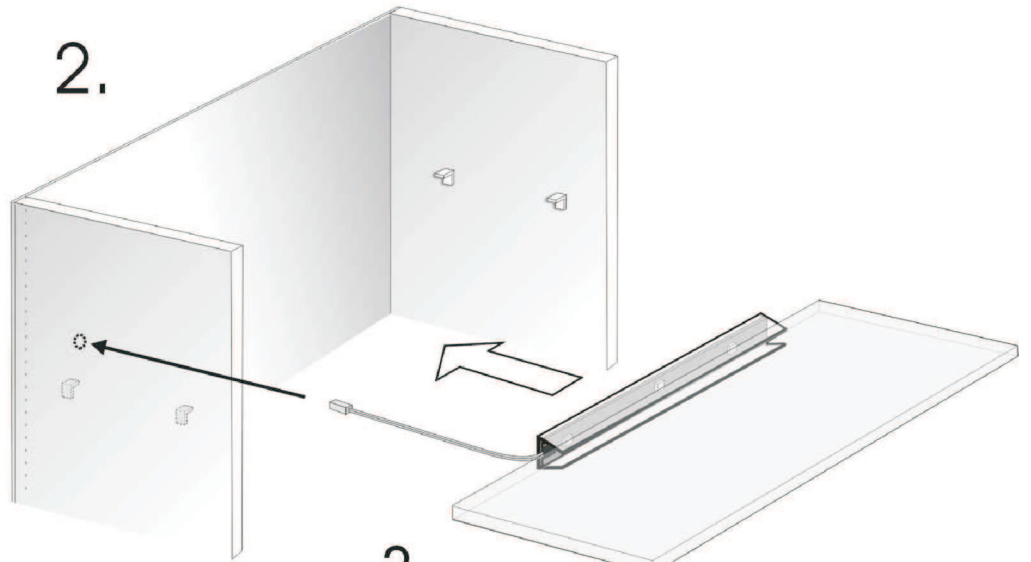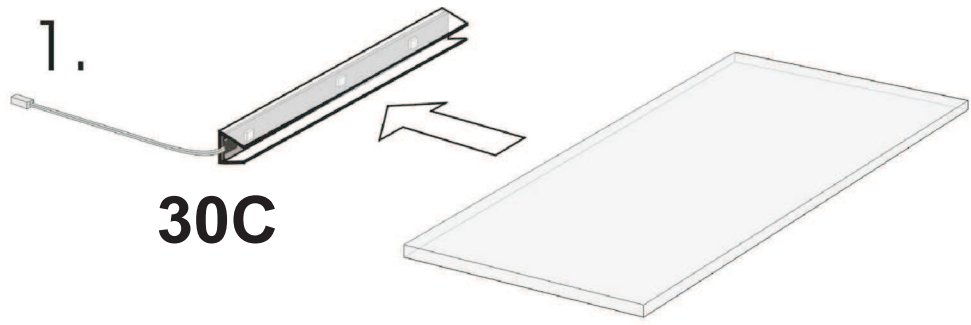

4.

30A

3.

30B

