



www.MLMEBLE.pl

GB assembly instructions / D montageanleitung / CZ montážní návod / SK montážny návod / RUS инструкции по монтажу / LT surinkimo instrukcija



INSTRUKCJA MONTAŻU


OLIEWIER 11 N
 ↑95 →138 ↗41





akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксессуары / furnitūra :

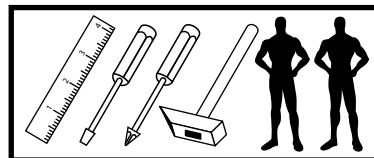

x 34 KK 8/32	x 24 KT 6,3/50	x 10 ZA N	x 80 GZ 1,4/25	x 8 SG 8/8	x 24 MD	x 24 ZAM	x 8 PA Ø3	x 64 WT 3,5x16	x 2 WT 4x30	x 12 WT 4x27
x 4 WT 3x10	x 4 ZPR	x 4 PK H-0	x 8 WE 6,3x30	x 4 PAL350	x 10 BDR	x 2 KT 50	x 4 DPP 03	x 2 ZPL	x 2 ZPP	x 6 UTO
x 1 PK 25	x 2 LT	x 1 klej / glue / kleber / lepidlo / lepidlo / клей / kijaj	x 1 kluczyk / key / schlüssel / klíč / ключ / rakias							

do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebne pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės



UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holi "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palic "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

	CODE		
1	OLIWIER11_01	1380	405
2	OLIWIER11_04	844	353
3	OLIWIER11_05	844	353
4	OLIWIER11_06	1338	352
5	OLIWIER11_07	1338	70
6	OLIWIER11_08	1338	60
7	OLIWIER11_09	407	790
8	OLIWIER11_10	407	790
9	OLIWIER11_11	407	195
10	OLIWIER11_13	457	336
11	OLIWIER11_14	350	124
12	OLIWIER11_15	335	124

	CODE		
13	OLIWIER11N_02	920	368
14	OLIWIER11N_03	920	368
15	OLIWIER11NHDF_01	877	238
16	OLIWIER11NHDF_02	877	405
17	OLIWIER11NHDF_03	364	355
18	OLIWIER0910111213_01	918	70
19	OLIWIER11_12	392	80
20			
21			
22			
23			
24			

