
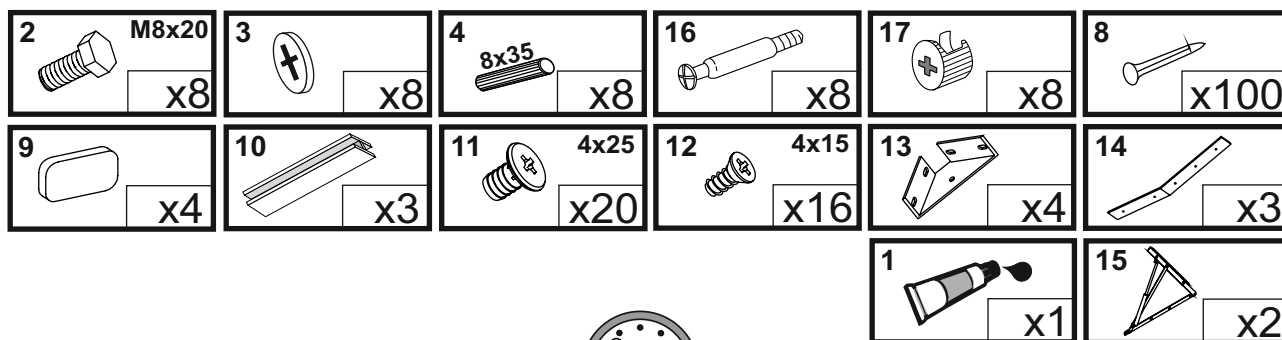
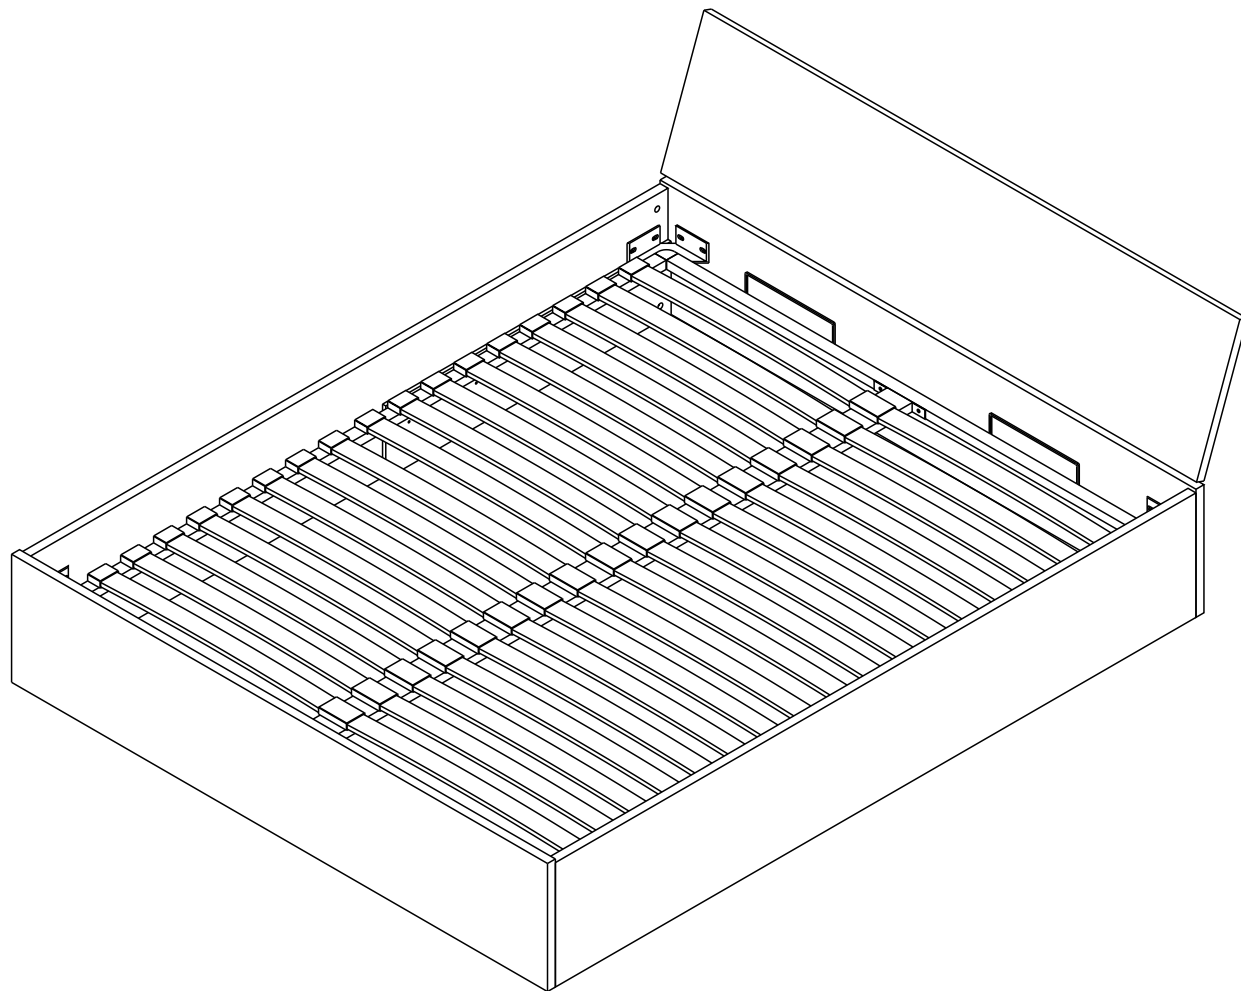


# Łóżko 140 x 200

## PENELOPA


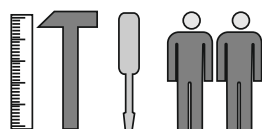







Czas mont. - 60 min.






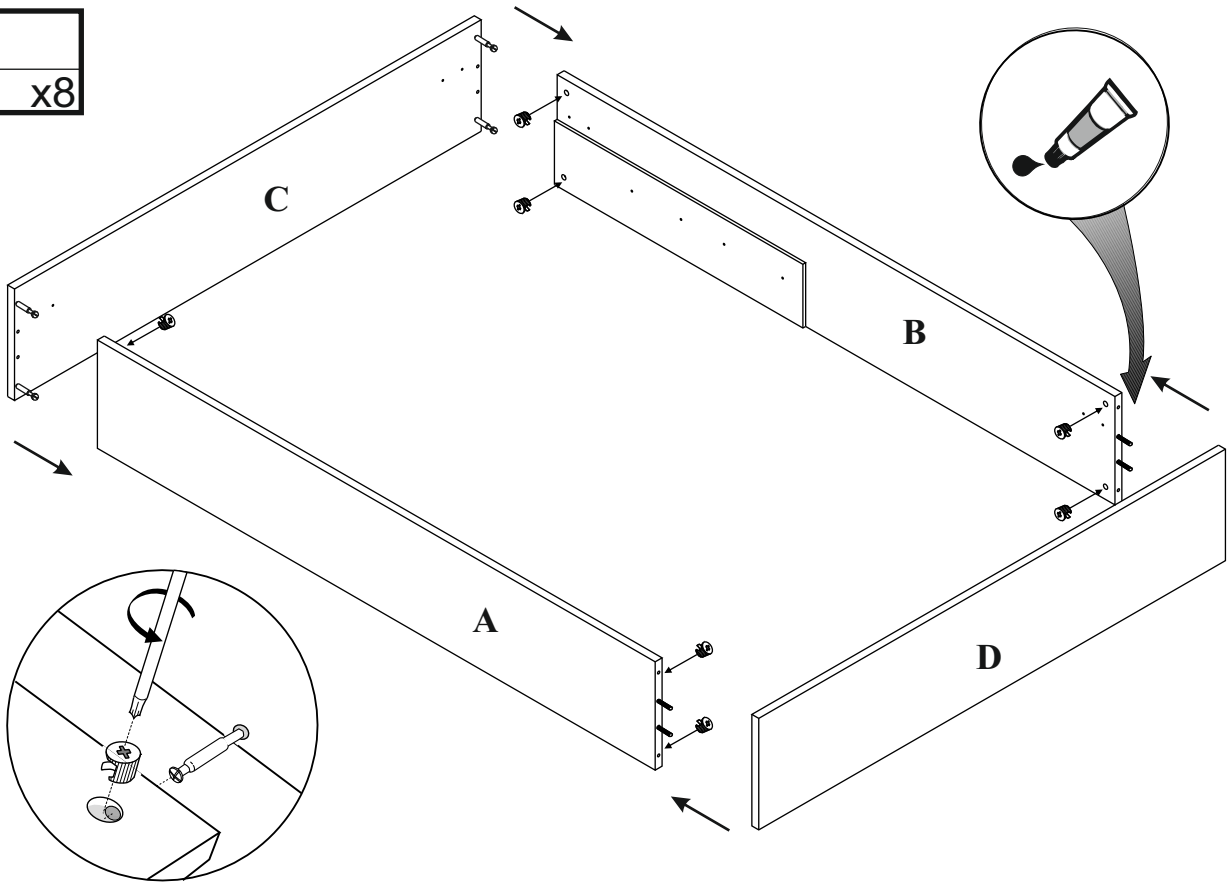
# Łóżko 140 x 200

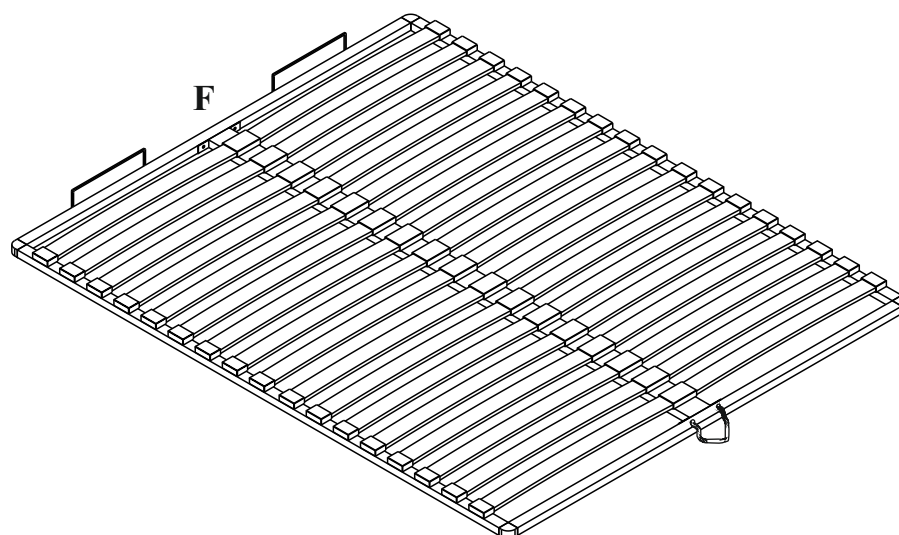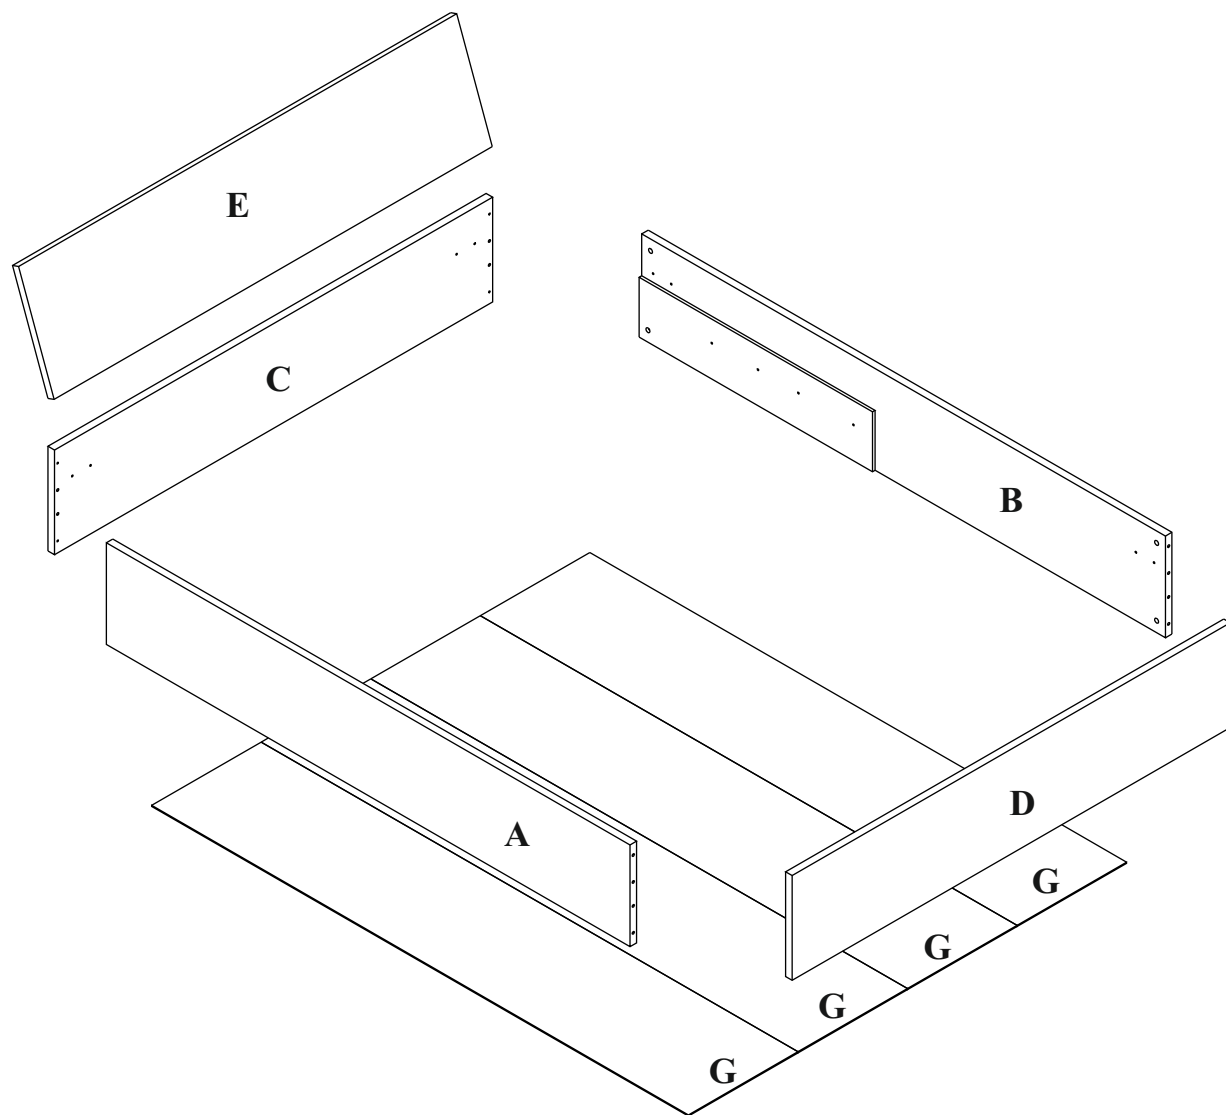

## PENELOPA

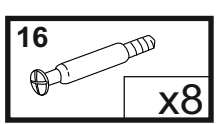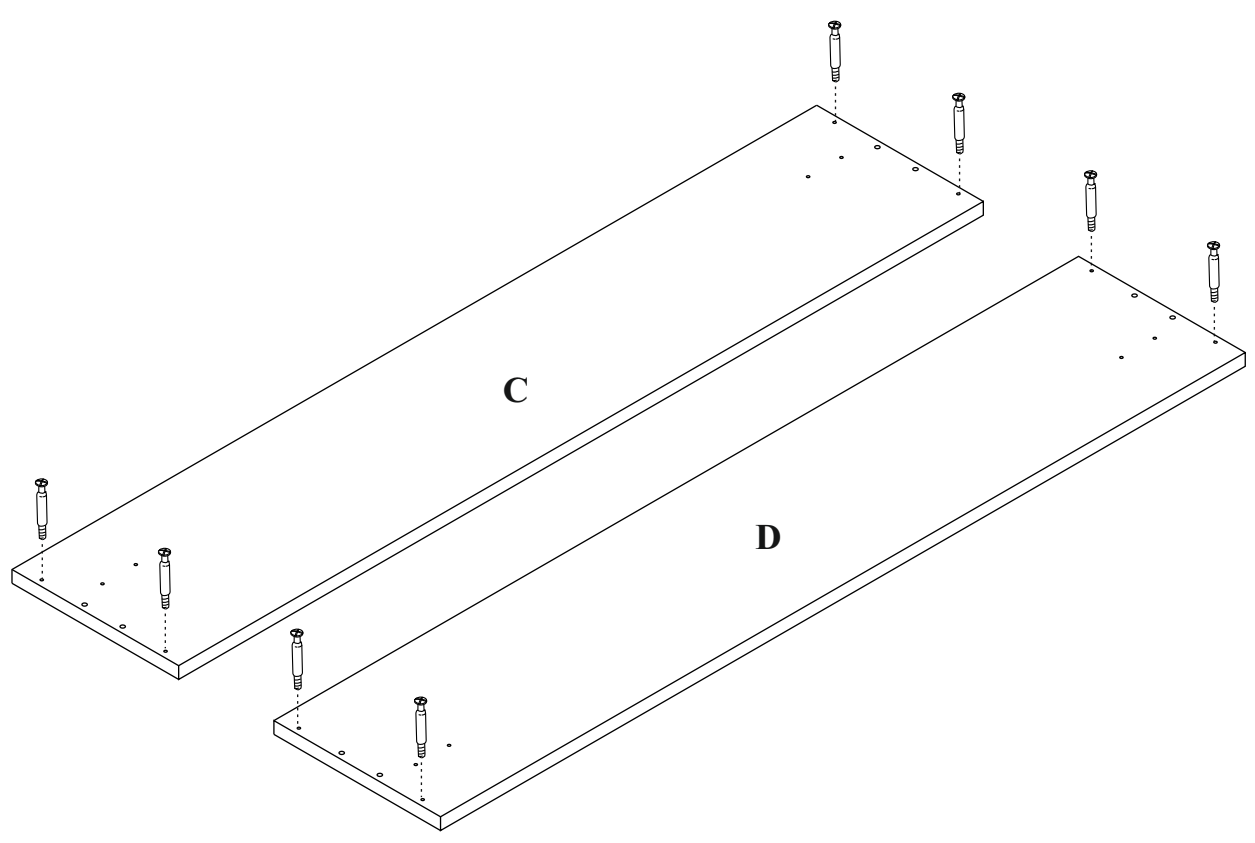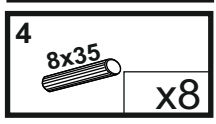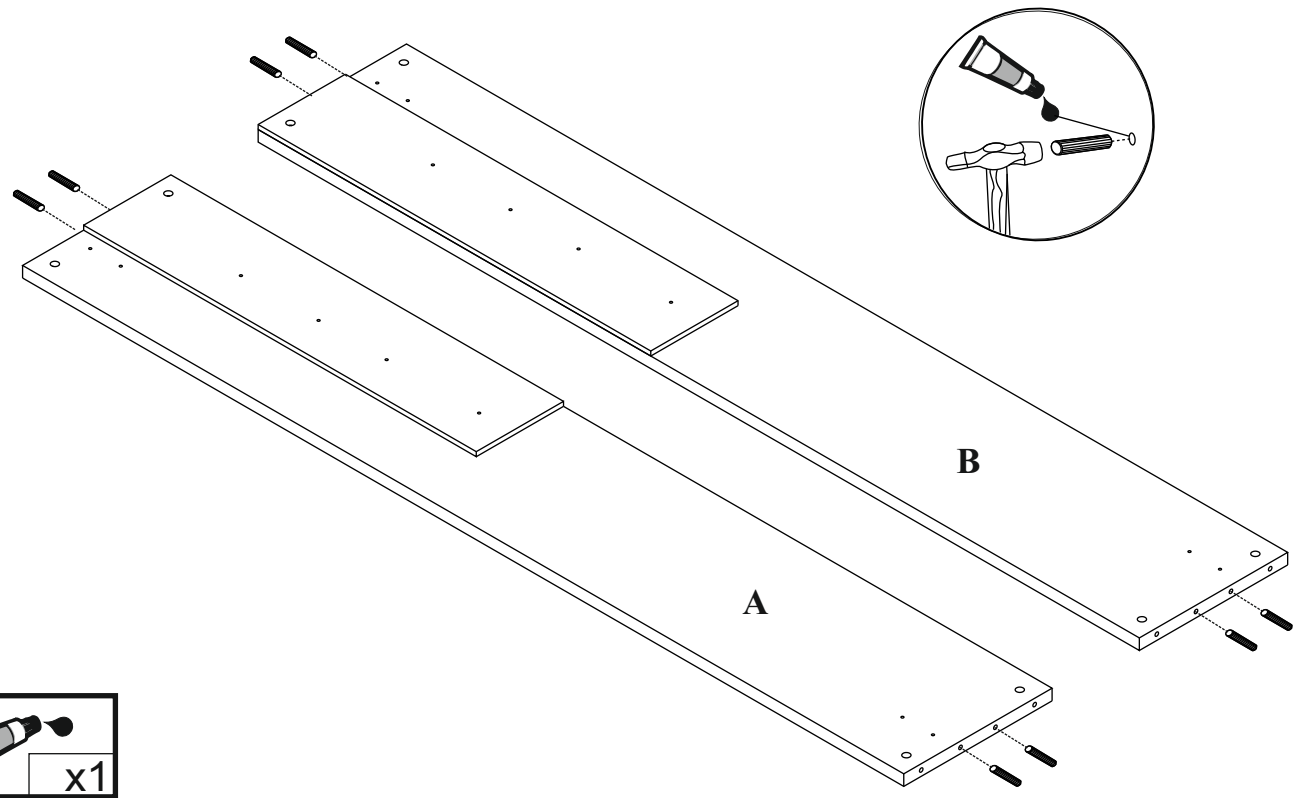











- 17  x8
- 1  x1
- 3  x8




- 13  x4
- 12  4x15 x16

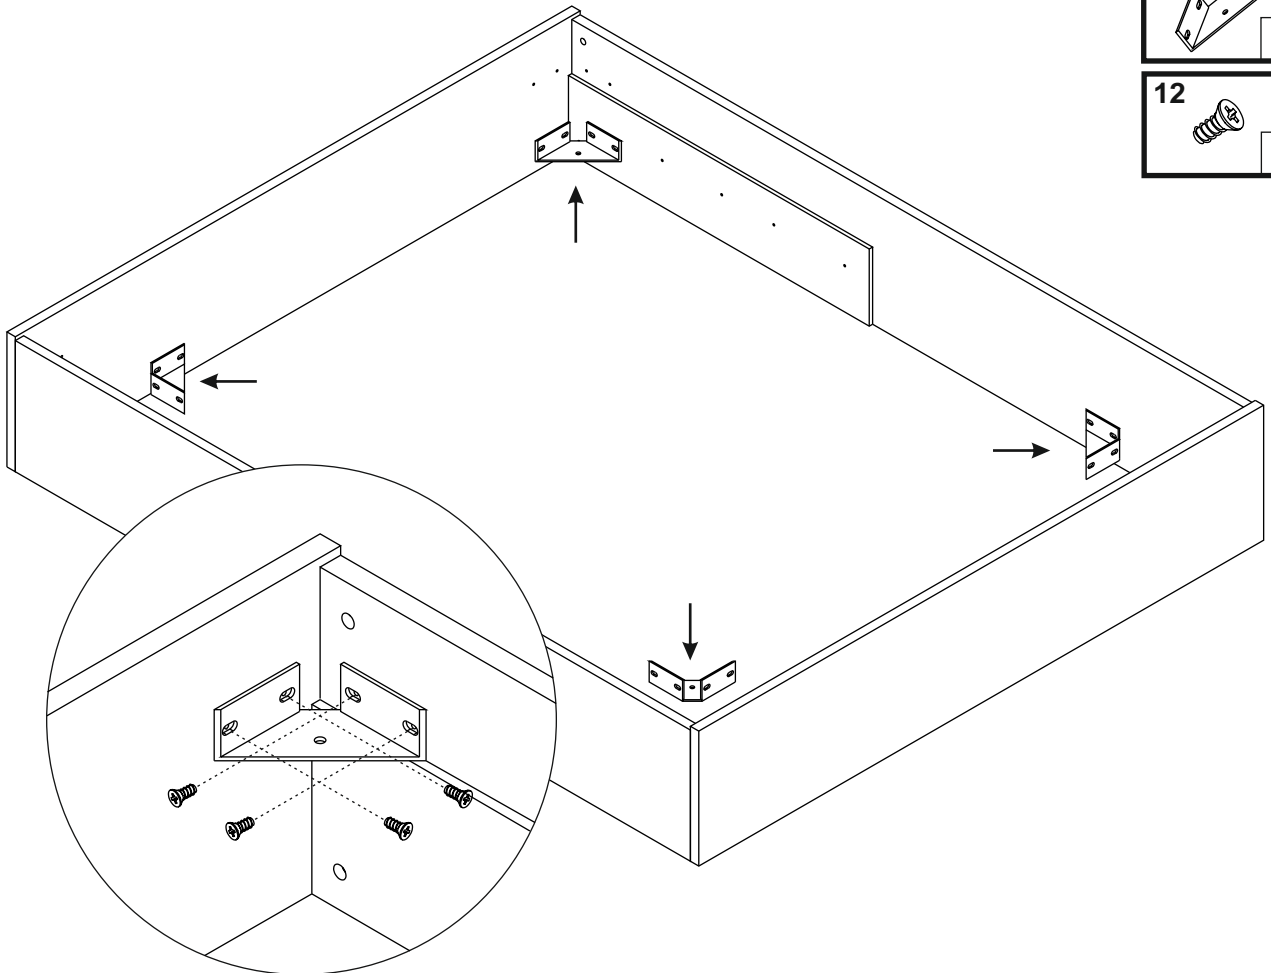

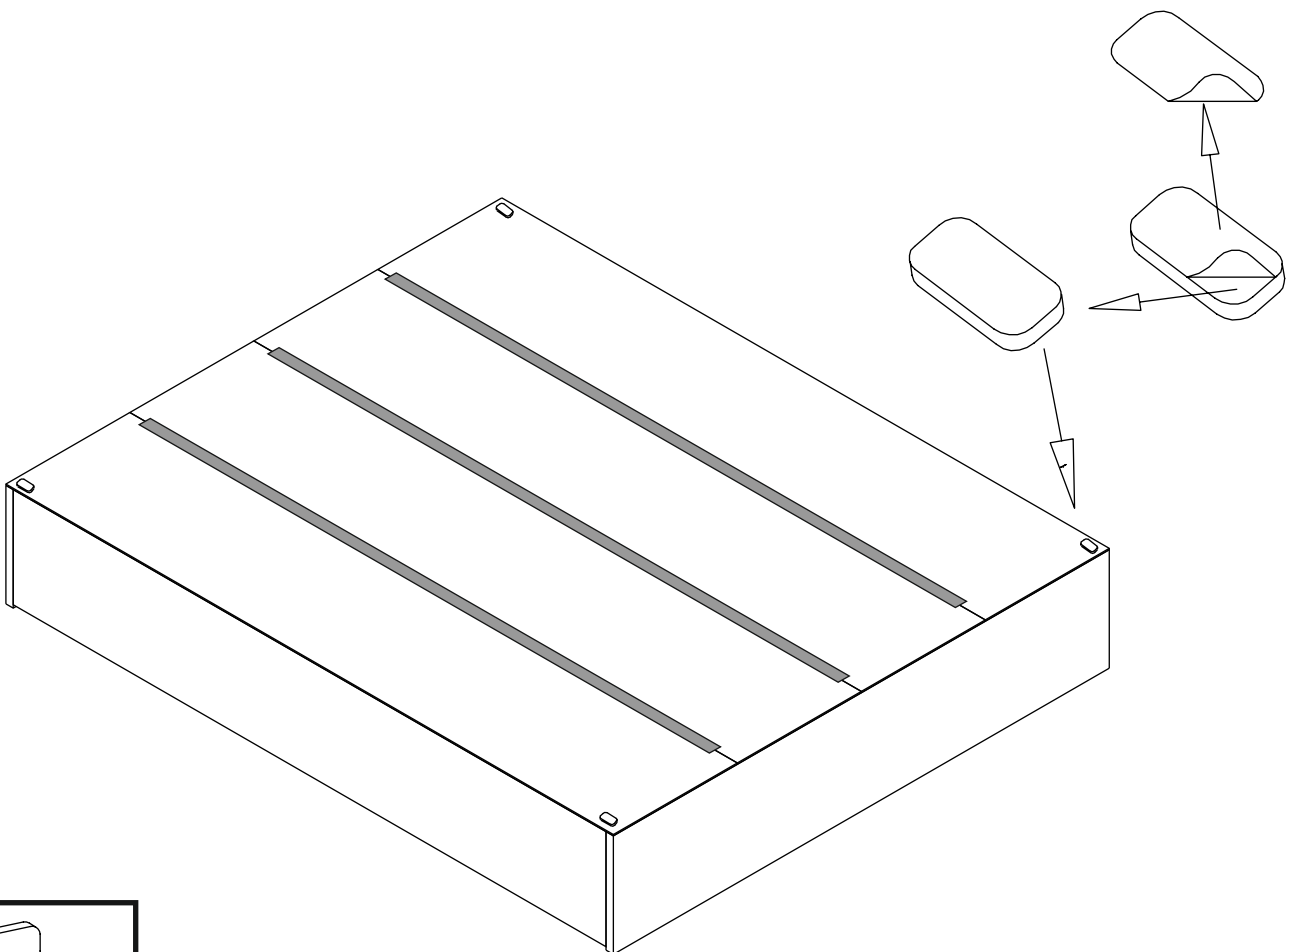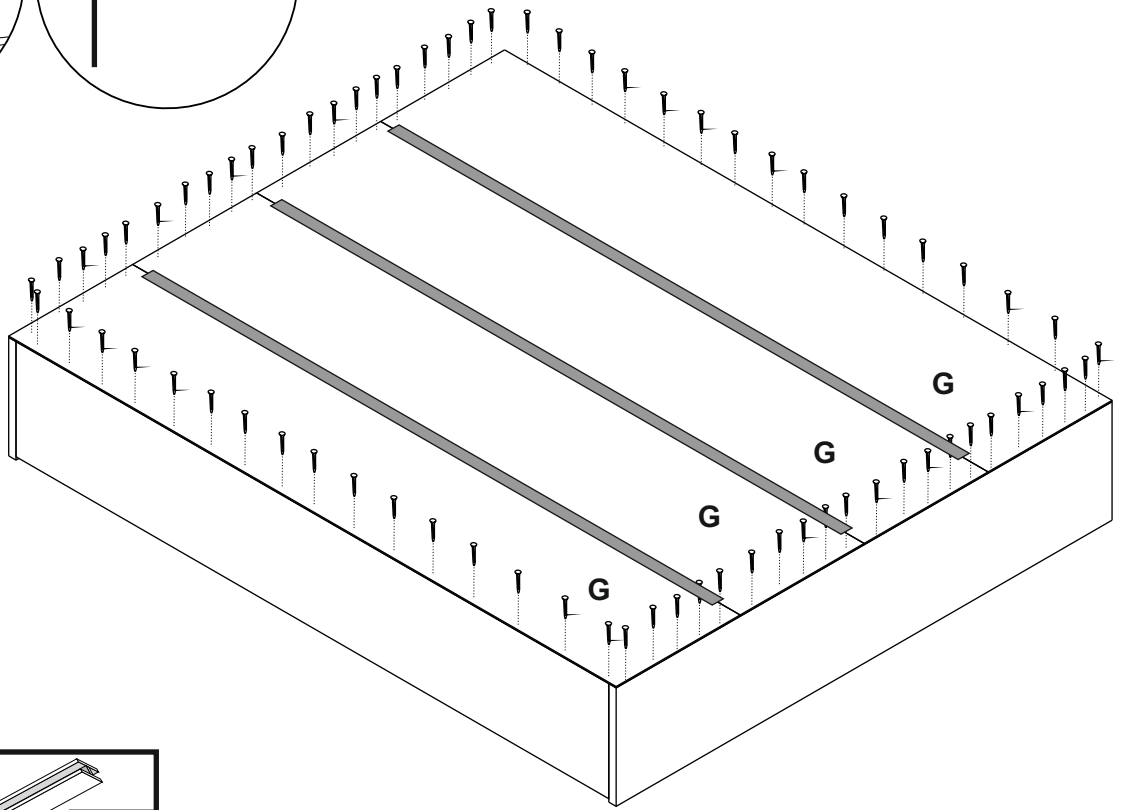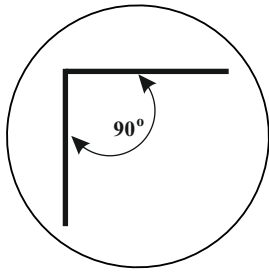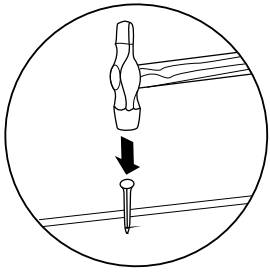


11 4x25  
x6

14  
x3

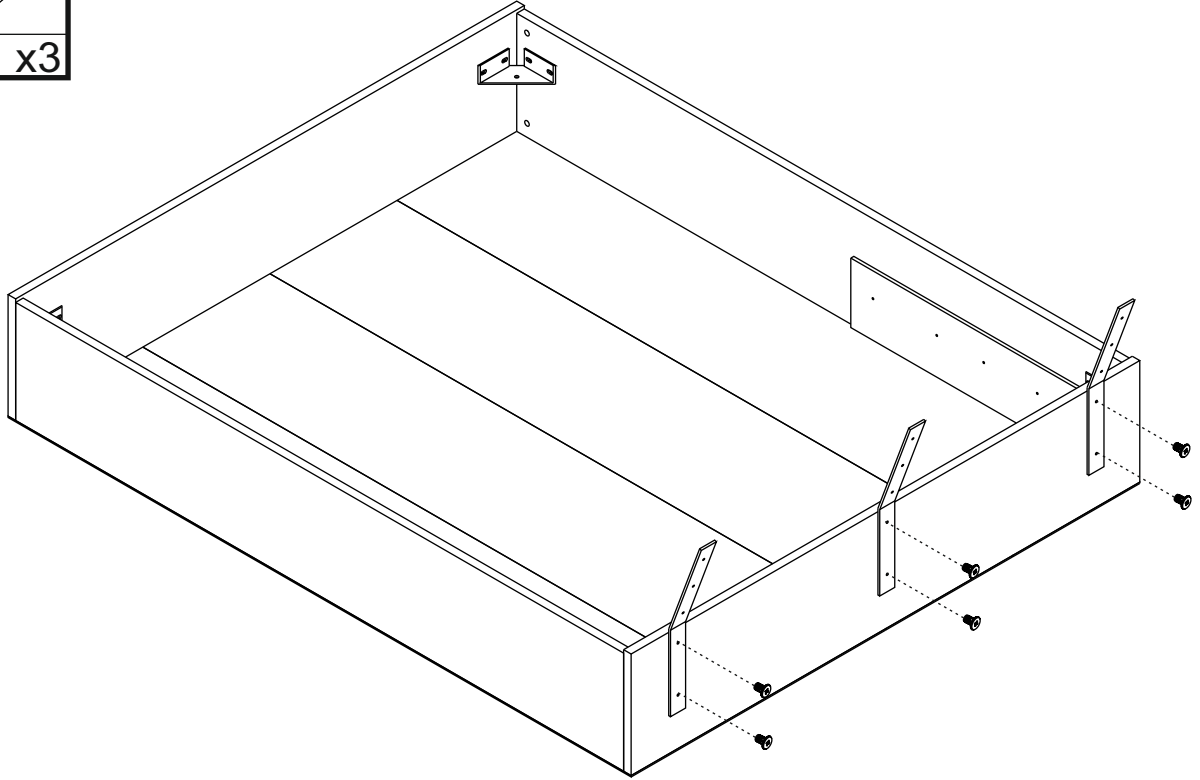


11 4x25  
x6

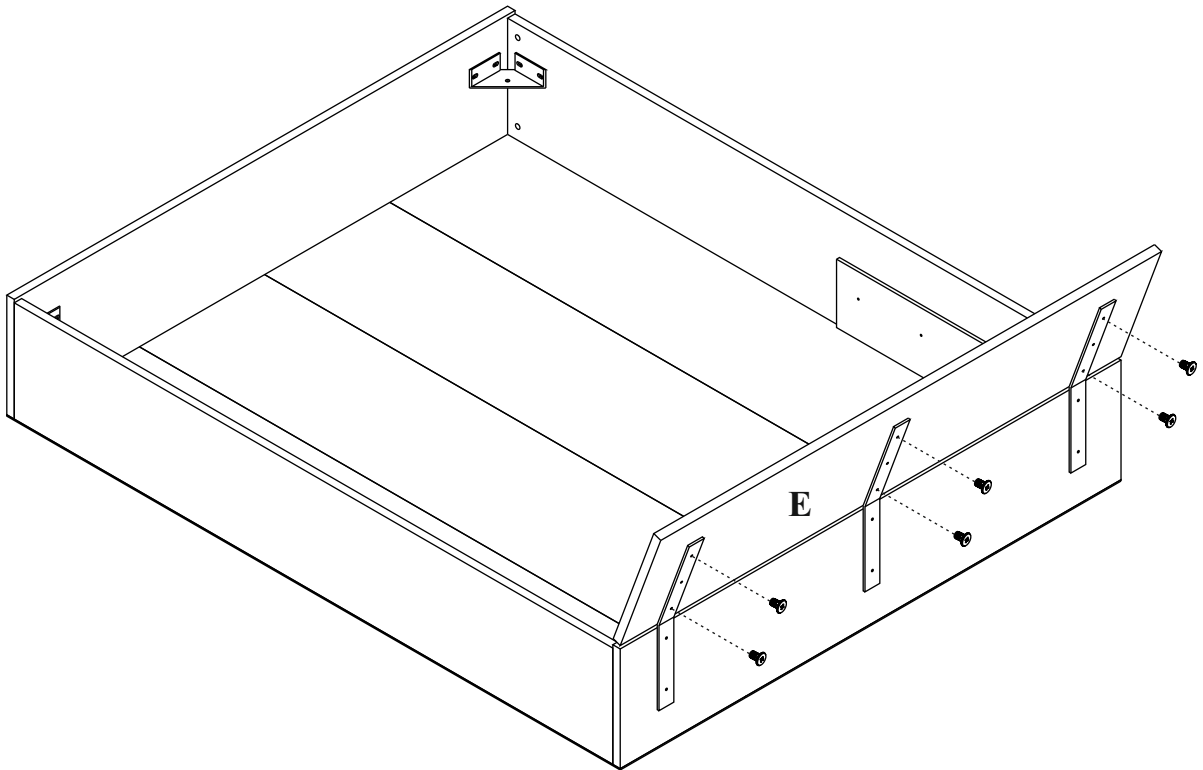

2 M8x20  
x8

15  
x2

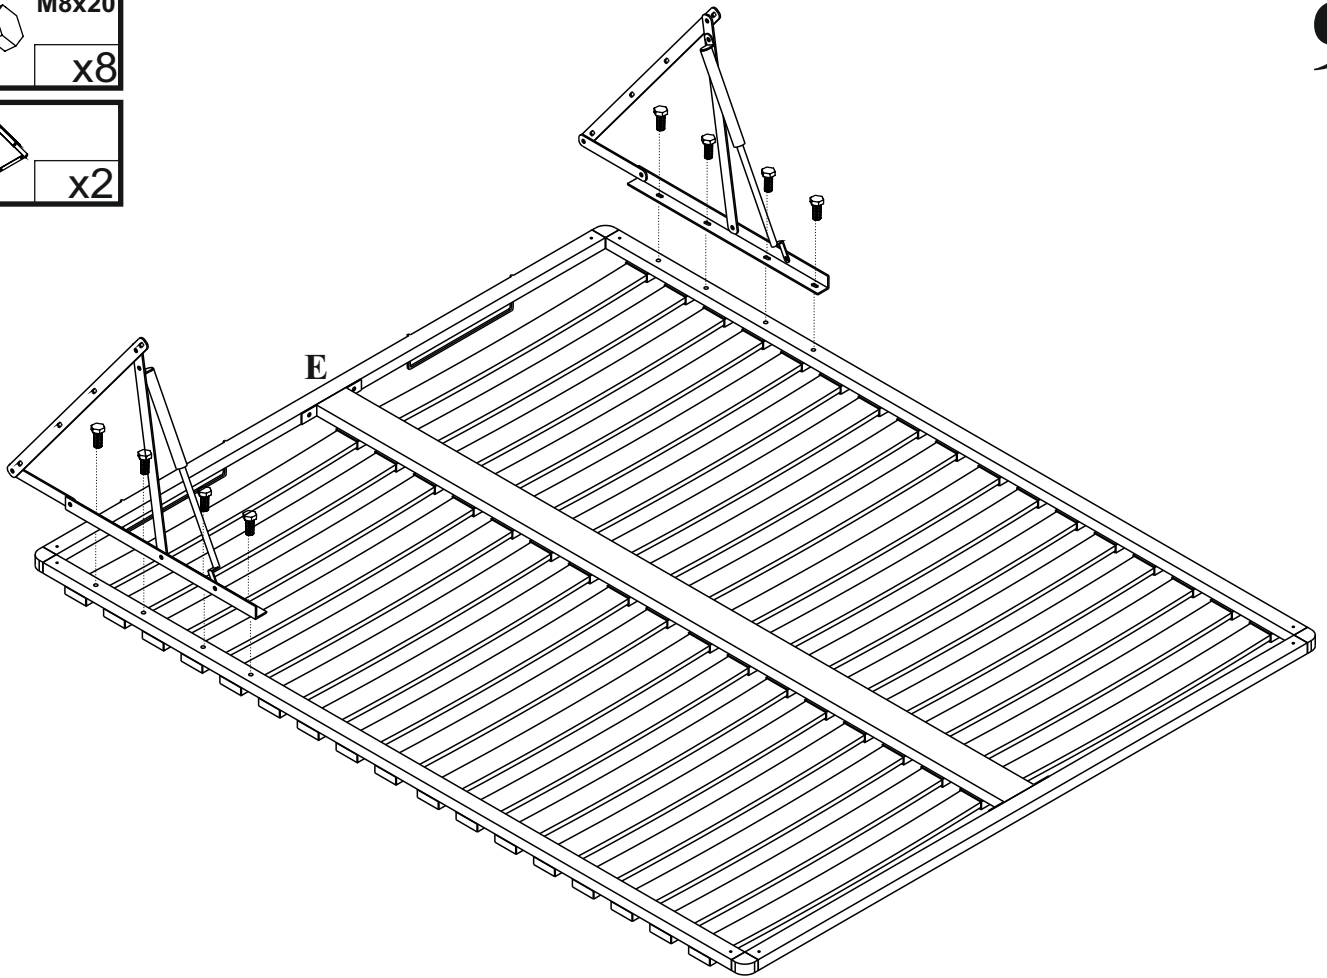

11 4x25  
x8

