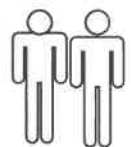
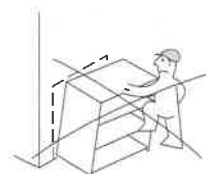
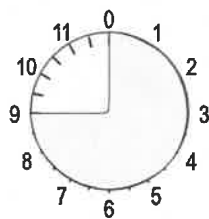
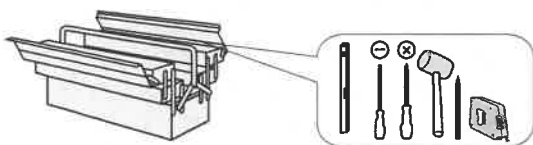
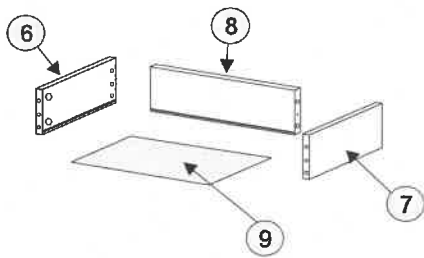
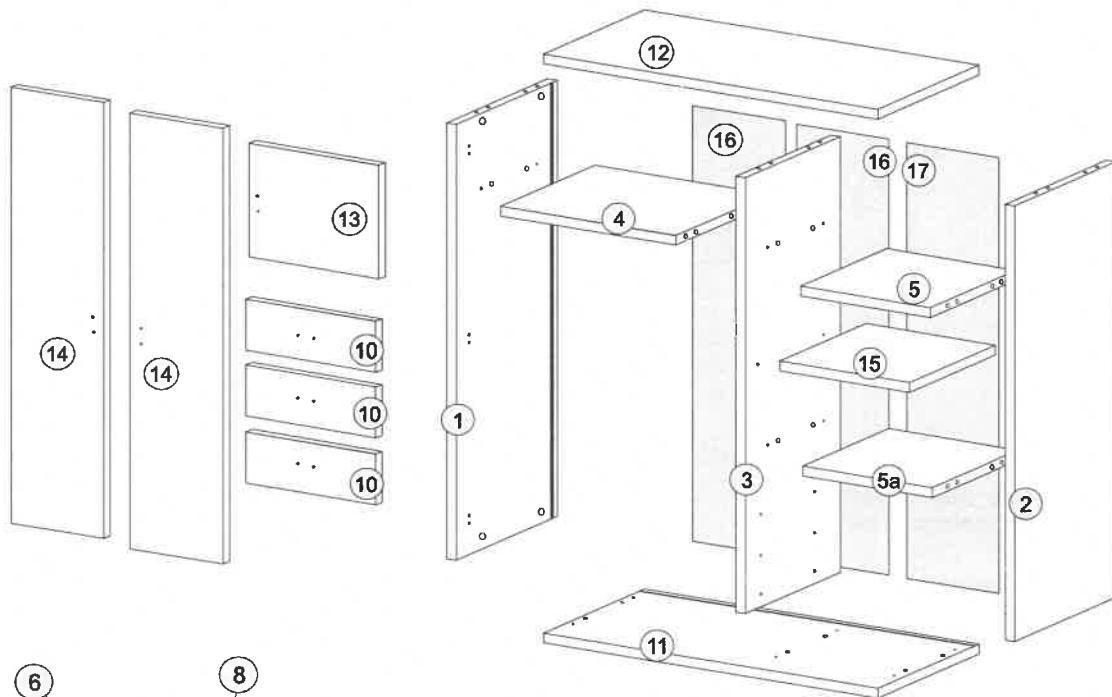

























# KEVIN 1

## Instrukcja montażu



<b>A</b>  x1	<b>B</b>  x42	<b>C</b>  x40	<b>D</b>  x40
<b>D1</b>  x16	<b>D2</b>  x4	<b>D3</b>  x20	<b>H</b>  x6
<b>L</b>  x6	<b>W1 5,3x13</b>  x24	<b>W2 4x30</b>  x10	<b>W3 4x20</b>  x12
<b>T</b>  x5	<b>S</b>  x3	<b>Ud</b>  x2	<b>W4 4x16</b>  x20
<b>E1</b>  x5	<b>E2</b>  x8	<b>E3</b>  x3	<b>Ud1</b>  x1
<b>S</b>  x18	<b>J</b>  x4	<b>J</b>  x1	

