










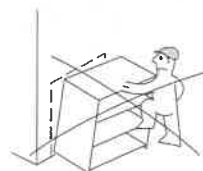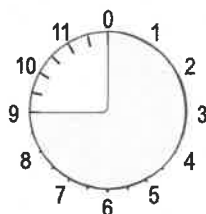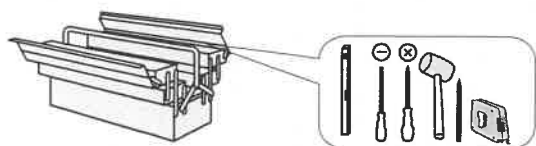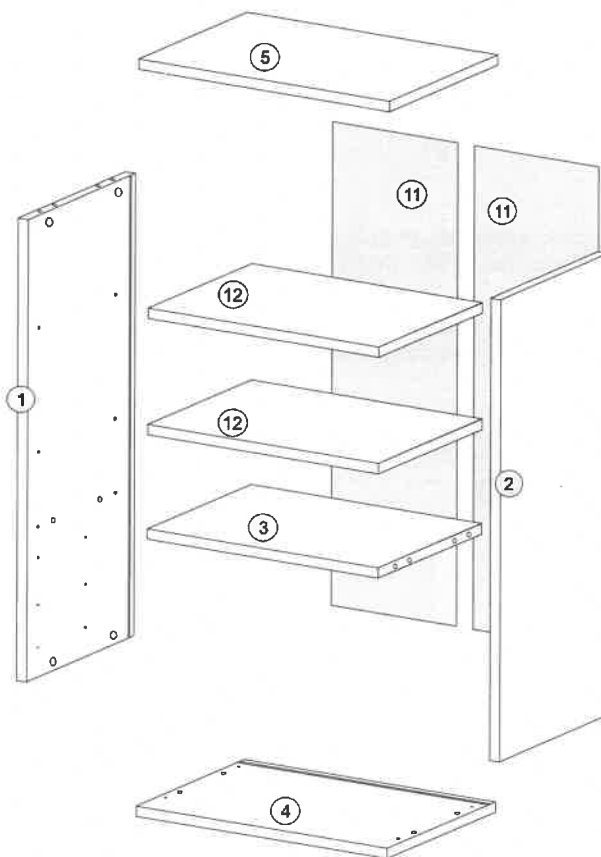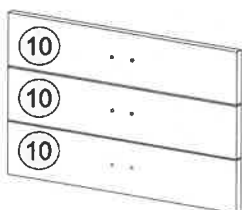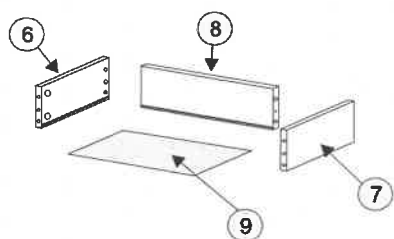





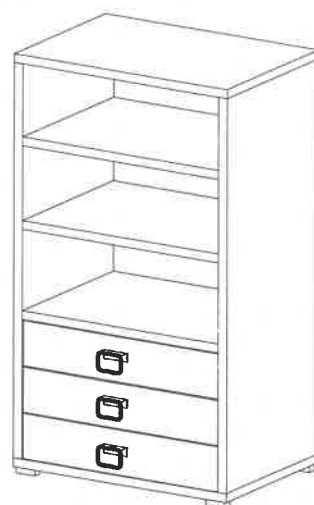




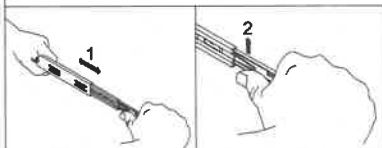

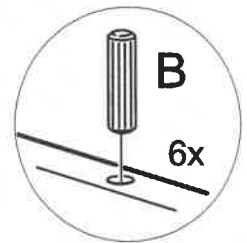
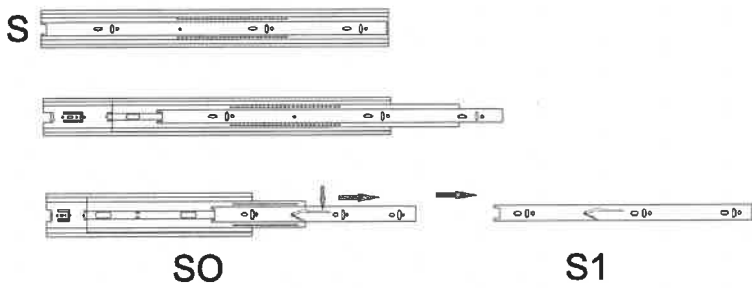


# KEVIN 5


## Instrukcja montażu





<b>A</b>  x1	<b>B</b>  x30	<b>C</b>  x24	<b>D</b>  x24
<b>D1</b>  x20	<b>D2</b>  x4	<b>S</b>  x10	<b>H</b>  x3
<b>L</b>  x6	<b>W1 5,3x13</b>  x24	<b>W2 4x30</b>  x8	<b>W3 4x20</b>  x6
<b>T</b>  x4	<b>S</b>  x3	<b>J</b>  x8	
<b>Y</b>  x1			





x3

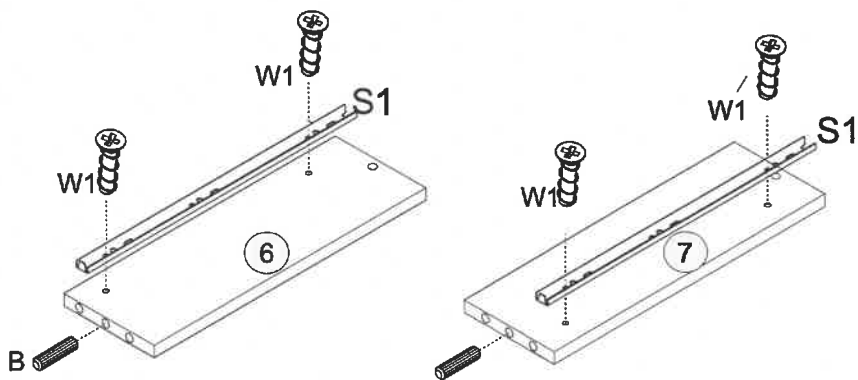

x3

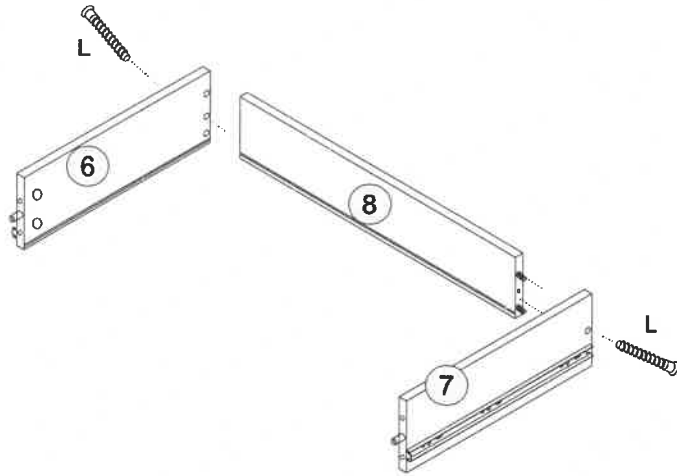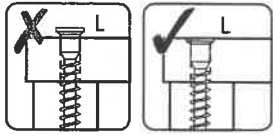

x3

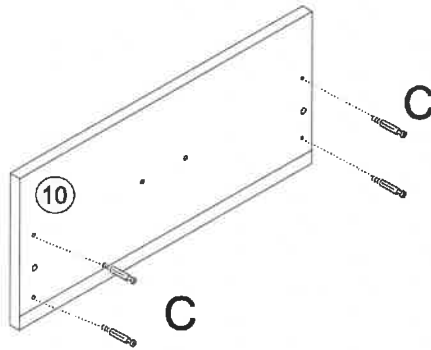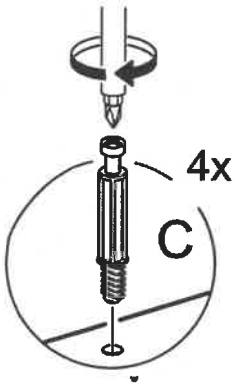

x3

