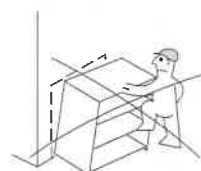
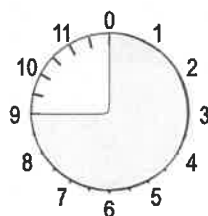
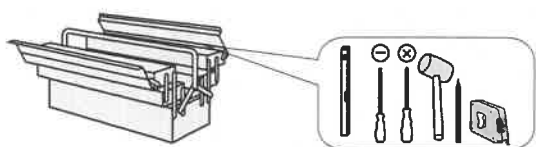
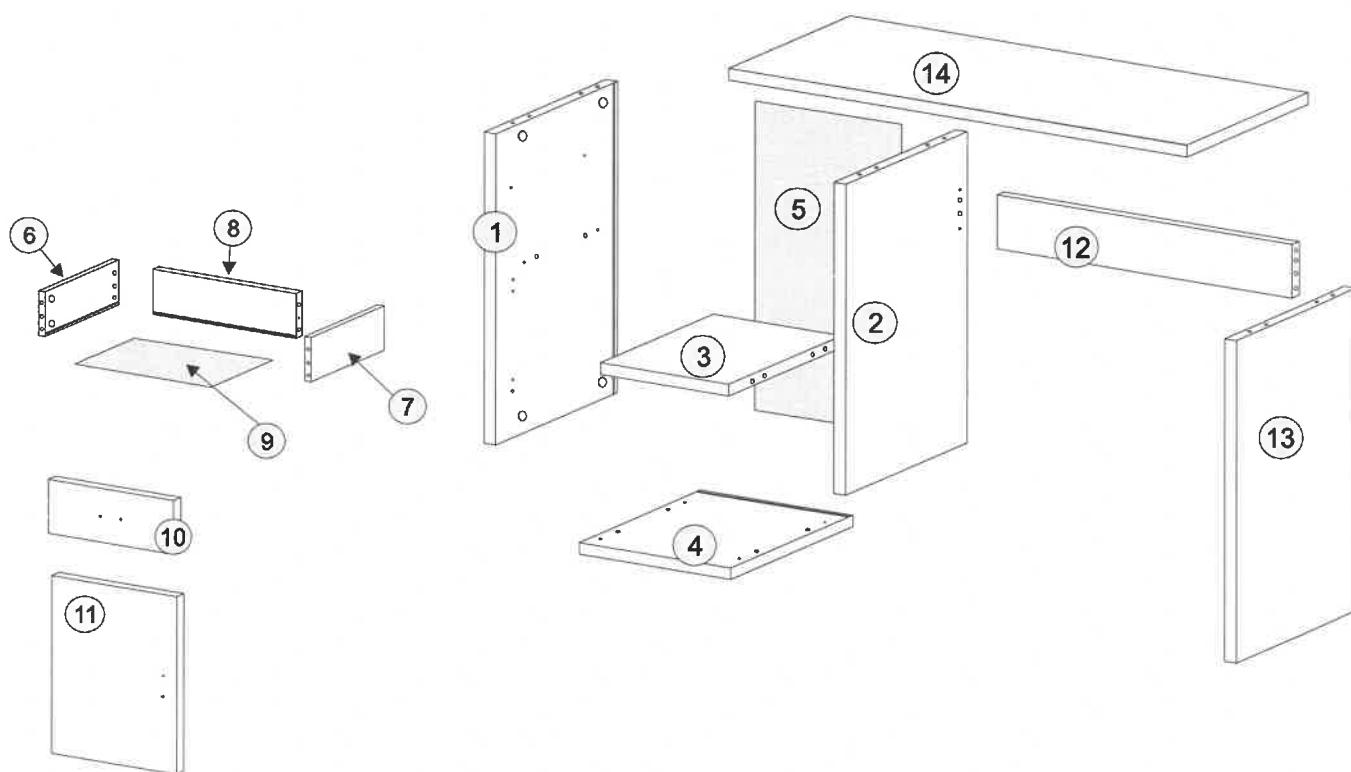
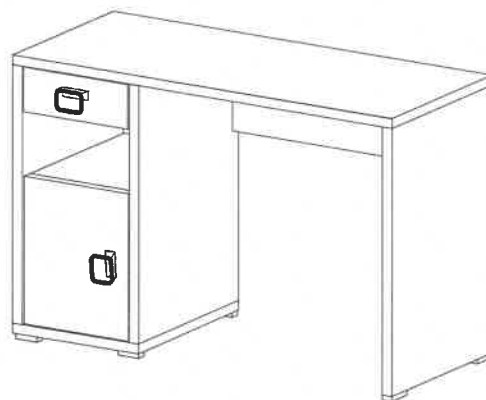













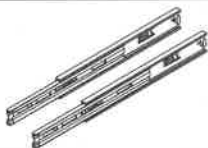
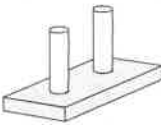





KEVIN 8

Instrukcja montażu



A  x1	B  x24	C  x22	D  x22
D1  x18	D2  x4	S  x6	H  x2
L  x2	W1 5,3x13  x8	W2 4x30  x8	W3 4x20  x4
T  x4	S  x1	T1  x2	W4 4x16  x4
E1  x2	E2  x2	