


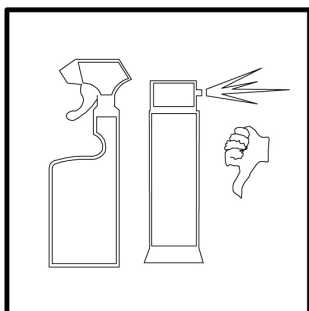
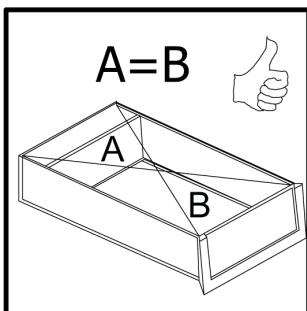
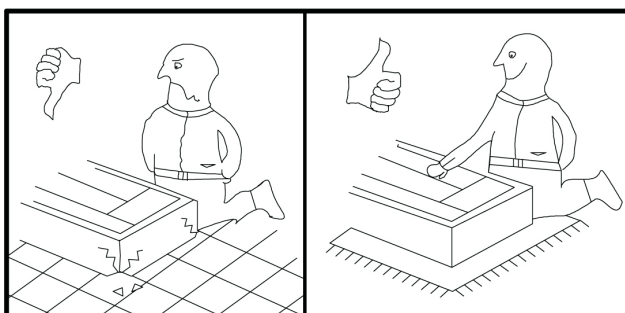
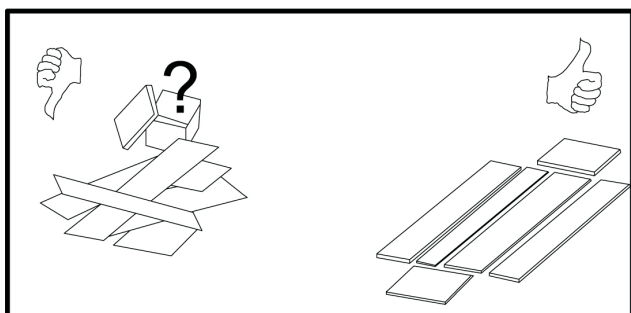
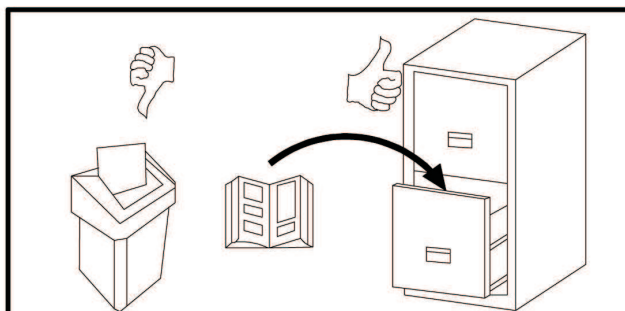










TIMBER KOMMODE SB



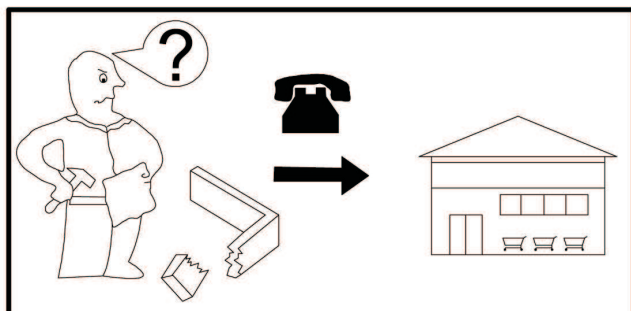







- (D)** Montageanleitung
- (NL)** Handleiding voor de montage
- (TR)** Montaj talimatı
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (HU)** Összeszerelési útmutató
- (GB)** Assembly instructions
- (PL)** Instrukcja montażu
- (RU)** Инструкция по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instructiuni de asamblare
- (SK)** Montážny návod




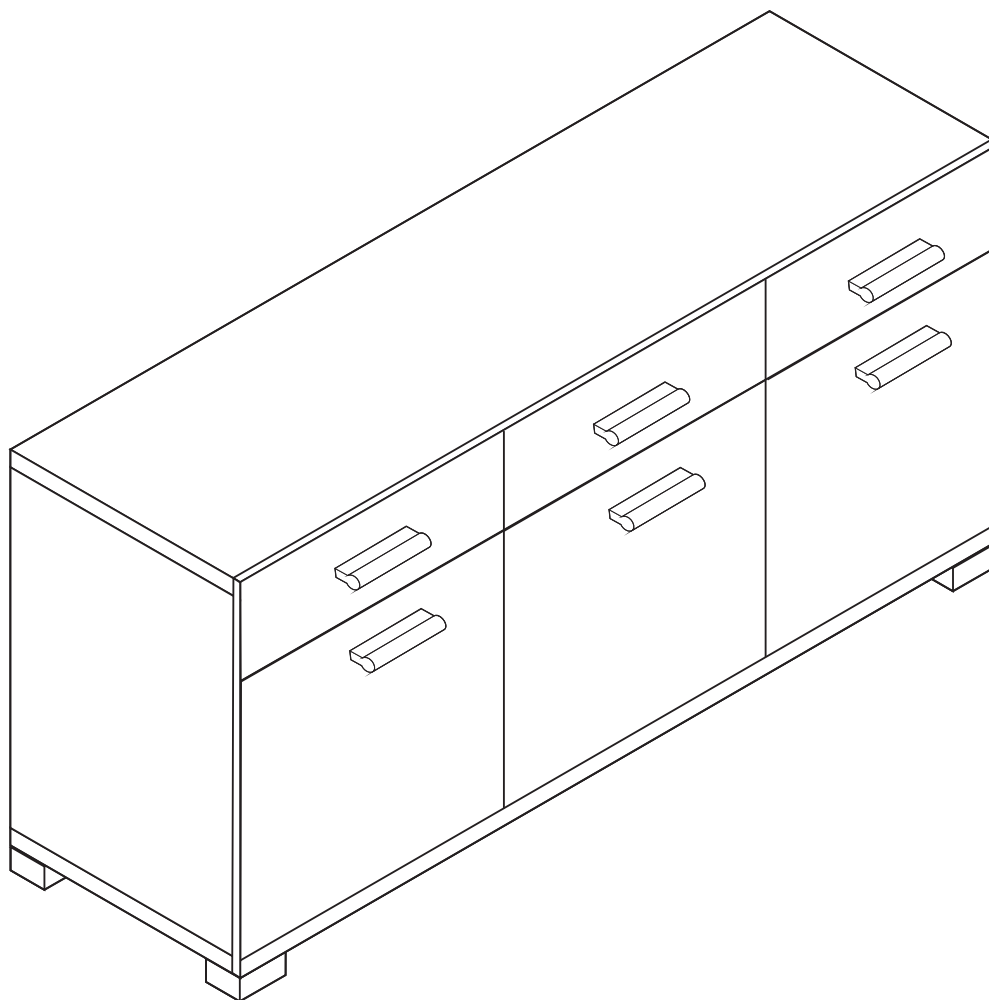






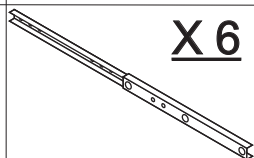
39		 3x20 X 5	35		 X 5
1	 8x35 <u>X 20</u>	29	 <u>X 2</u>	30	 GLUE LEIM <u>X 1</u>
2	 <u>X 16</u>			22	 7x50 <u>X 20</u>
3	 <u>X 6</u>	13	 <u>X 8</u>	25	 M 4 X 8 <u>X 6</u>
4	 4x30 <u>X 18</u>	9	 <u>X 10</u>	23	 <u>X 6</u>
5	 <u>X 4</u>	10	 <u>X 5</u>	61	 5x9 <u>X 12</u>
6	 5x11 <u>X 22</u>	26	 <u>X 1</u>	60	 670 mm <u>X 1</u>
12	 <u>X 80</u>	24	 <u>X 6</u>		

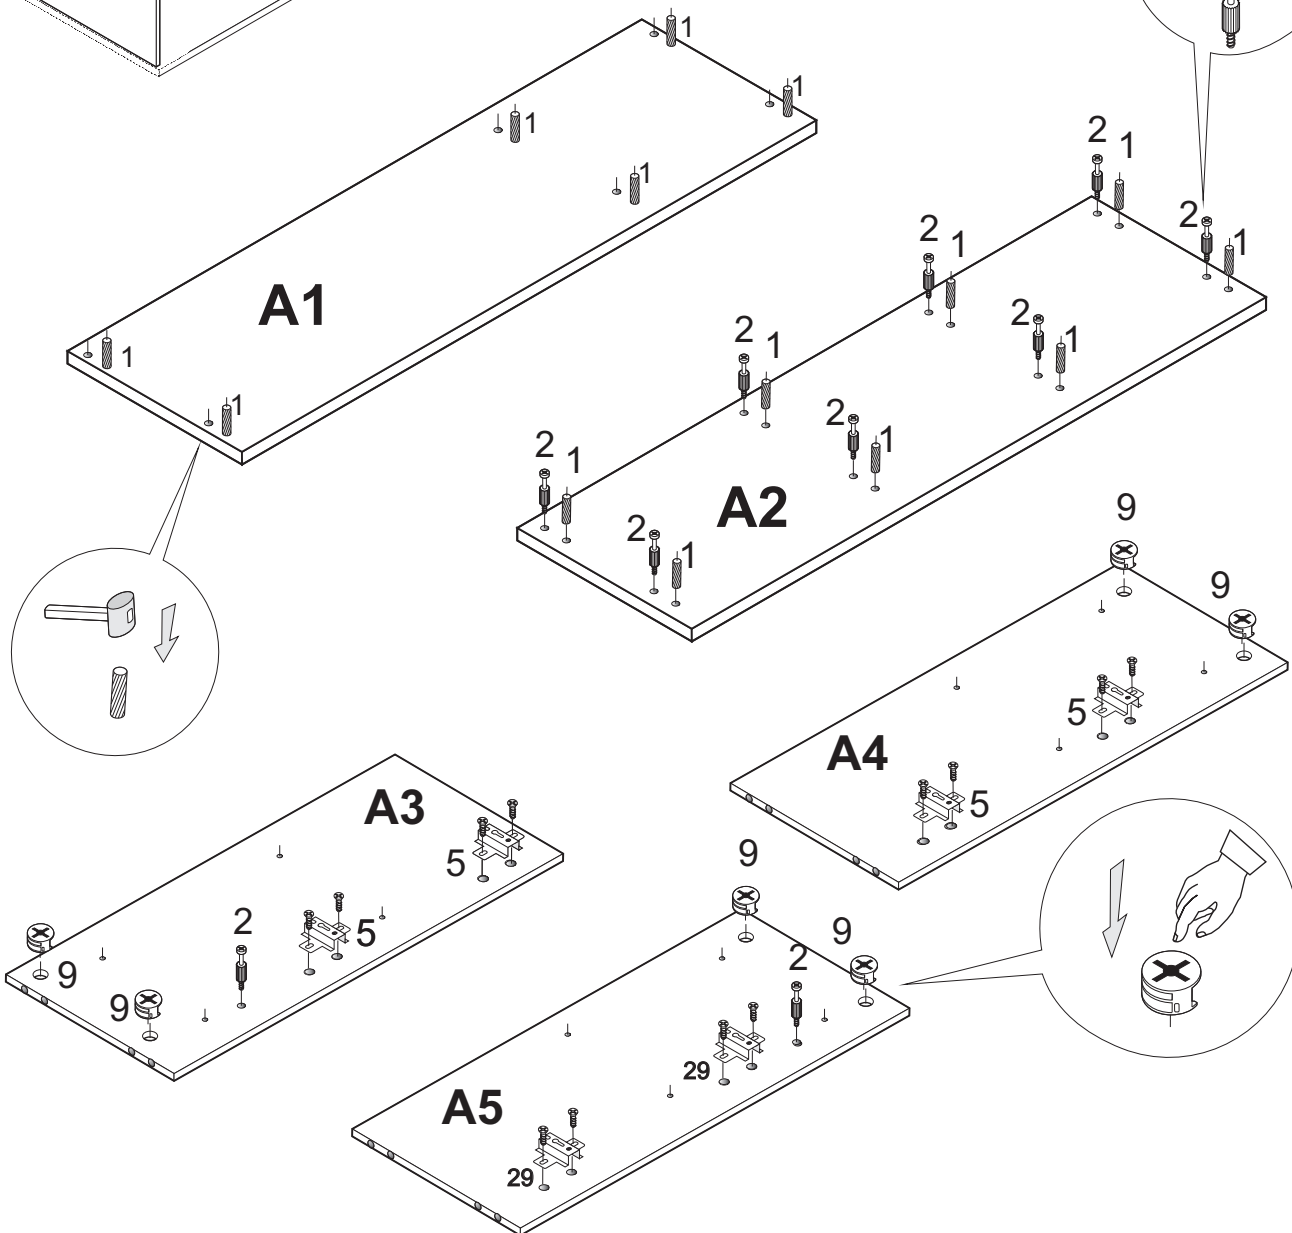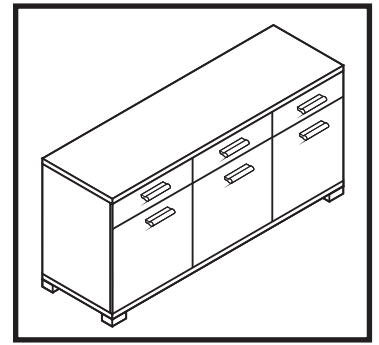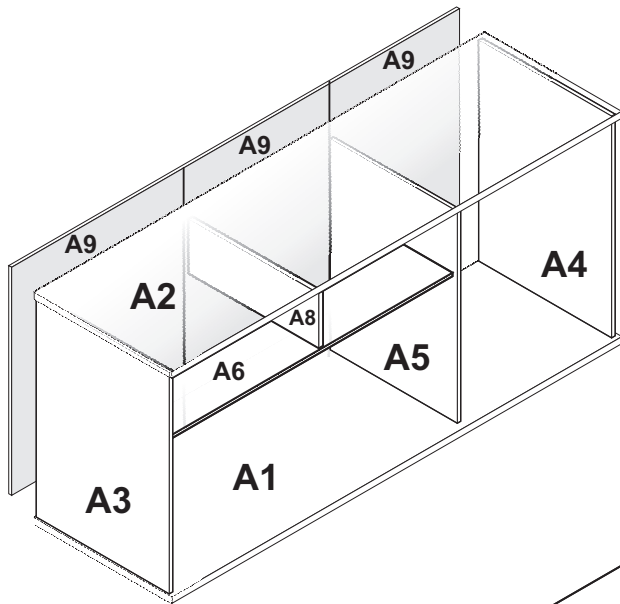

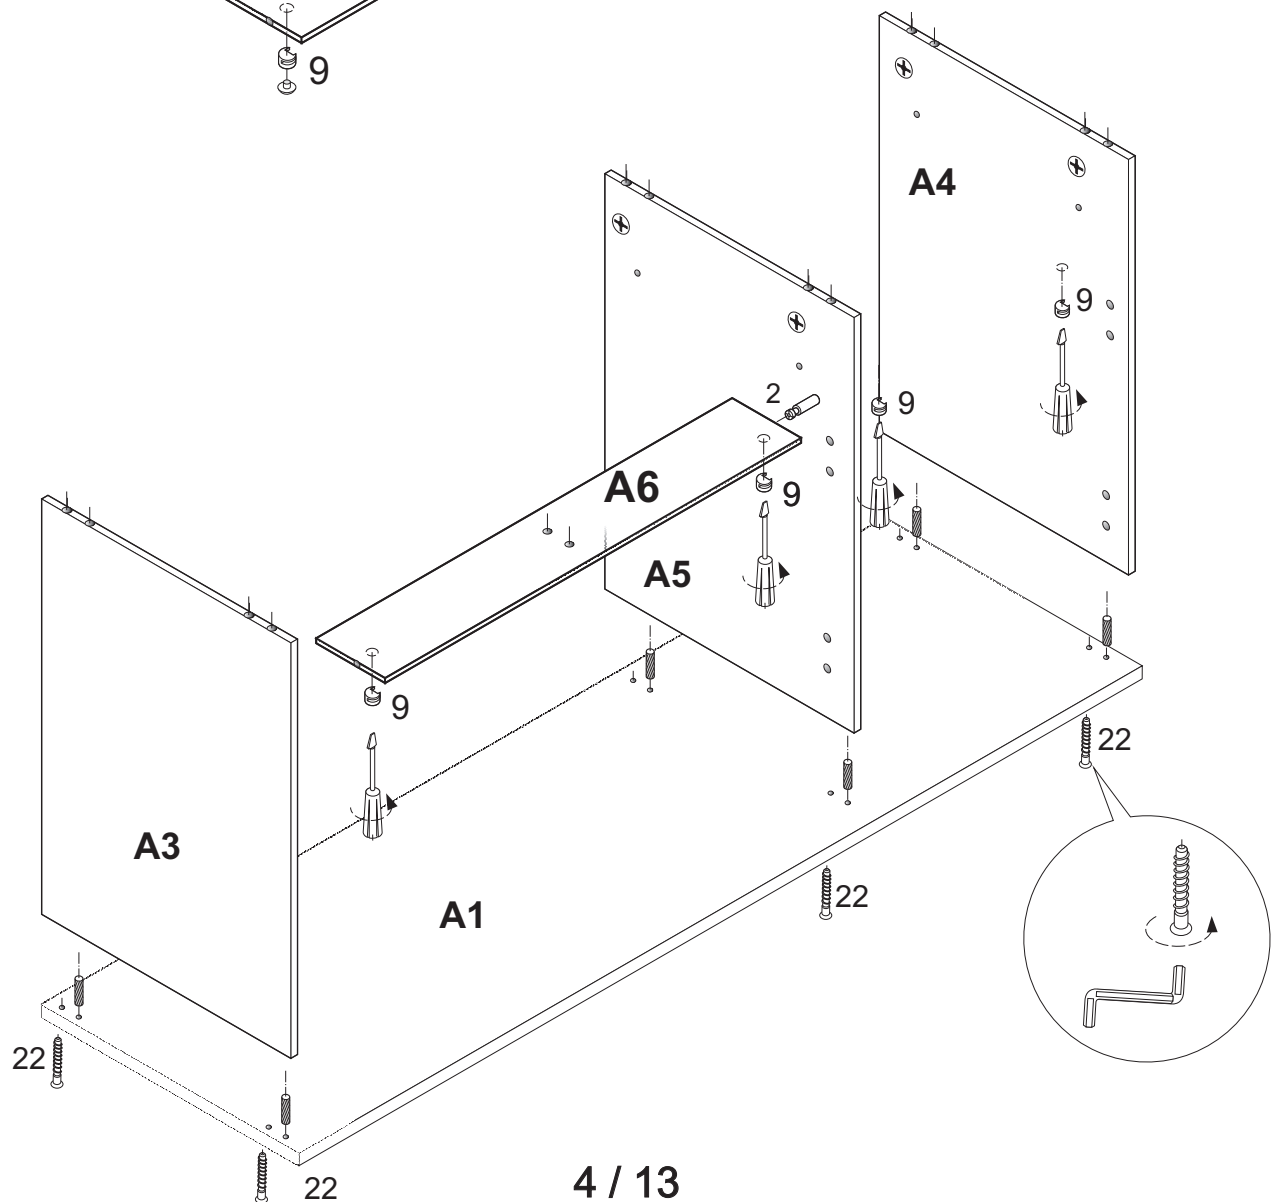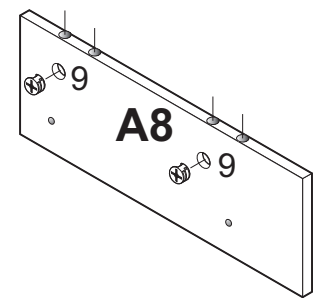
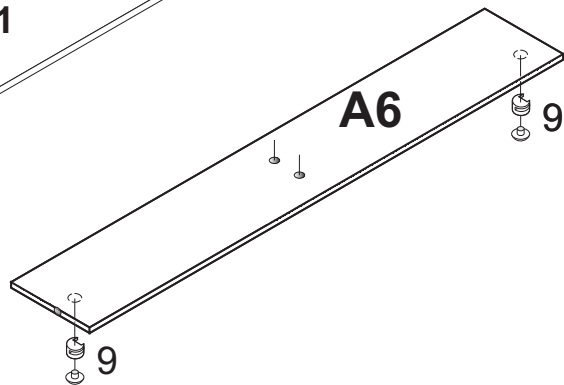
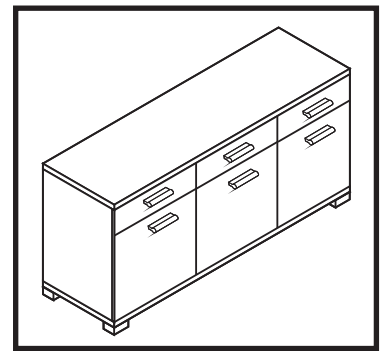
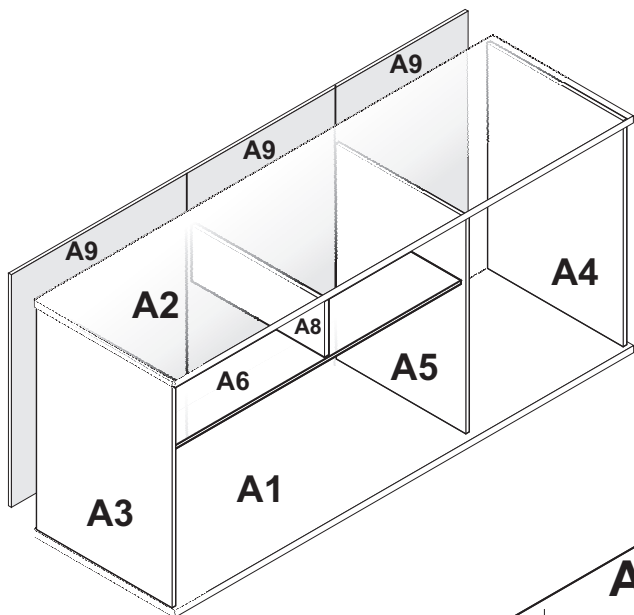


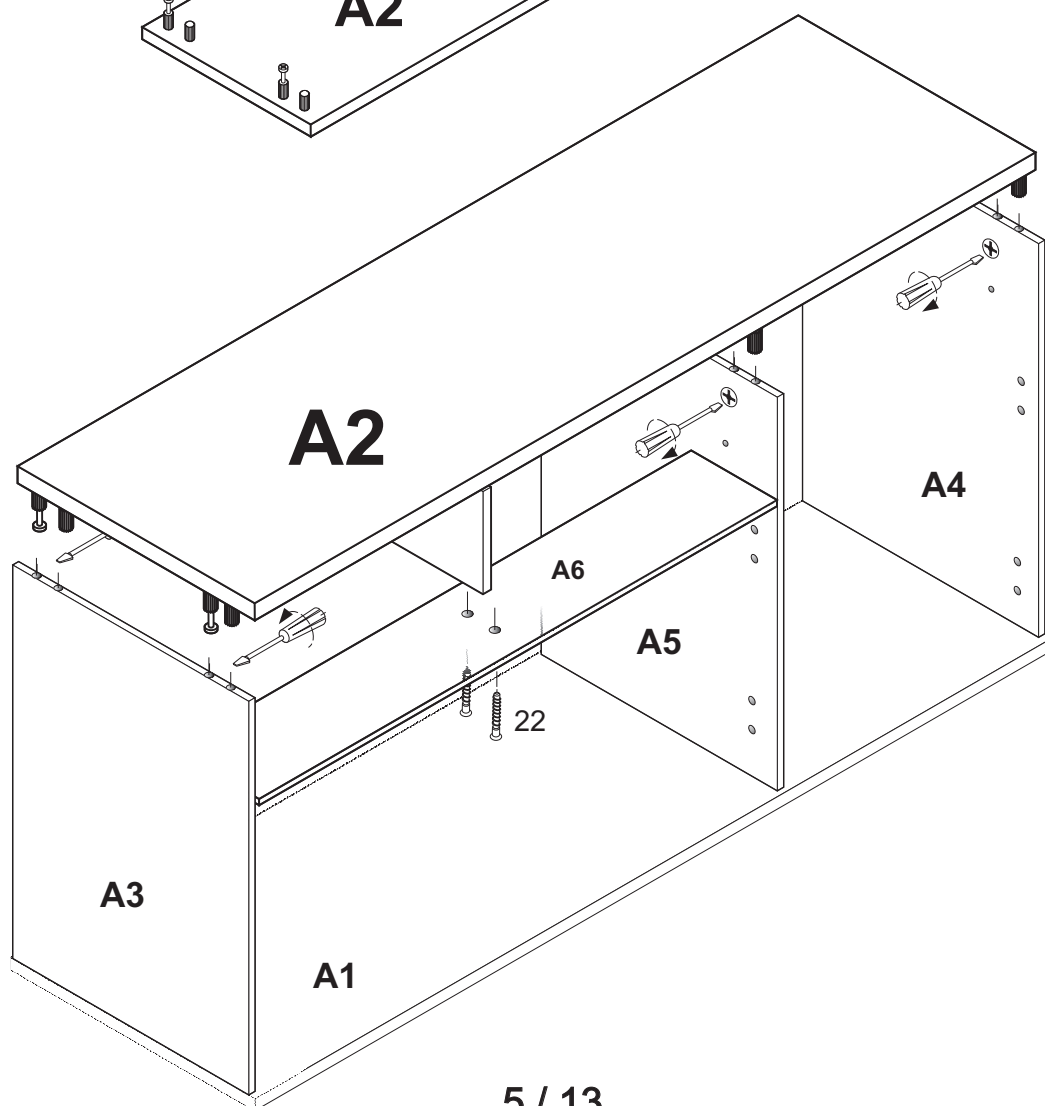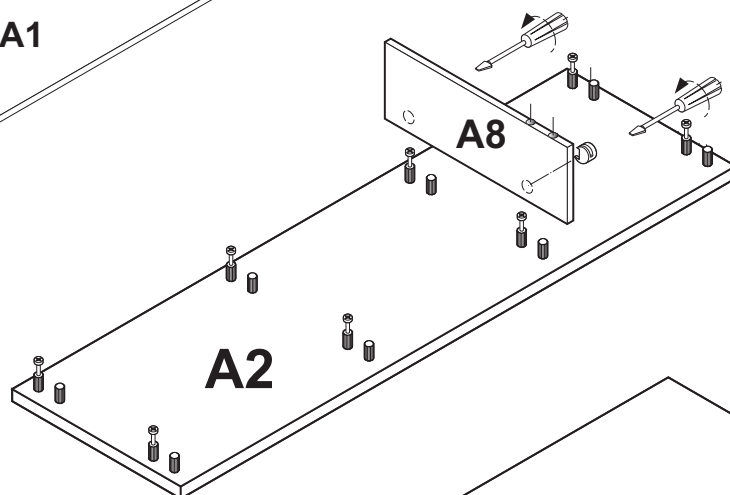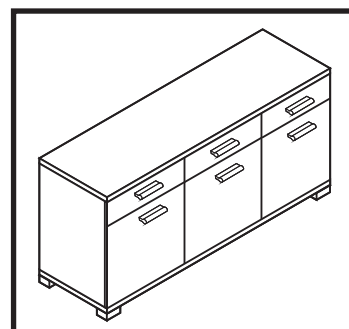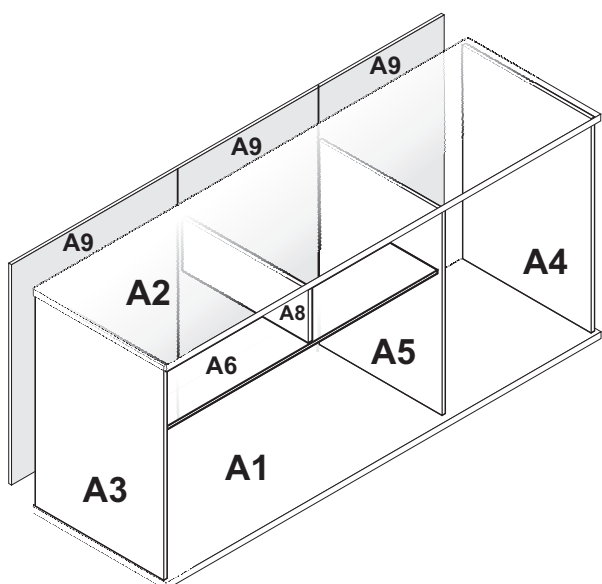


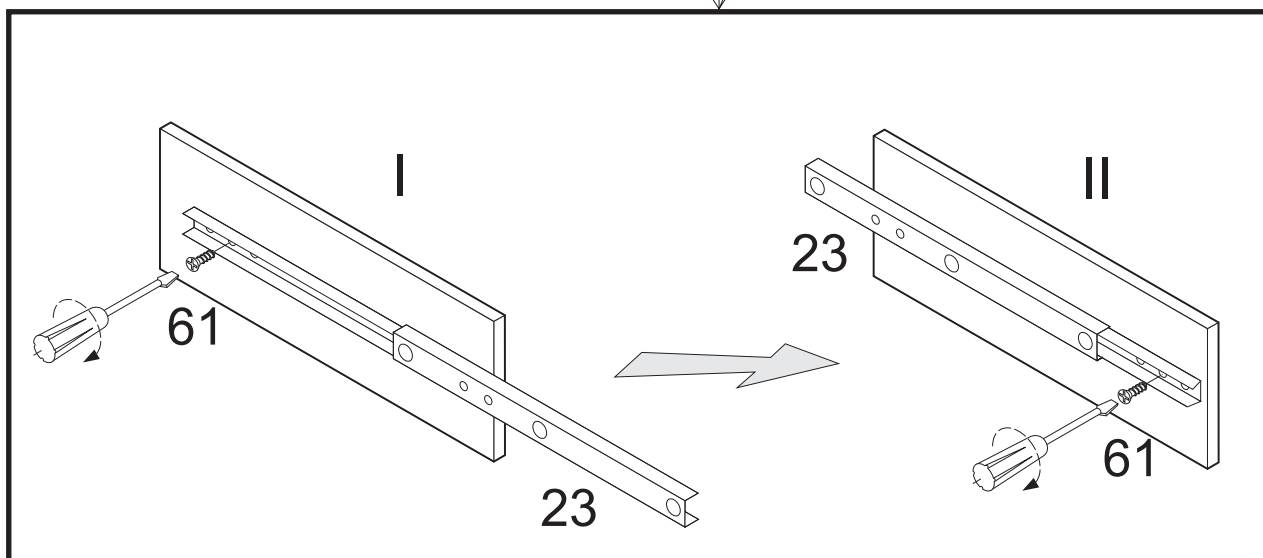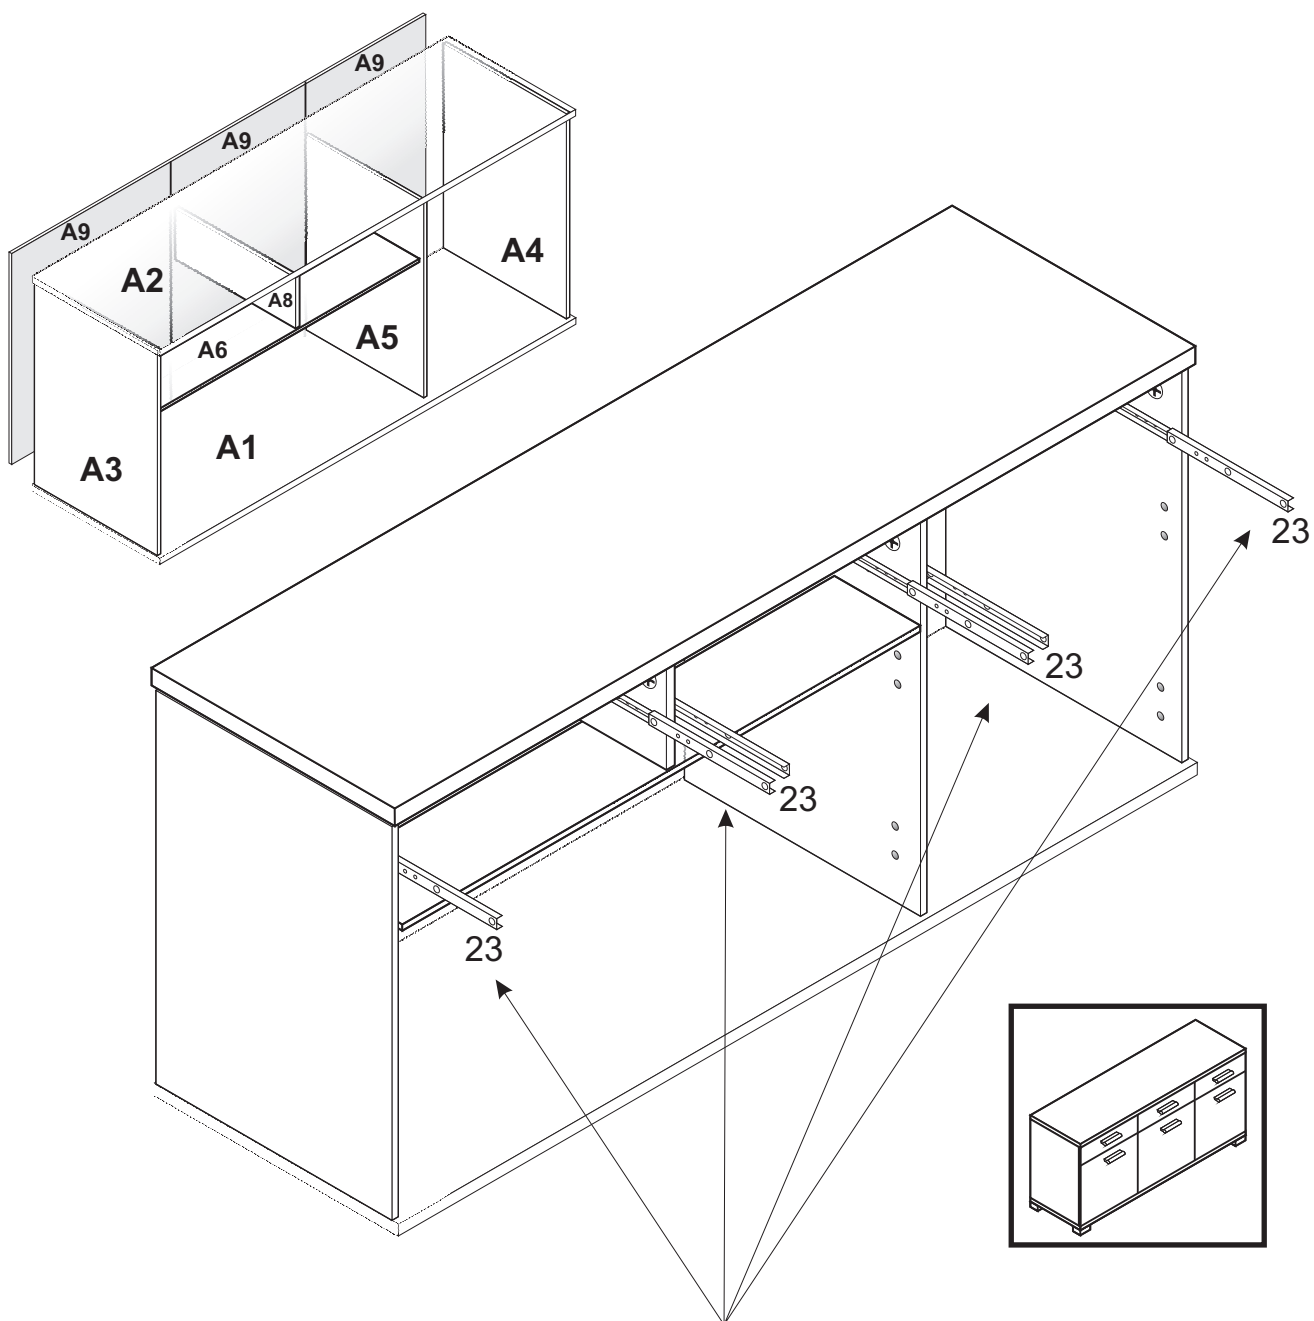

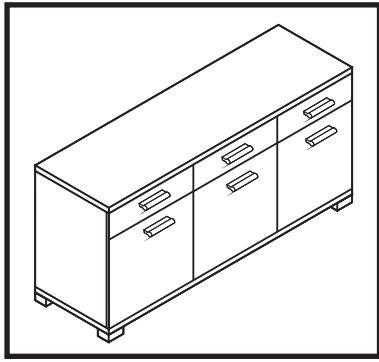

$x1 = x2$

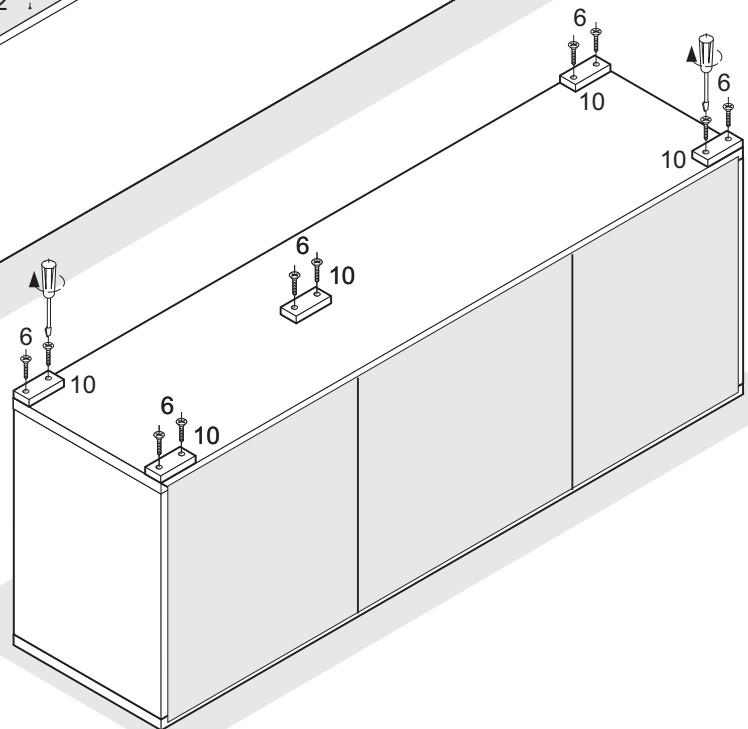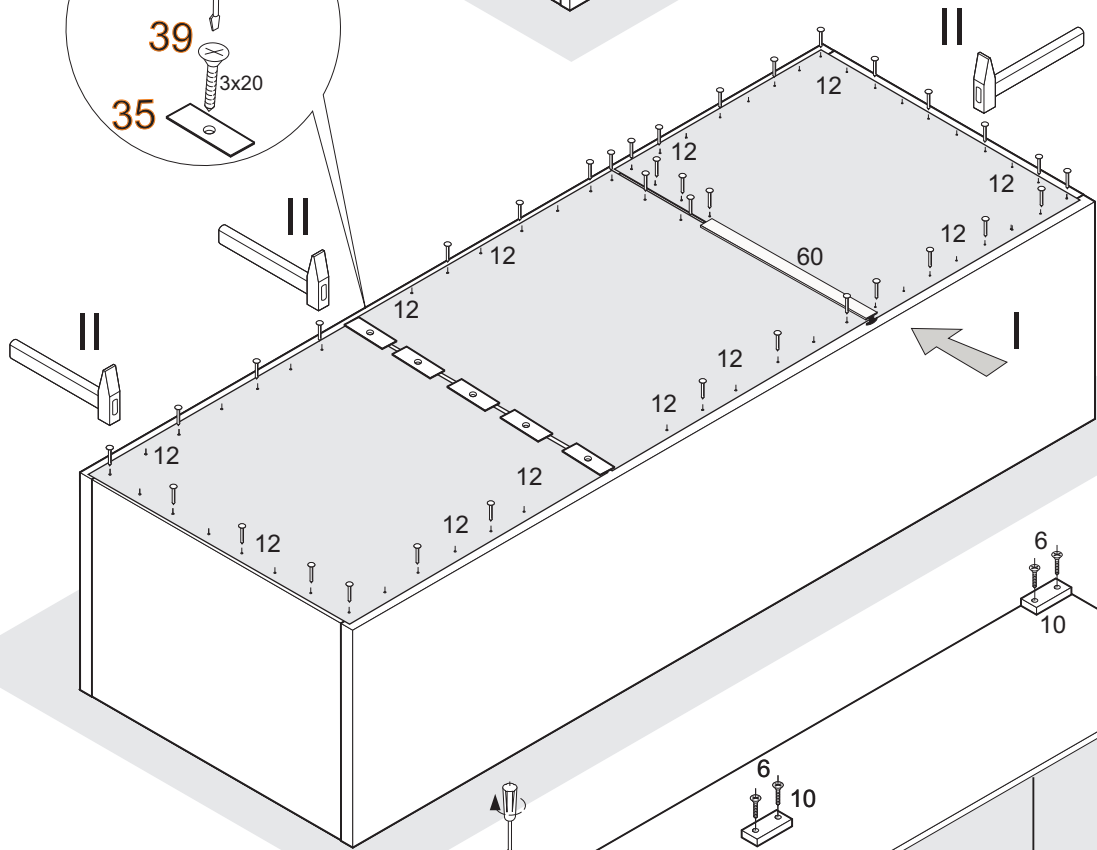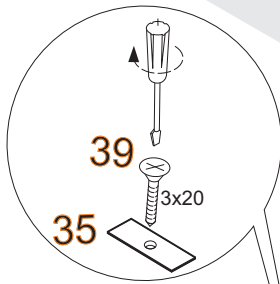
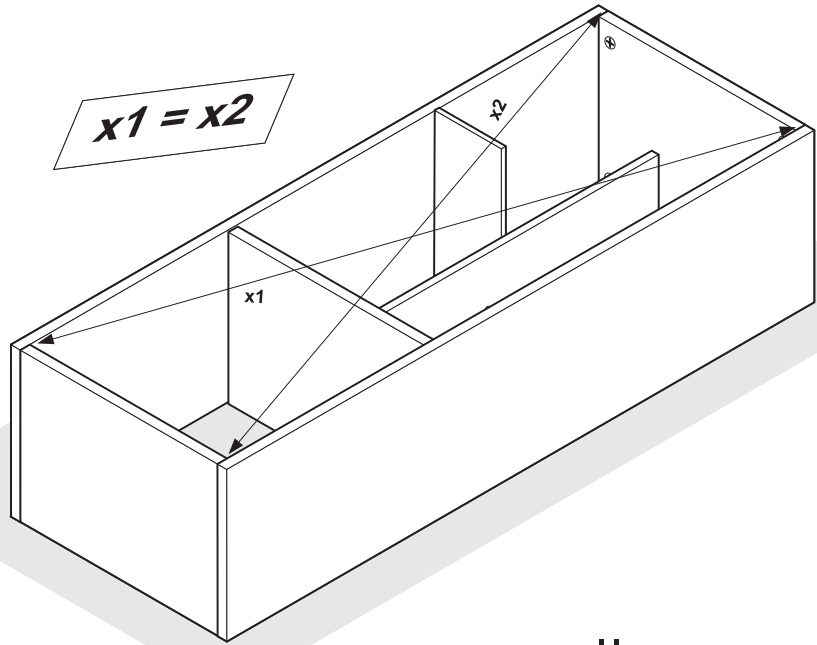







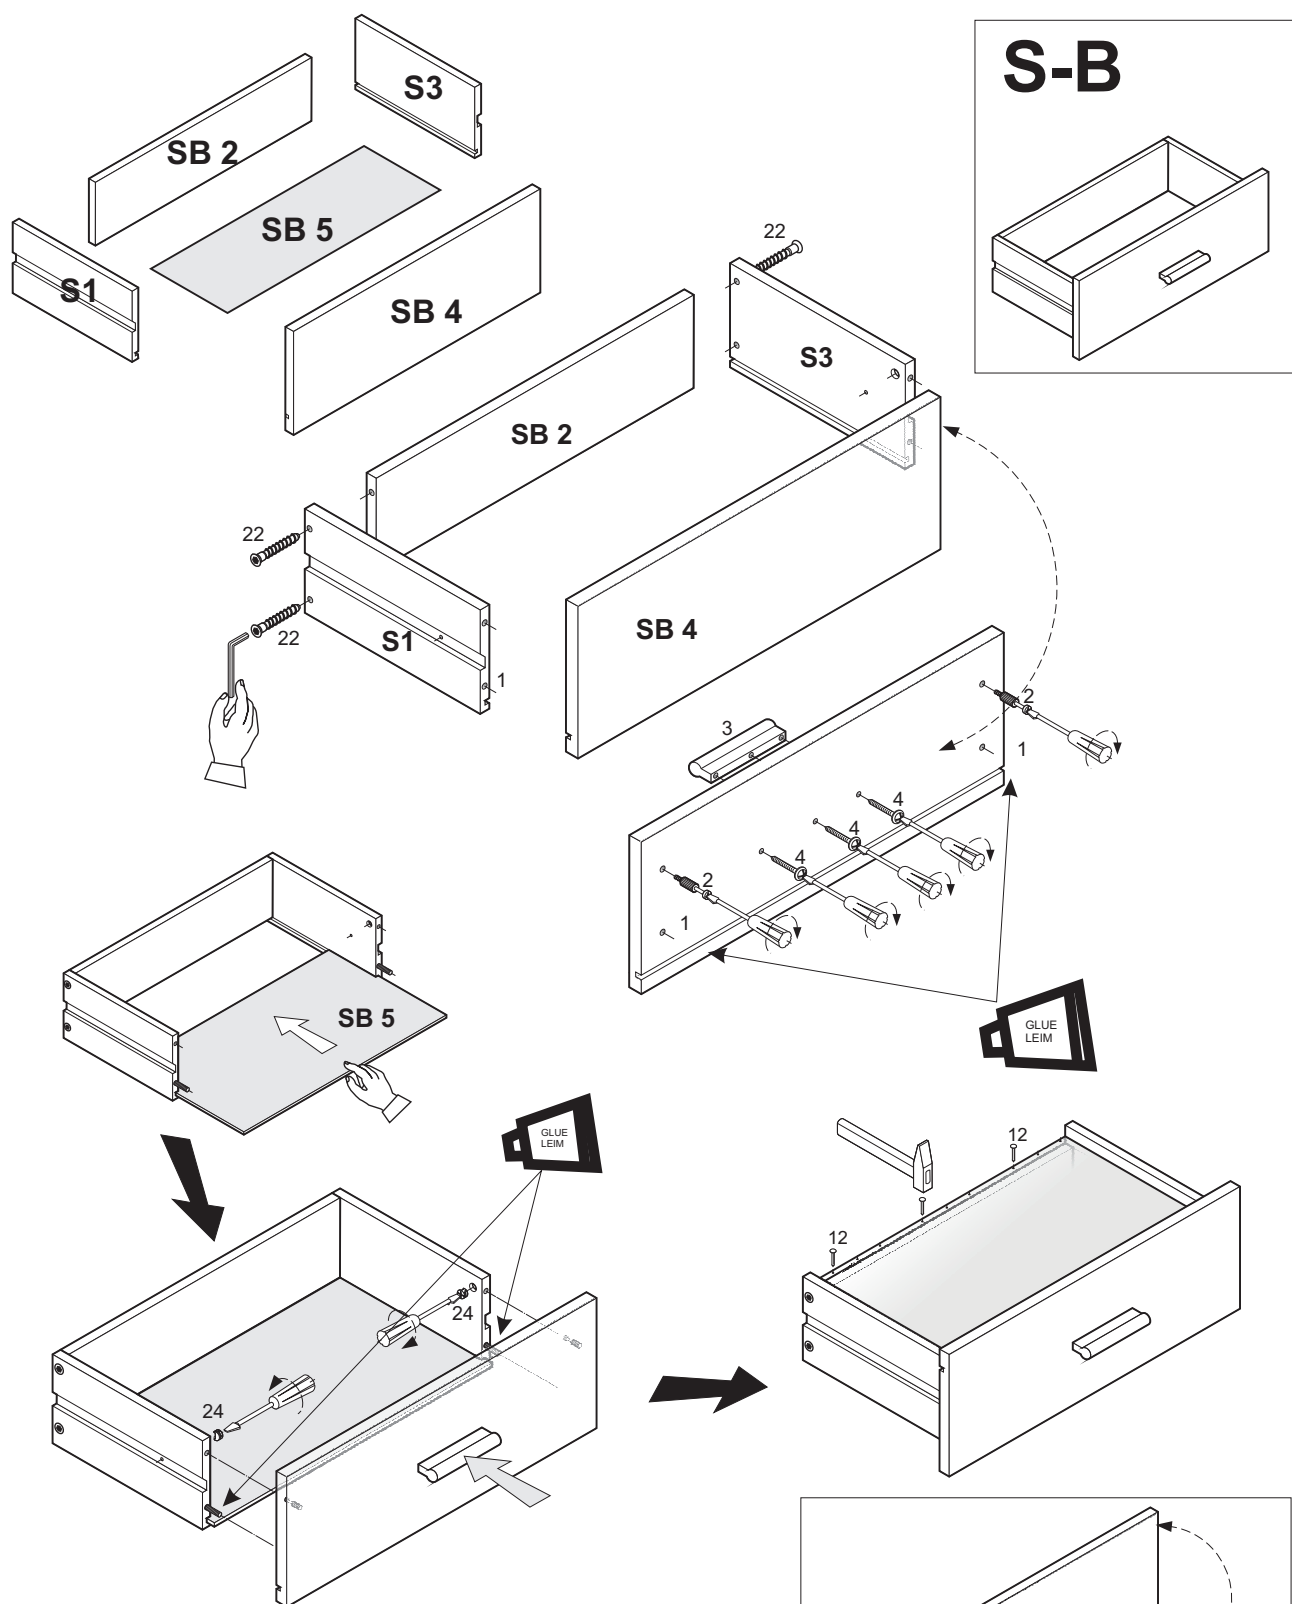




ACHTUNG / ATTENTION
Auflage / Size

SB 2 452 MM X 85 MM

SB 5 464 MM X 378 MM

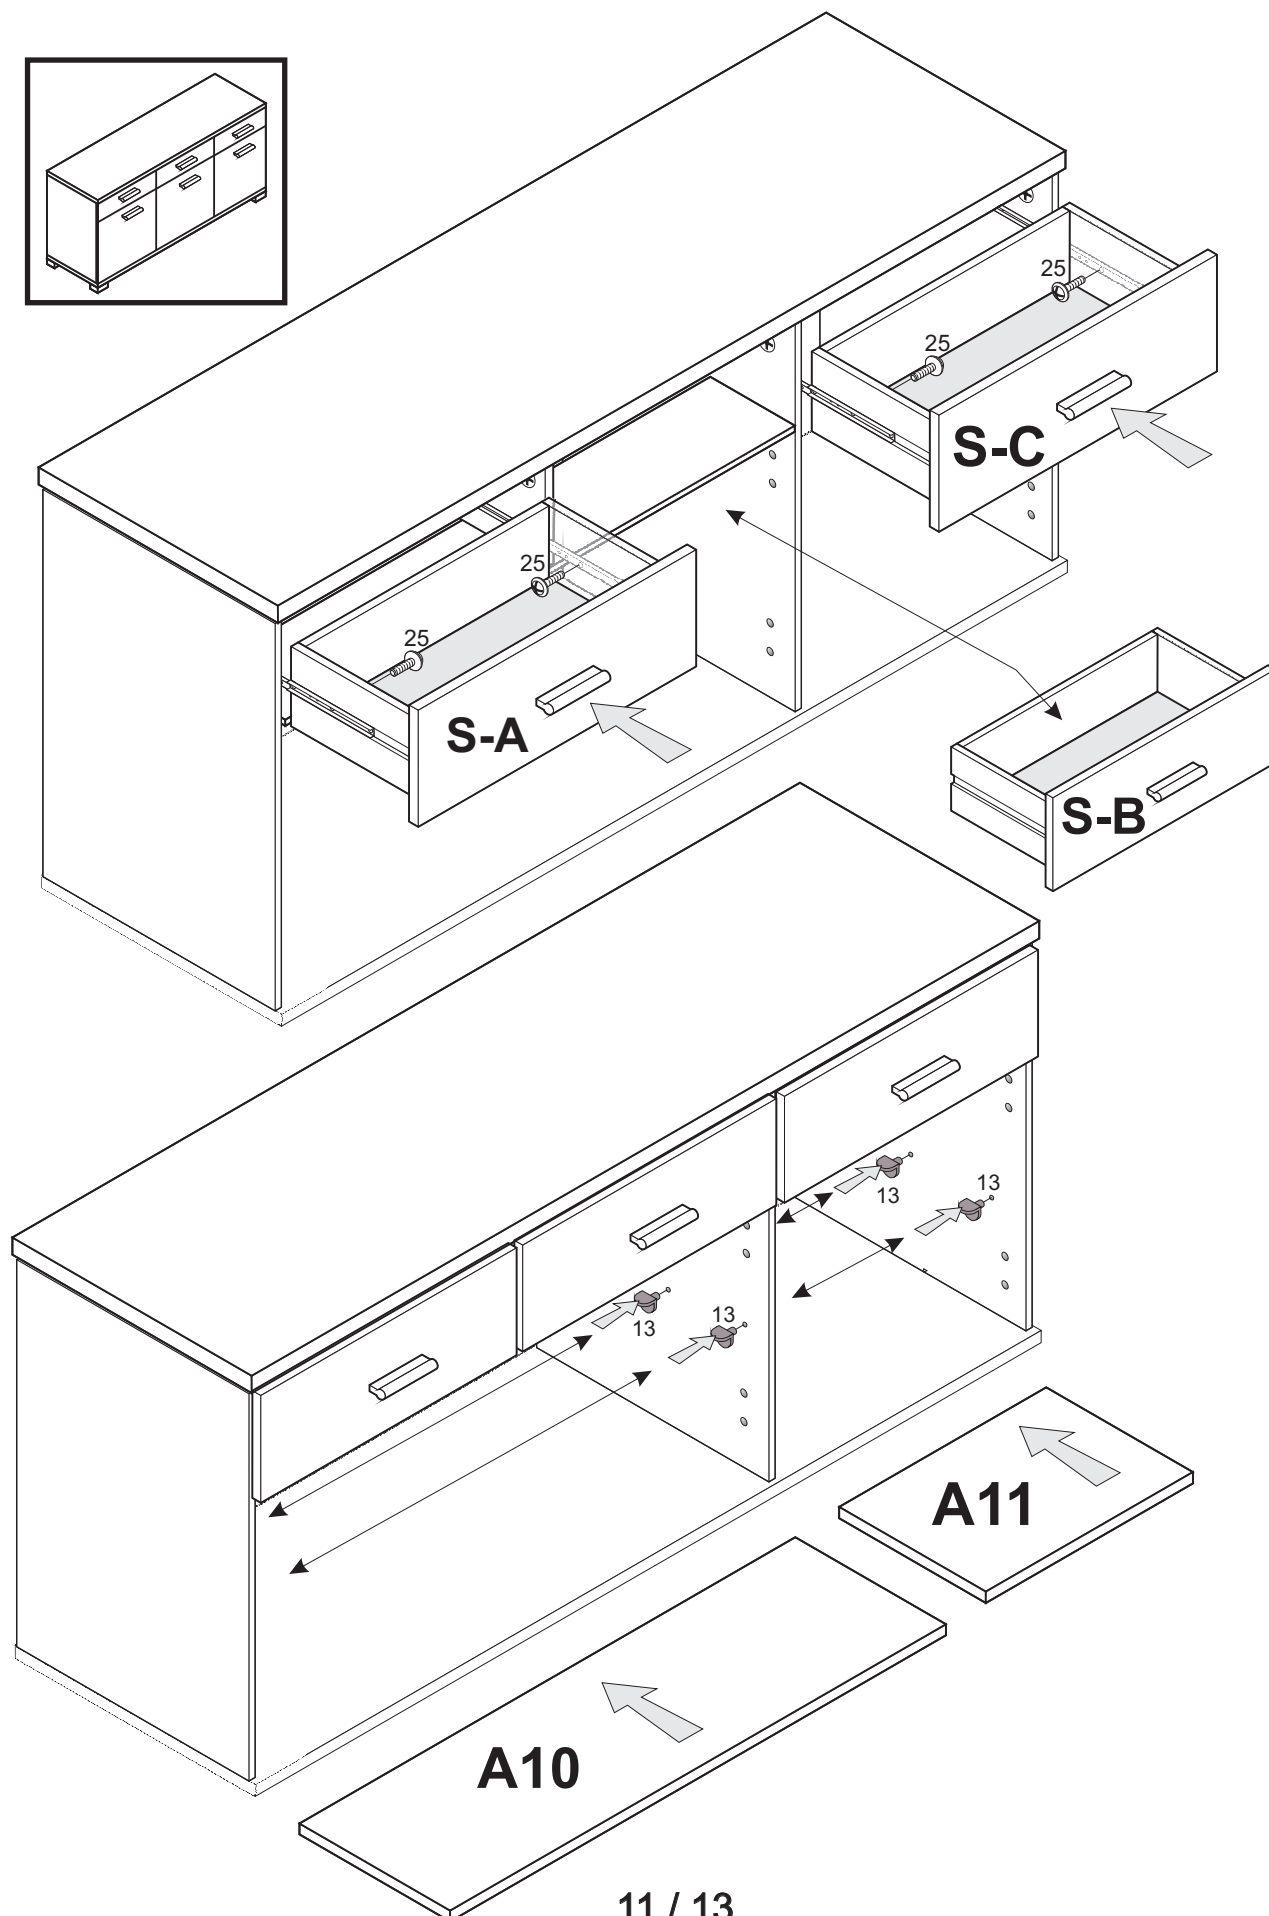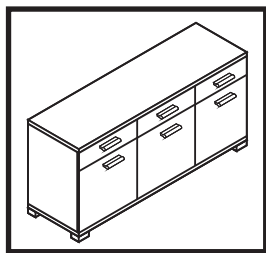

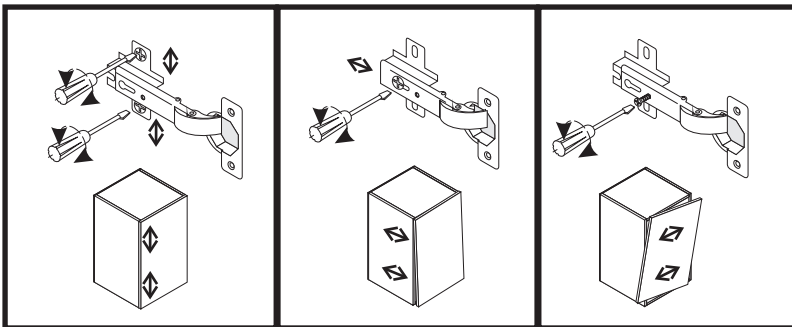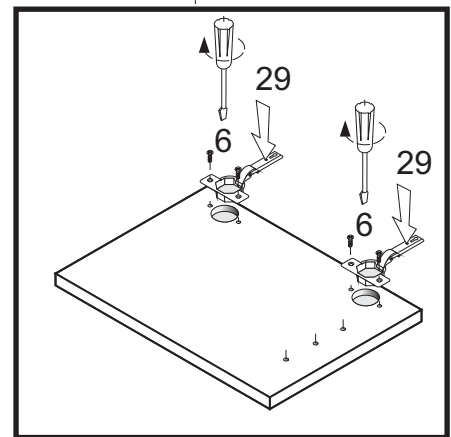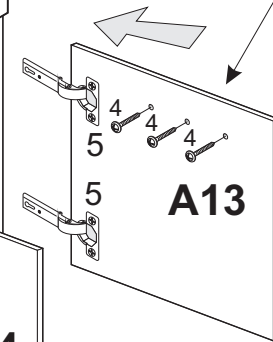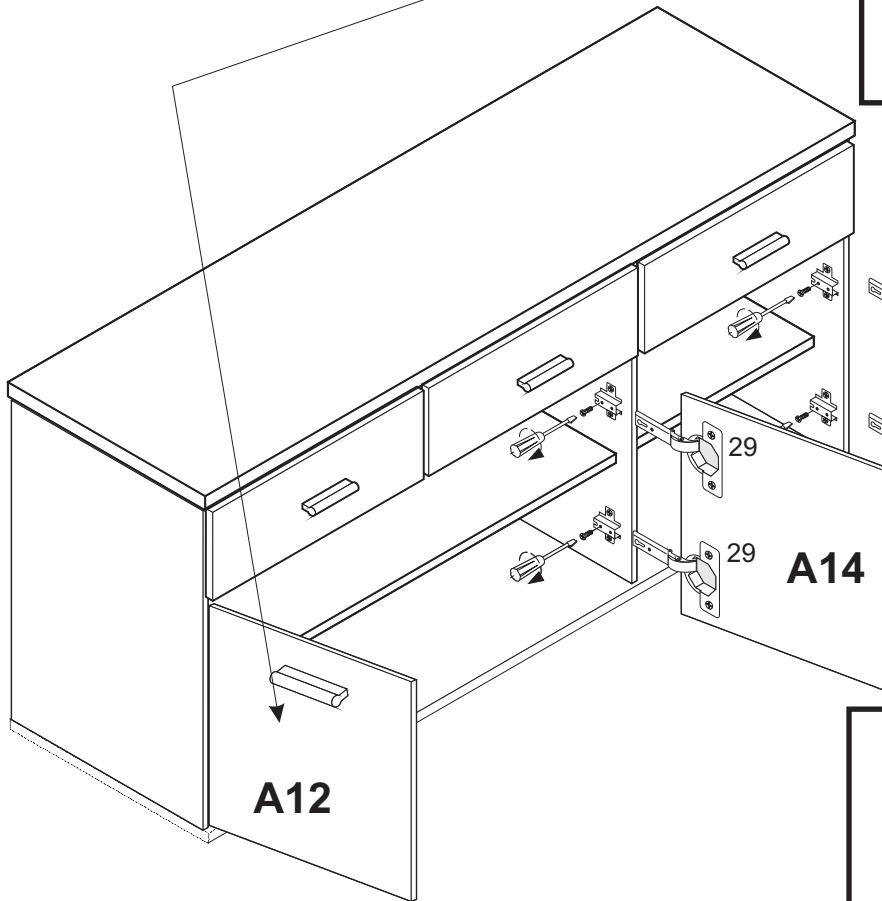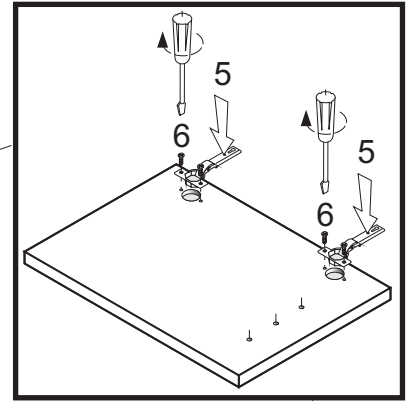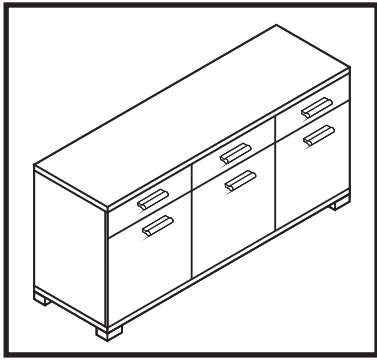

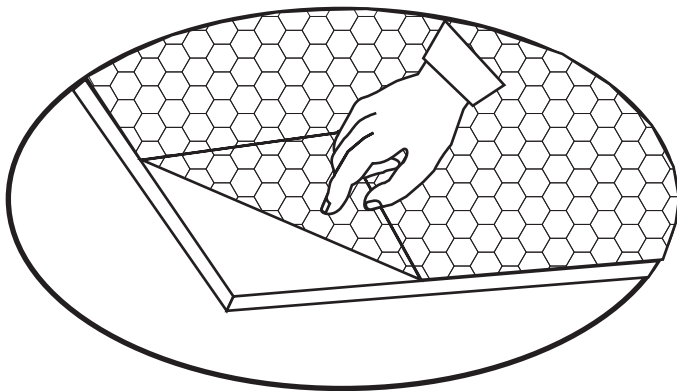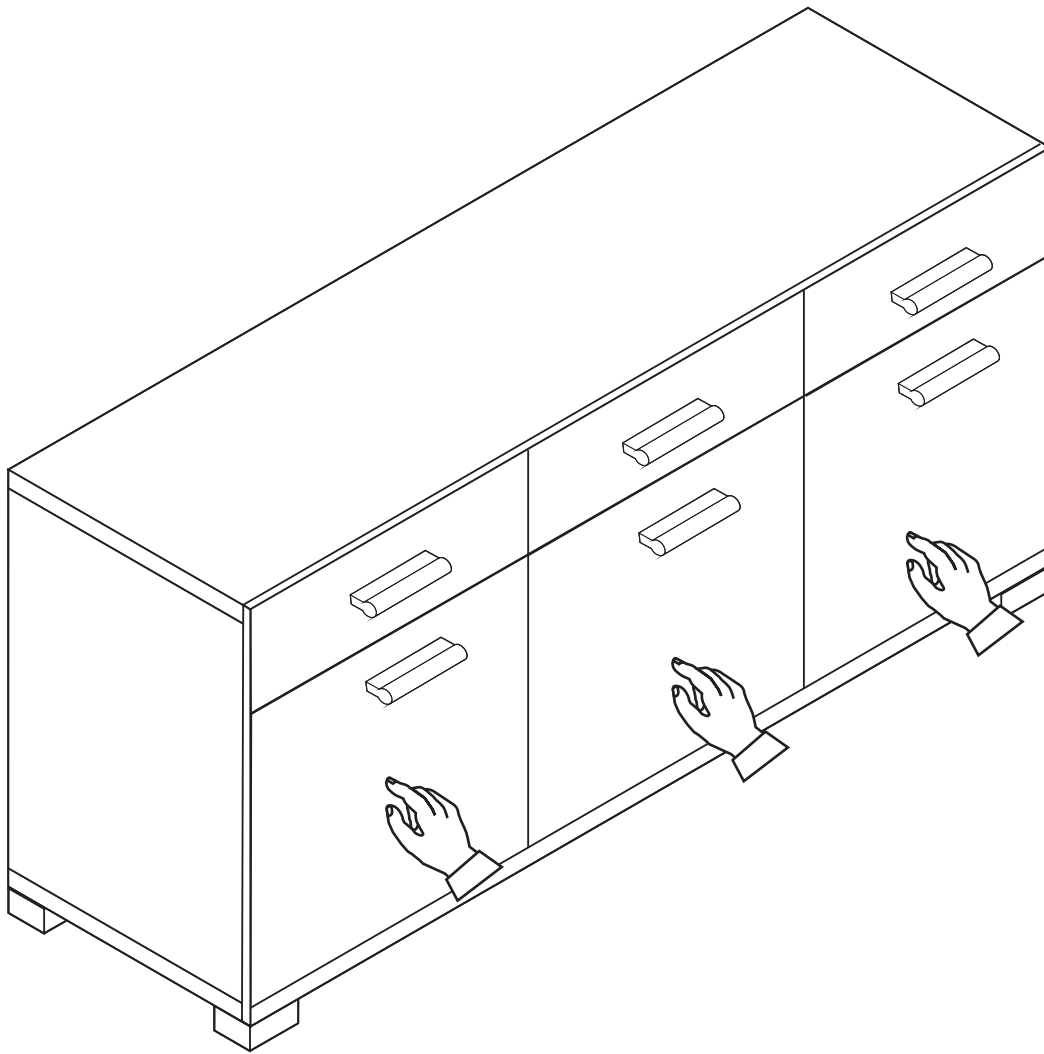

ACHTUNG!
SCHUTZFOLIE AUF
DIE FRONTEN. BITTE
VORSICHTIG ABZIEHEN
UND 14 TAGE
DIE FRONTEN
NICHT PUTZEN, DA DIE
OBERFLACHE ABHARTEN
MUSS. SONST WIRD
DIE FRONT ZERKRATZT!