

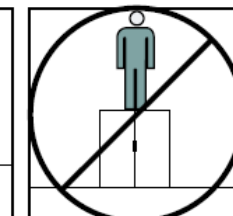
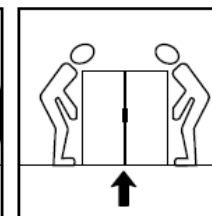
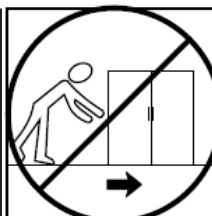
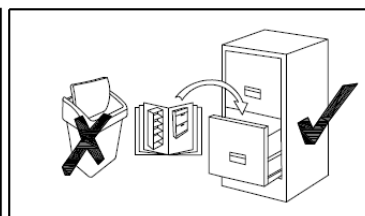
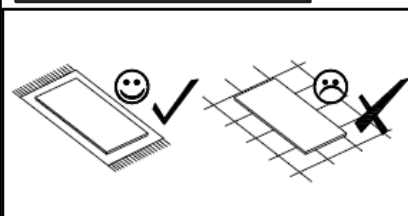
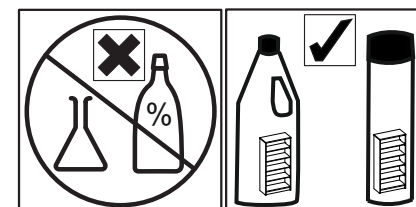
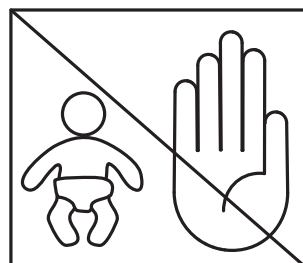
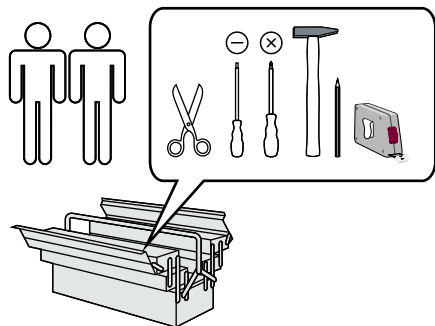
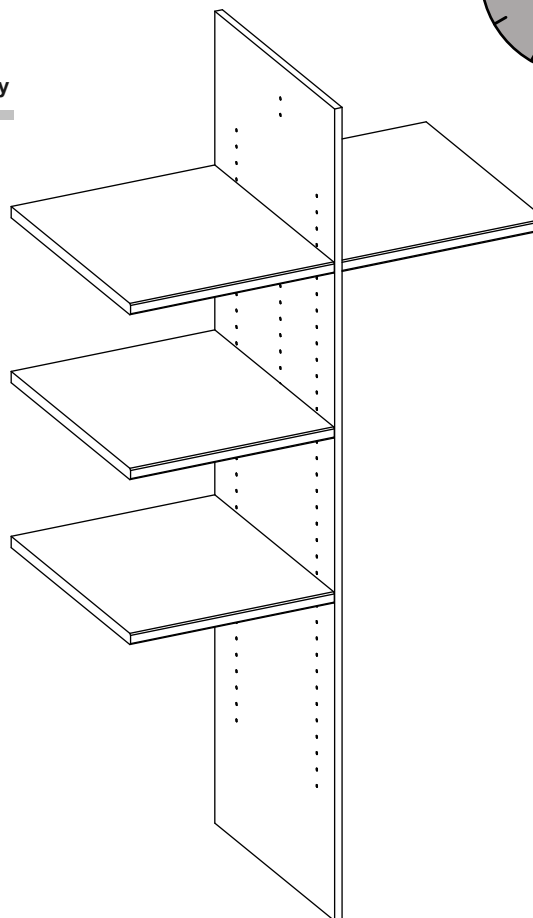


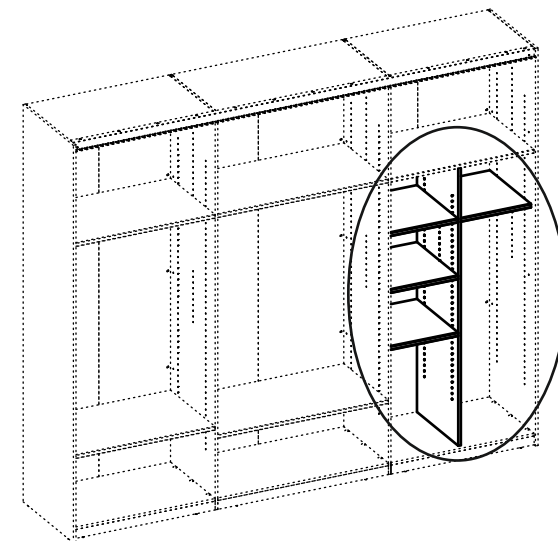


- | | |
|----------------------------------|-----------------------------|
| (GB) Assembly instructions | (PL) Instrukcja montażu |
| (DE) Montageanleitung | (CZ) Montážní návod |
| (FR) Notice de montage | (SK) Návod na montáž |
| (NL) Handleiding voor de montage | (HR) Montaže |
| (IT) Istruzioni di montaggio | (TR) Montaj talimat |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (ES) Instrucciones de montaje | (RU) Инструкция по монтажу |


szynakameble

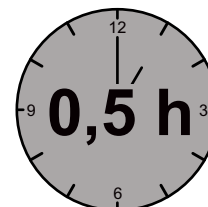

MEDIOLAN 06

	6x8		L-400 mm						3,5x13
16x	W39	1x	J01	16x	E09	2x	E06	2x	W02





NR	DIM	QTE	COLLI
1	1585x477x15	1	1/1
2	406x476x22	4	1/1

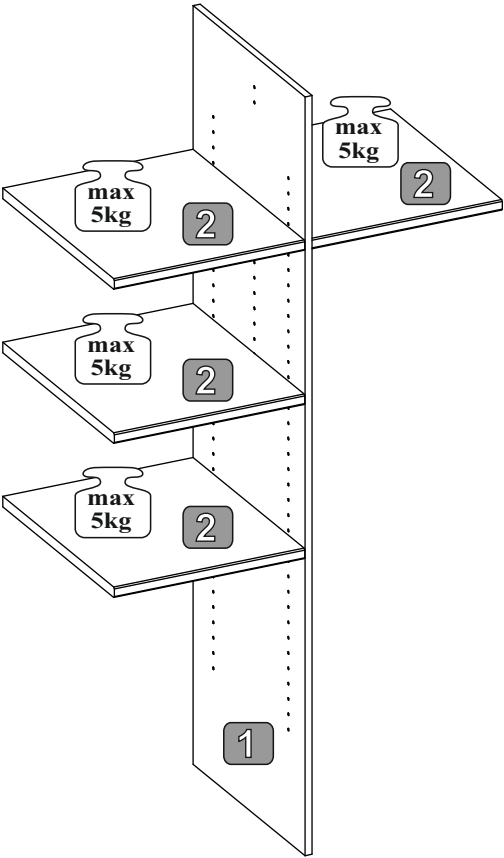


0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180 190 200





1

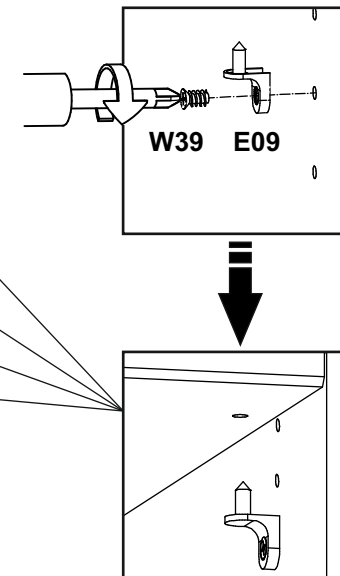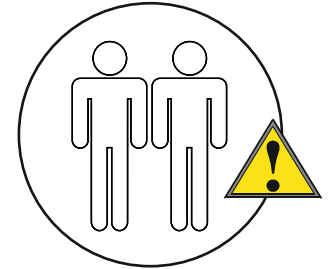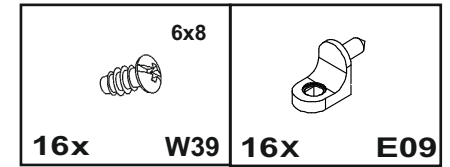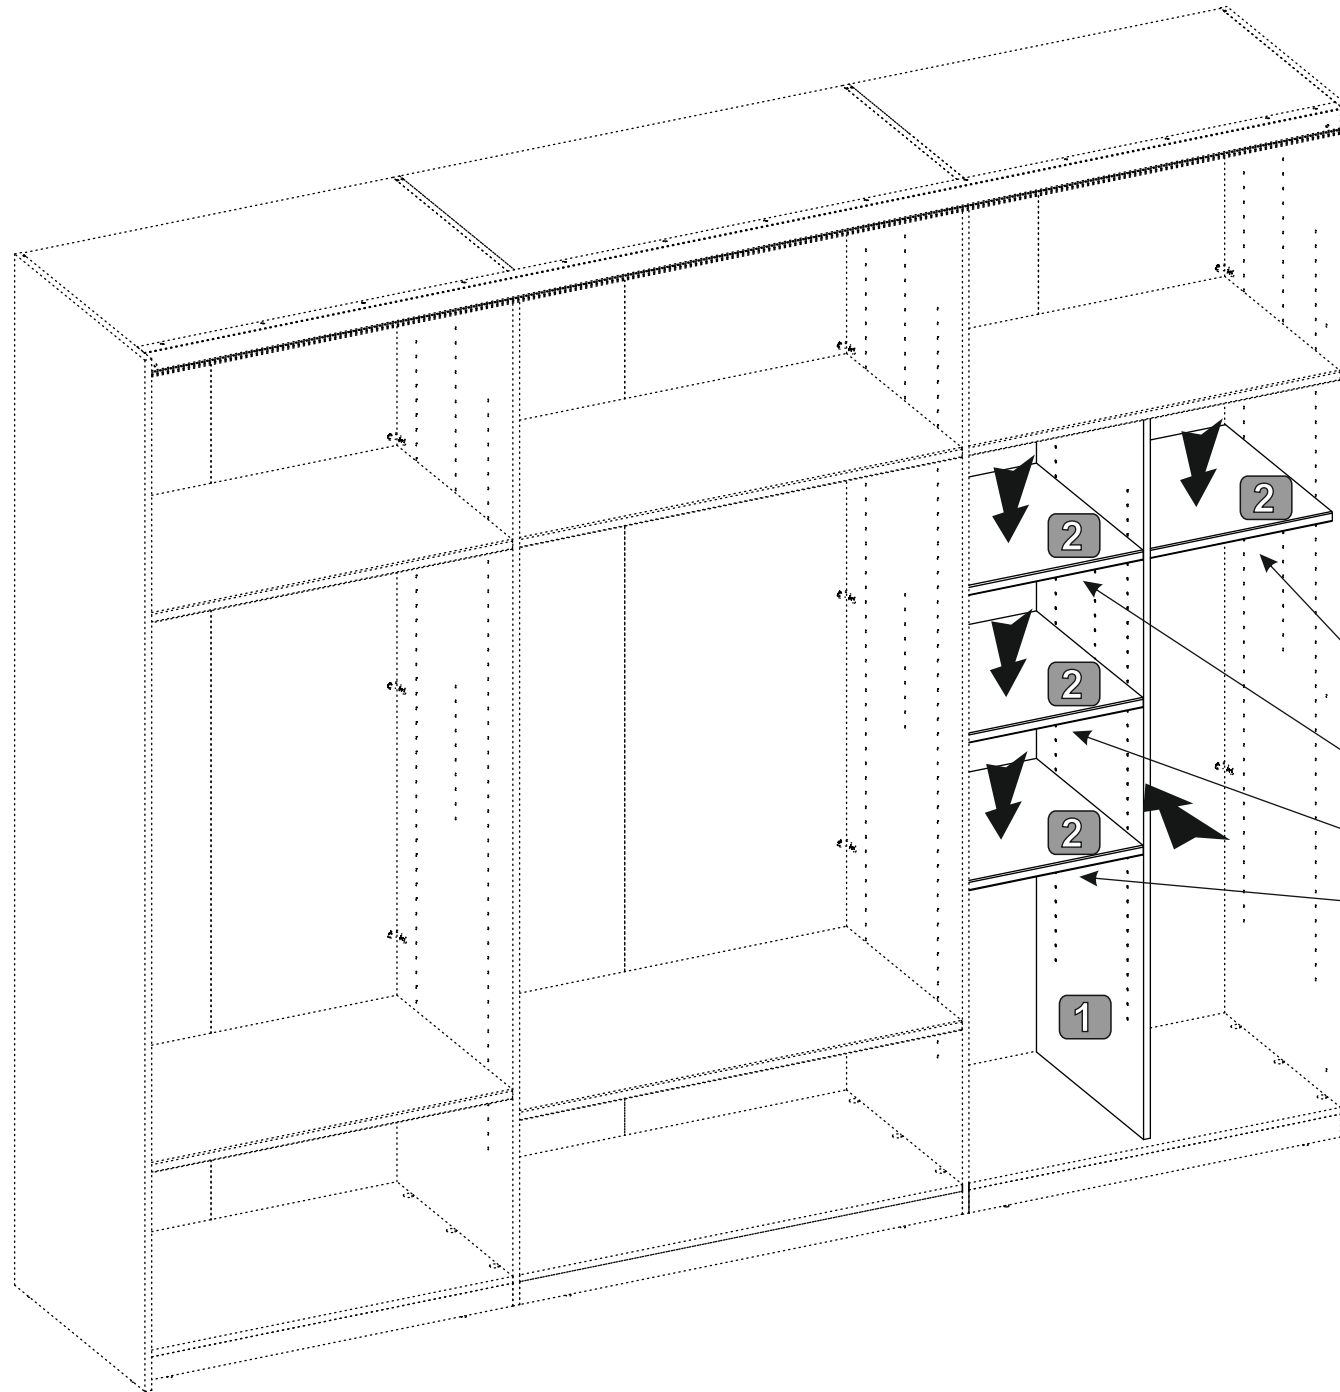

2

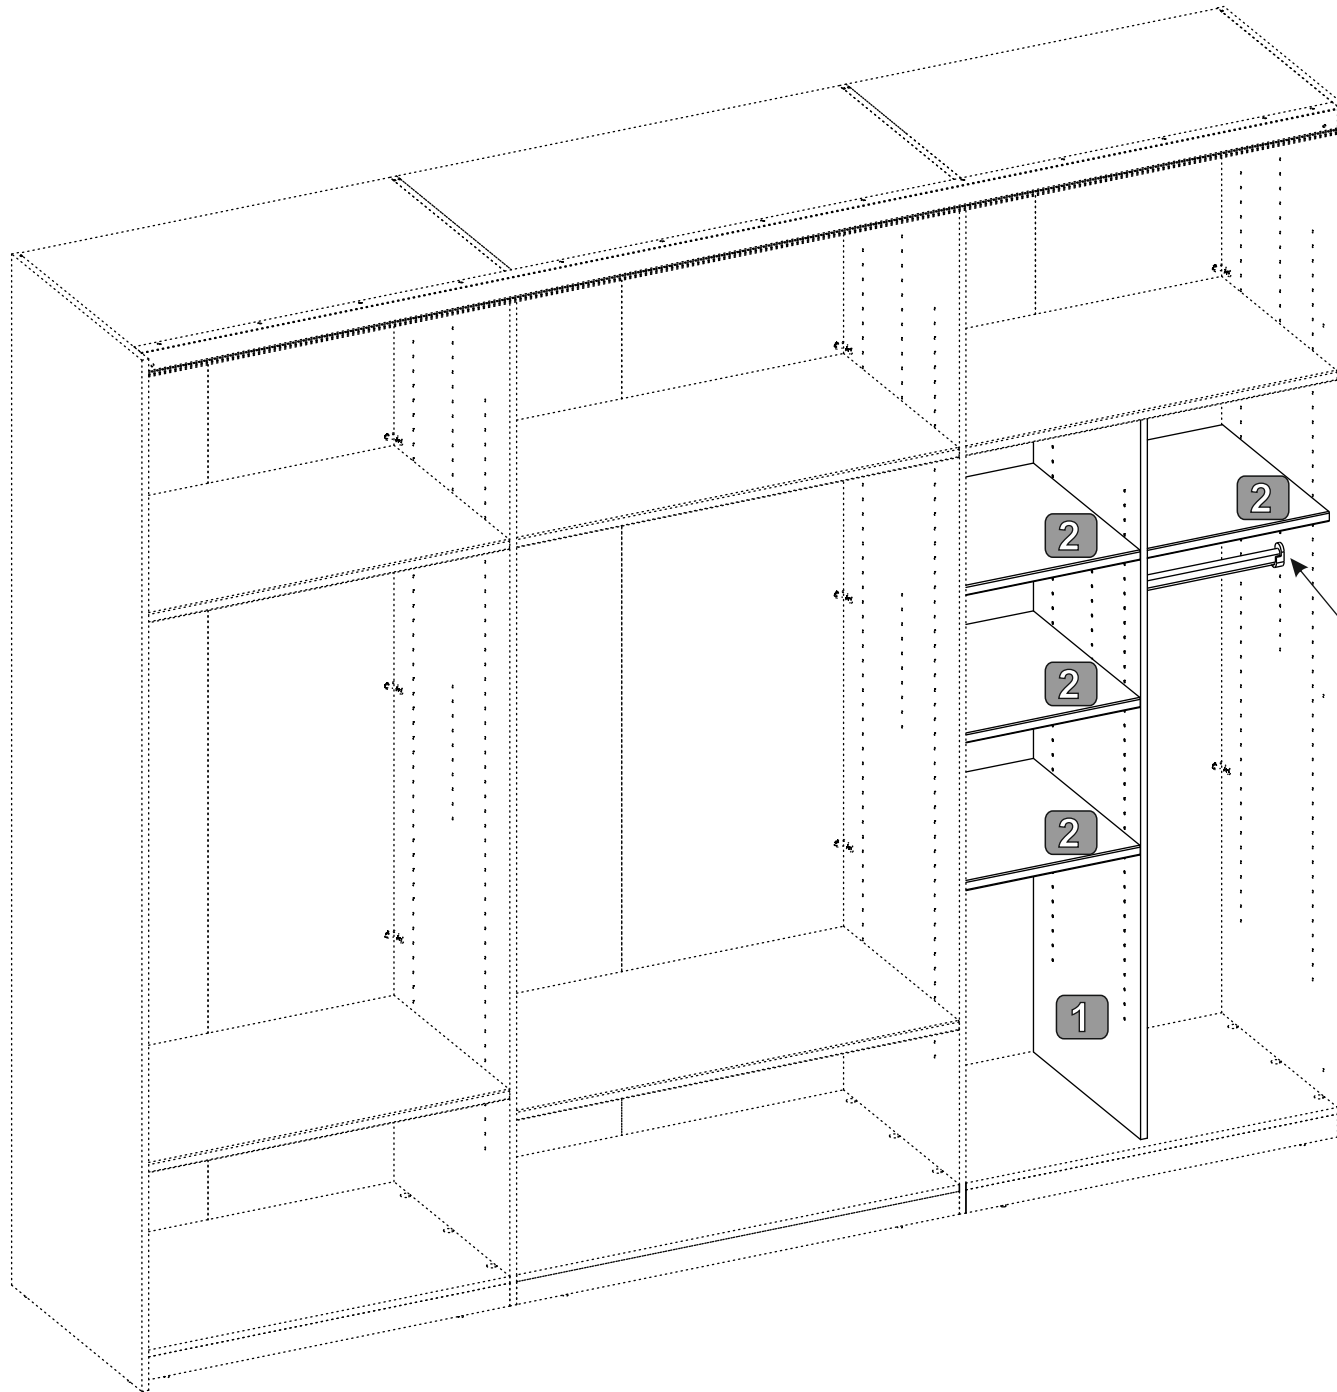

 3,5x13 2x W02	 2x E06	 L-400 mm 1x J01
---	---	---

